

CLASSROOM BEST PRACTICES

BATTERY

- A blinking yellow light when you pick up the pen to write means the battery is getting low and it is time to recharge.
- To recharge, simply plug the USB-C cable you use with your Chromebook into the stylus.
 - It should take no more than 30 minutes to reach a full charge.
 - A 30-second charge provides 30 minutes of battery life.
- A white blinking light indicates the stylus is charging.
- A solid white light indicates the stylus is fully charged.

AUTO SLEEP & WAKE UP

- When set down or still, the stylus goes into auto sleep mode.
- When picked up or moved, the stylus automatically wakes up and is ready for use.

STORAGE AND TRANSPORTATION

- Store or transport your stylus just like any pen or pencil.
- You may also keep it in the optional Logitech Pen Loop that attaches to your Chromebook.

CLEANING

Spray cleaning liquid onto cloth and wipe.

- Do not spray directly onto the stylus.
- Use water-based cleaners with a ratio of 70% isopropyl alcohol to 30% water.
- Do not use other alcohol-based cleaners or bleach.

Learn more at

logitech.com/support/EDU-Contact-Us