




Logitech® Gaming Keyboard G105

Getting started with



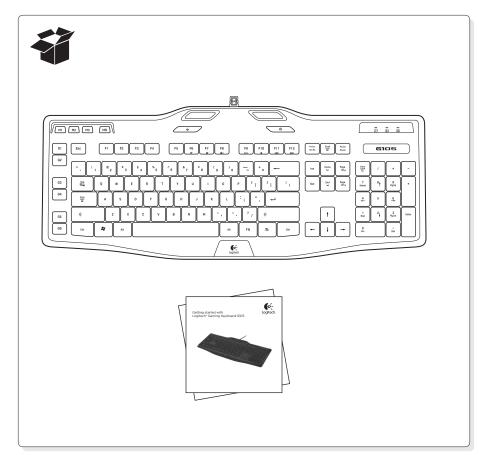

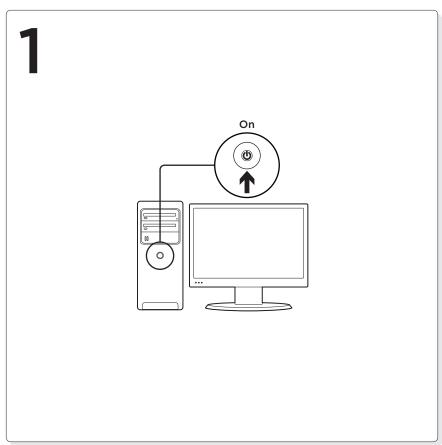

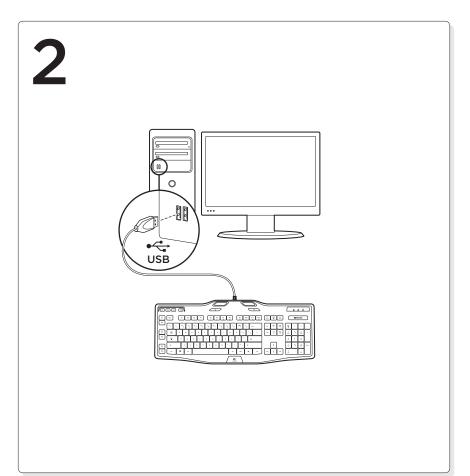

#### **English**

Customizing your keyboard

Create profiles and macros for your Gaming Keyboard G105 with the Logitech® Gaming software. Download the latest release from Logitech by doing the following:

- 1. Visit www.logitech.com/G105/support.
- 2. Choose Downloads, and then follow the on-screen prompts.

## Svenska

Customizing your keyboard

Create profiles and macros for your Gaming Keyboard G105 with the Logitech® Gaming software. Download the latest release from Logitech by doing the following:

- 1. Visit www.logitech.com/G105/support.
- 2. Choose Downloads, and then follow the on-screen prompts.



www.logitech.com/G105/support

## Dansk Customizing your keyboard

Create profiles and macros for your Gaming Keyboard G105 with the Logitech® Gaming software. Download the latest release from Logitech by doing the following:

- 1. Visit www.logitech.com/G105/support.
- 2. Choose Downloads, and then follow the on-screen prompts.

## Norsk

Customizing your keyboard

Create profiles and macros for your Gaming Keyboard G105 with the Logitech® Gaming software. Download the latest release from Logitech by doing the following:

- 1. Visit www.logitech.com/G105/support
- 2. Choose Downloads, and then follow the on-screen prompts.

### Suomi

Customizing your keyboard

Create profiles and macros for your Gaming Keyboard G105 with the Logitech® Gaming software. Download the latest release from Logitech by doing the following:

- 1. Visit www.logitech.com/G105/support.
- 2. Choose Downloads, and then follow the on-screen prompts.

# . . . . F1 F2 F3 F4 F5 F6 F7 F8 F9 F10 F11 F12 F16 Sold Total

## **English**

Product features

- 1. G-keys—Programmable keys that you can customize to create a profile for individual games or applications.\* A profile defines what a G-key does when you press it.
- 2. M-keys—Each M-key extends the capability of the G-keys, allowing you to assign up to 3 different key configurations to each profile for your G-keys. This allows you to react to different game scenarios in a single profile by switching between the M1, M2 and M3 keys.\*
- 3. MR-key—Use this key to record quick macros.\* For instructions, see Recording a quick macro in this guide.
- 4. Game/desktop mode switch—Disables/enables the Windows/Context Menu keys so you won't activate these Windows features by accident during a game.
- **5.** Fn + F6 = Mute
- 6. Fn + F7 = Volume down
- 7. Fn + F8 = Volume up
- 8. Fn + F9 = Play/Pause9. Fn + F10 = Stop
- 10. Fn + F11 = Previous/Rewind
- 11. Fn + F12 = Next/Fast forward
- 12. Backlight key—Controls the backlight intensity (off, 50%, or 100%)

## Recording a quick macro\*

Your keyboard has six programmable G-keys that handle up to three macros each, giving you up to 18 unique functions per game.

- 1. Press the MR key.
- 2. Press a G-key.
- 3. Type the keys you would like to record.
- 4. Press the MR key.

For more information about programing the G-keys and other keyboard features, refer to the Logitech Gaming Software Help.

\*Requires the download and installation of the Logitech

## Svenska

Product features

- 1. G-keys—Programmable keys that you can customize to create a profile for individual games or applications.\* A profile defines what a G-key does when you press it.
- 2. M-keys—Each M-key extends the capability of the G-keys, allowing you to assign up to 3 different key configurations to each profile for your G-keys. This allows you to react to different game scenarios in a single profile by switching between the M1, M2 and M3 keys.\*
- 3. MR-key—Use this key to record quick macros.\* For instructions, see Recording a quick macro in this guide.
- 4. Game/desktop mode switch—Disables/enables the Windows/Context Menu keys so you won't activate these Windows features by accident during a game.
- **5.** Fn + F6 = Mute
- 6. Fn + F7 = Volume down
- **7.** Fn + F8 = Volume up
- 8. Fn + F9 = Play/Pause
- 9. Fn + F10 = Stop
- 10. Fn + F11 = Previous/Rewind 11. Fn + F12 = Next/Fast forward
- 12. Backlight key—Controls the backlight intensity (off, 50%, or 100%)


## Recording a quick macro\*

Your keyboard has six programmable G-keys that handle up to three macros each, giving you up to 18 unique functions per game.

- 1. Press the MR key.
- 2. Press a G-key.
- 3. Type the keys you would like to record.
- 4. Press the MR key.

For more information about programing the G-keys and other keyboard features, refer to the Logitech Gaming Software Help.

\*Requires the download and installation of the Logitech

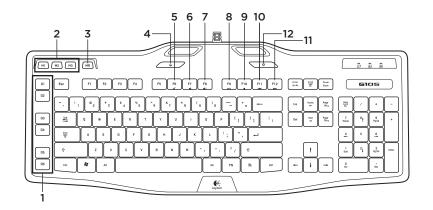

## Dansk

#### Product features

- G-keys—Programmable keys that you can customize to create a profile for individual games or applications.\* A profile defines what a G-key does when you press it.
- 2. M-keys—Each M-key extends the capability of the G-keys, allowing you to assign up to 3 different key configurations to each profile for your G-keys. This allows you to react to different game scenarios in a single profile by switching between the M1, M2 and M3 keys.\*
- 3. MR-key—Use this key to record quick macros.\* For instructions, see Recording a quick macro in this guide.
- **4.** Game/desktop mode switch—Disables/enables the Windows/Context Menu keys so you won't activate these Windows features by accident during a game.
- **5.** Fn + F6 = Mute
- 6. Fn + F7 = Volume down
- **7.** Fn + F8 = Volume up
- 8. Fn + F9 = Play/Pause
- 9. Fn + F10 = Stop
- 10. Fn + F11 = Previous/Rewind
- 11. Fn + F12 = Next/Fast forward
- 12. Backlight key—Controls the backlight intensity (off, 50%, or 100%)

#### Recording a quick macro\*

Your keyboard has six programmable G-keys that handle up to three macros each, giving you up to 18 unique functions not game.

- Press the MR key.
- Press a G-key.
- 3. Type the keys you would like to record.
- 4. Press the MR key.

For more information about programing the G-keys and other keyboard features, refer to the Logitech Gaming Software Help.

\*Requires the download and installation of the Logitech Gaming software.

## Norsk

#### Product features

- G-keys—Programmable keys that you can customize to create a profile for individual games or applications.\* A profile defines what a G-key does when you press it.
- 2. M-keys—Each M-key extends the capability of the G-keys, allowing you to assign up to 3 different key configurations to each profile for your G-keys. This allows you to react to different game scenarios in a single profile by switching between the M1, M2 and M3 keys.\*
- ${\bf 3.}\,$  MR-key—Use this key to record quick macros.\* For instructions, see Recording a quick macro in this guide.
- Game/desktop mode switch—Disables/enables the Windows/Context Menu keys so you won't activate these Windows features by accident during a game.
- 5 Fn + F6 = Mute
- 6. Fn + F7 = Volume down
- **7.** Fn + F8 = Volume up
- 8. Fn + F9 = Play/Pause
- **9.** Fn + F10 = Stop
- 10. Fn + F11 = Previous/Rewind
- 11. Fn + F12 = Next/Fast forward
- 12. Backlight key—Controls the backlight intensity (off, 50%, or 100%)

#### Recording a quick macro\*

Your keyboard has six programmable G-keys that handle up to three macros each, giving you up to 18 unique functions per game.

- 1. Press the MR key.
- 2. Press a G-key.
- 3. Type the keys you would like to record.
- 4. Press the MR key.

For more information about programing the G-keys and other keyboard features, refer to the Logitech Gaming Software Help.

\*Requires the download and installation of the Logitech Gaming software.

#### Suomi

#### Product features

- G-keys—Programmable keys that you can customize to create a profile for individual games or applications.\* A profile defines what a G-key does when you press it.
- 2. M-keys—Each M-key extends the capability of the G-keys, allowing you to assign up to 3 different key configurations to each profile for your G-keys. This allows you to react to different game scenarios in a single profile by switching between the M1, M2 and M3 keys.\*
- **3.** MR-key—Use this key to record quick macros.\* For instructions, see Recording a quick macro in this guide.
- **4.** Game/desktop mode switch—Disables/enables the Windows/Context Menu keys so you won't activate these Windows features by accident during a game.
- 5 Fn + F6 = Mute
- 6. Fn + F7 = Volume down
- 7. Fn + F8 = Volume up
- 8. Fn + F9 = Play/Pause
- 9. Fn + F10 = Stop
- 10. Fn + F11 = Previous/Rewind
- 11. Fn + F12 = Next/Fast forward
- 12. Backlight key—Controls the backlight intensity (off, 50%, or 100%)

## Recording a quick macro\*

Your keyboard has six programmable G-keys that handle up to three macros each, giving you up to 18 unique functions per game.

- 1. Press the MR key.
- 2. Press a G-key.
- 3. Type the keys you would like to record.
- 4. Press the MR key.

For more information about programing the G-keys and other keyboard features, refer to the Logitech Gaming Software Help.

\*Requires the download and installation of the Logitech Gaming software.



www.logitech.com

## **Q**aitech

## www.logitech.com/support



België/Belgique	Dutch: +32-(0)2 200 64 44; French: +32-(0)2 200 64 40
Česká Republika	+420 239 000 335
Danmark	+45-38 32 31 20
Deutschland	+49-(0)69-51 709 427
España	+34-91-275 45 88
France	+33-(0)1-57 32 32 71
Ireland	+353-(0)1 524 50 80
Italia	+39-02-91 48 30 31
Magyarország	+36 (1) 777-4853
Nederland	+31-(0)-20-200 84 33
Norge	+47-(0)24 159 579
Österreich	+43-(0)1 206 091 026

Polska	00800 441 17 19
Portugal	+351-21-415 90 16
Россия	+7(495) 641 34 60
Schweiz/Suisse Svizzera	D +41-(0)22 761 40 12 F +41-(0)22 761 40 16 I +41-(0)22 761 40 20 E +41-(0)22 761 40 25
South Africa	0800 981 089
Suomi	+358-(0)9 725 191 08
Sverige	+46-(0)8-501 632 83
Türkiye	00800 44 882 5862
United Arab Emirates	8000 441-4294
United Kingdom	+44-(0)203-024-8159

European, Mid. East., & African Hq. Morges, Switzerland	English: +41-(0)22 761 40 25 Fax: +41-(0)21 863 54 02
Eastern Europe	English: 41-(0)22 761 40 25
United States	+1 646-454-3200
Argentina	+0800 555 3284
Brasil	+0800 891 4173
Canada	+1-866-934-5644
Chile	+1230 020 5484
Latin America	+1 800-578-9619
Mexico	+001 800 578 9619

© 2011 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. Microsoft, Windows Vista, Windows, and the Windows logo are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.