 
 
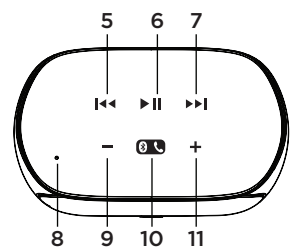 
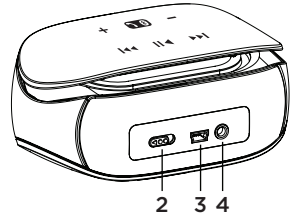 
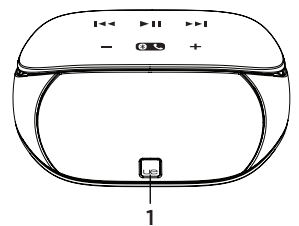 


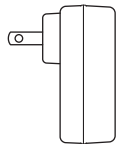

UE™ Mini Boombox

Getting started with
Logitech UE™ Mini Boombox
Mobile Bluetooth speaker and speakerphone

快速入门
罗技UE™便携无线音箱
无线蓝牙音箱 + 内置麦克风 + 触摸屏

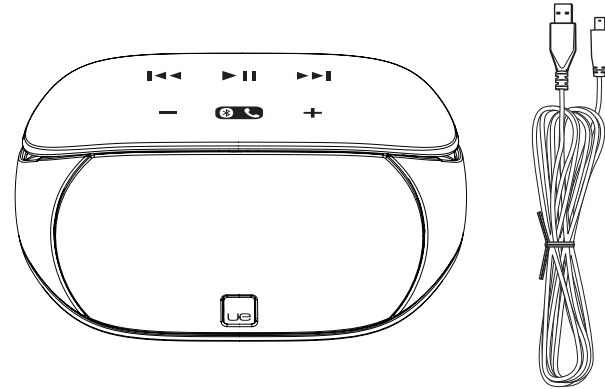

English

 
 
Features

1. Status indicator (Power On/Off, Battery, and Pairing)
2. Power On/Off
3. Mini-USB Charging port
4. Auxiliary-in jack
5. Previous track
6. Play/Pause or Microphone mute/unmute (in-call)
7. Next track
8. Microphone
9. Volume down
10. Pair or phone button
11. Volume up

简体中文

功能

1. 状态指示灯 (电源开/关、电池电量和配对)
2. 电源开/关
3. 迷你 USB 充电端口
4. 辅助输入插孔
5. 上一曲目
6. 播放/暂停或麦克风静音/取消静音 (在通话中)
7. 下一曲目
8. 麦克风
9. 调低音量
10. 配对或通话按钮
11. 调高音量

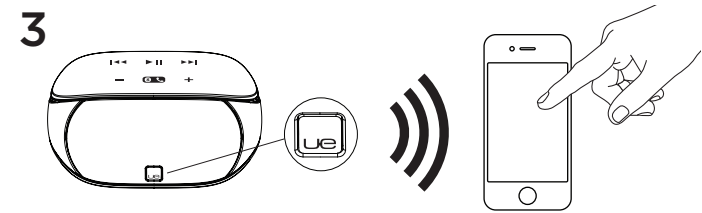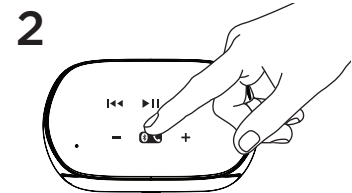

English

Setup

To play audio from a Bluetooth device, you need to pair the device with the speaker. You can pair up to eight devices.

1. On your Bluetooth device, turn on Bluetooth and scan for devices in its Bluetooth menu.
2. Turn on the speaker. When powering up for the first time, the speaker is discoverable for 2 minutes and is ready for pairing. The Status indicator blinks red and blue.
3. When "Mini Boombox" appears on the device list of your Bluetooth device, select the Mini Boombox. (If a pass code is requested, enter 0000.) The Bluetooth status light turns solid blue after pairing is established. The speaker is ready to play music.

Note: If pairing times out (the Bluetooth status light stops blinking red and blue), press and hold the Pair or Phone button until the Bluetooth status light blinks red and blue again. Repeat step 3.

Pairing additional Bluetooth devices

Press and hold the Pair or Phone button until the Bluetooth status light blinks red and blue. Repeat steps 1 and 3 above.

简体中文

设置

 
要播放蓝牙设备上的音频，需要将设备同音箱配对。最多可与八个设备配对。

1. 开启蓝牙设备上的蓝牙功能，然后在蓝牙菜单中搜索设备。
2. 打开音箱电源开关。首次启动后，在 2 分钟内可搜索到音箱，此时可与其进行配对。状态指示灯在红蓝之间闪烁。
3. 当“Mini Boombox”出现在蓝牙设备上的设备列表中时，选中 Mini Boombox。 (如果要求通行码，请输入 0000。) 配对建立后蓝牙状态指示灯变为稳定蓝灯。此时音箱可播放音乐。

注意：如果配对超时（蓝牙状态指示灯停止在红蓝之间闪烁），请按住配对或通话按钮直至蓝牙状态指示灯再次在红蓝之间闪烁。重复步骤 3。

配对其他蓝牙设备

按住配对或通话按钮直至蓝牙状态指示灯在红蓝之间闪烁。重复上面的步骤 1 和步骤 3。

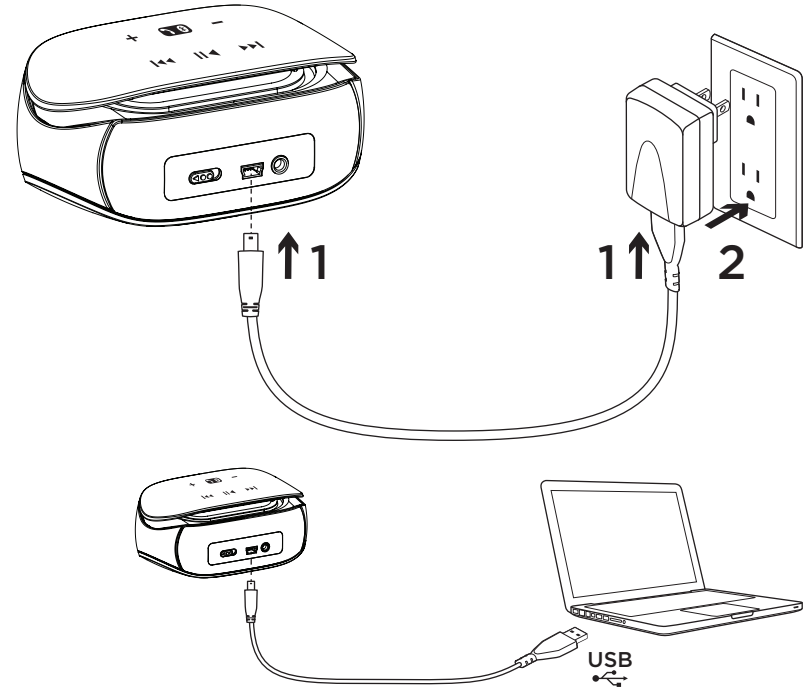

English

Charging

About once a month, fully charge the speaker (about 4 hours).

1. Plug the charging cable into the speaker's charging port and power adapter.

2. Plug the adapter into an AC outlet. Note: You can also use a computer (with the power on) for charging. Plug the charging cable into the USB port.

Status indicator:

Blinking blue = Charging

Solid blue = Fully charged

Solid red = Low battery

Blinking red = Very low battery

Battery saving

The speaker enters power saving mode if no audio is played for 30 minutes. Slide the power switch off and then on to wake the speaker.

Troubleshooting

The speaker doesn't work or it won't pair

- Try moving your device closer.
- Is the speaker turned on and charged?
- Turn the speaker off and then on to wake it.

- Is Bluetooth enabled on your device or computer?

- Try repeating the setup procedure in this guide or pair with a different Bluetooth device.

- The speaker plays music from one device at a time. Unpair the device not being used. (Refer to your device documentation for help.) Pair a new device using the setup procedure.

- If pairing with a computer, specify the Logitech Mini Boombox as the audio out device on the computer.

Additional Help

For online help, go to www.logitech.com/support/miniboombbox

简体中文

充电

大约每一个月对音箱进行一次完全充电 (约需 4 小时)。

1. 将充电连接线插入音箱充电端口和电源适配器。

2. 将适配器插入交流电源插座。

注意：也可使用电脑（处于开机状态）进行充电。将充电连接线插入 USB 端口。

状态指示灯：

闪烁蓝灯 = 正在充电

显示稳定蓝灯 = 充电完成

显示稳定红灯 = 电池电量低

闪烁红灯 = 电量极低

省电

如果 30 分钟未播放音频，音箱将进入省电模式。将电源开关滑至关闭后再度打开可唤醒音箱。

疑难解答

音箱不能正常工作或无法配对

- 尝试将设备移近音箱。
- 音箱是否开启并且有电？
- 将音箱关闭后再度打开以将其唤醒。
- 设备或电脑是否具有蓝牙功能？

- 尝试重复本指南中的设置步骤或与其他蓝牙设备进行配对。

- 音箱每次只能播放一台设备中的音乐。取消与未使用设备间的配对。（请参阅设备文档以获取帮助。）按照设置步骤配对新的设备。

- 如果是同电脑配对，则指定罗技便携无线音箱作为电脑的音频输出设备。

更多帮助

请访问 www.logitech.com/support/miniboombbox 获取联机帮助。

Table of Toxic and Hazardous Substances/Elements and their Content

产品中有毒有害物质或元素的名称及含量
根据中国<<电子信息产品污染控制管理办法>>

Head Set 耳机麦克风						
有毒有害物质或元素						
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电缆 Cable	X	○	○	○	○	○
电路板组件 PWAs	X	○	○	○	○	○
塑料外壳 Plastic enclosure	○	○	○	○	○	○
塑料部件 Plastic parts	○	○	○	○	○	○
金属部件 Metal parts	X	○	○	○	○	○

Speaker 音箱						
有毒有害物质或元素						
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电缆 Cable	X	○	○	○	○	○
电路板组件 PWAs	X	○	○	○	○	○
塑料部件 Plastic parts	○	○	○	○	○	○
木制部件 Wood parts	○	○	○	○	○	○
金属部件 Metallic elements	X	○	○	○	○	○

○ = 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。
X = 表示该有毒有害物质至少在该部件的某一均质的含量超出 SJ/T11363-2006 标准规定的限量要求。

表中标有“X”的所有部件都符合欧盟 RoHS 法规

欧洲议会和欧盟理事会 2003 年 1 月 27 日关于电子电器设备中限制使用某些有害物质的 2002/95/EC 号指令

注：环保使用期限的参考标准取决于产品正常工作的温度和湿度等条件