

User Manual



Logitech® Harmony® One+ Remote

Version 1.0

© 2011 Logitech Inc. All rights reserved. Logitech's trademarks are either registered trademarks or trademarks of Logitech in the US and other countries. All other trademarks are the property of their respective owners.

Contents

Introduction	1
Getting to know your Harmony One+	1
How your Harmony One+ works	1
Devices, inputs, and activities	1
The buttons on your Harmony One+	2
What's on the Harmony One+ touchscreen	3
Using your Harmony One+	4
Selecting an activity	4
Using the Remote Assistant	4
Controlling your devices individually	4
Using your favorite channels	5
Turning off your devices	5
Setting the date and time	5
Recharging your remote	5
Using the Help button	6
Setting up your Harmony One+ for the first time	7
Overview	7
1. Creating your user account	8
2. Connecting your Harmony One+ to your computer	8
3. Setting up the devices you want to control	8
4. Setting up activities	9
5. Updating the remote	9
Determining your inputs	10
Device Worksheet	11
Testing your remote	12
Changing your setup	13
Adding and changing activities	13

Adding and changing devices	13
Adding a passthrough device to an activity	14
Changing buttons for a device or activity	15
Teaching commands using your old remote	15
Setting up favorite channels	16
Troubleshooting problems with your Harmony One+	17
Getting help with your Harmony One+	18
Using the on-remote help	18
Glossary	19
Product Specification	21

Introduction

The Logitech Harmony One+ universal touchscreen remote is your answer to effortless home entertainment. With one-button activities, you can go from watching TV to watching a DVD or listening to music with a single touch. The guided online setup steps you through the configuration of your Harmony One+, so you'll soon be ready to sit back and relax!

Whether you're new to Harmony products or you consider yourself an expert, this User Manual provides you with the information you need.

Getting to know your Harmony One+

How your Harmony One+ works

The Harmony One+ is an activity-based infrared (IR) universal remote control. Using Harmony software, you can set up the Harmony One+ to control up to 15 devices.

The Harmony One+ delivers powerful activity-based control using Smart State Technology®. This technology allows the Harmony One+ to keep track of the devices it controls, so it always knows which of your devices are on.

Devices, inputs, and activities

To make the most of your Harmony One+, you need to understand the following terms: devices, inputs, and activities.

Devices

Devices are the components of your entertainment system. They're things like your TV, cable box, DVD player, or game console.

Inputs

Inputs are connections on the back of your devices. Inputs are used to connect your devices to each other. When you want to go from watching TV to watching a DVD or listening to music, you typically need to switch your TV and/or audio receiver to the correct input. For example, if your DVD player is connected to your TV using the HDMI 1 input, then the TV needs to be set to HDMI 1 to watch a DVD.


Activities

An activity is something you do with your entertainment system, like watching TV, listening to music, or playing a game. Your Harmony remote automates activities so that a single button turns on all the necessary devices for each activity, and switches them to the required inputs. For example, pressing the Watch TV button might turn on your TV, your cable or satellite receiver, and your audio receiver, and switch to the correct video and audio inputs.

The activity also determines which devices handles important functions such as changing channels or controlling the volume.

The buttons on your Harmony One+

The buttons on the Harmony One+ may have different functions or control different devices depending on the activity or device. For more information, see [Changing buttons for a device or activity](#) on page 15.

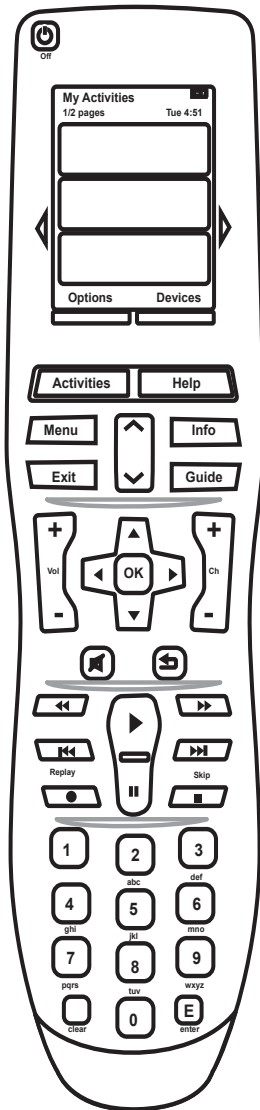


	The Off button turns off all the devices in the current activity.
	The arrow keys help you page through items on the touch screen.
	The function buttons are dynamic and select the functions displayed above on the button on the touchscreen.
	The Activities button displays your activities.
	The Help button starts the on-remote help.
	The Menu button opens the on-screen menu for the device selected.
	The page up and page down arrows help you navigate through your on-screen guide or menu.
	The Info button opens the information section of your on-screen guide.
	The Exit button closes your on-screen menu or guide.
	The Guide button opens your on-screen guide.
	The volume button changes the volume.
	The navigation pad arrows allow you to move through menus or on-screen guides.
	The channel button changes the channels.
	The mute button mutes the sound.
	The previous channel buttons returns you to the last channel you were on.
	The play area puts your play, pause, skip and other buttons in one area for quick access.
	The number pad has the digits 0-9.
	The enter button enters a selection from the number pad.
	The clear button clears an entry from the number pad.

What's on the Harmony One+ touchscreen


Activities

When you press the **Activities** button, the touchscreen displays the activities you have set up. When you tap an activity on the touchscreen, the activity starts, and the commands for that activity appear on the touchscreen. The commands may apply to any of the devices that you use for that activity. For example, if you're watching TV, the touchscreen displays functions and commands for your TV and the cable or satellite box you use in the Watch TV activity.

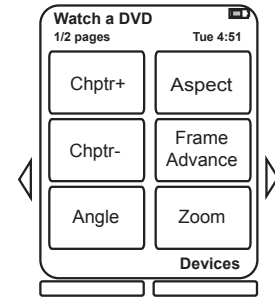


Devices

When you are viewing activities on your remote's touchscreen, you can switch to device mode by pressing the **Devices** button on your remote. A list of devices appears on the touchscreen. You can select a device, then view the commands that are available for that device.

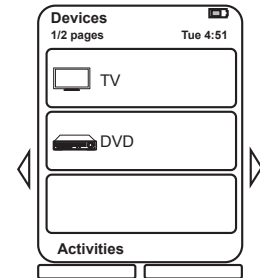

Favorite channels

If you have favorite channels set up on your Harmony One+, a **Favorites** option will appear at the bottom of the touchscreen when you start the **Watch TV** activity. Tap Favorites then tap the name or icon for the favorite channel you want to watch.

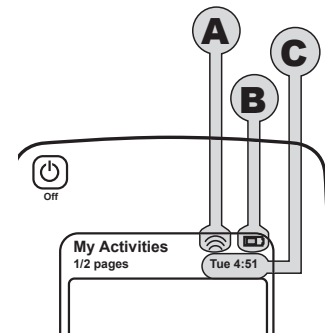

Status icons

A: The status indicator flashes whenever a command is being sent from your Harmony One+. **B:** The status of the battery.
C: The current date and time. Navigating screen options

The buttons surrounding the remote's screen allow you to navigate the screen options. The arrow buttons help you move through each page of options, while the bottom buttons allow you to choose the option displayed on the touchscreen above. The upper left corner of the screen shows the current page number and how many pages there are in total.




Using your Harmony One+

Selecting an activity

You can start an activity by pressing the **Activities** button on your remote then tapping the appropriate activity on the touchscreen.

Harmony One+ will take care of powering on the required devices, powering off the ones not needed, and changing inputs if necessary.

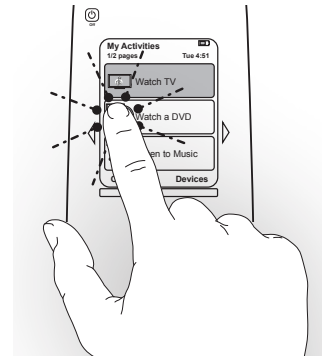

Using the Remote Assistant

The Harmony One+'s Remote Assistant appears on the touchscreen when you disconnect the remote after syncing, and when you start an activity. It guides you through the activity. For example, when you select the Watch TV activity, the Remote Assistant asks you if the TV is on and if the other devices in the activity are configured properly.

You can temporarily turn off the Remote Assistant by pressing the function button below **Options** then tapping the **Turn Remote Assistant Off** option on the touchscreen. The Remote Assistant will reappear after the next sync.

Controlling your devices individually

In some cases, you may want to control a device individually. You may, for example, want to access a function not included in the current activity (such as picture-in-picture). When you are in an activity, pressing the **Devices** button shows you a list of your devices. Choose the device you want to control. If necessary, use the arrow buttons to find the page with the desired device. Once you select the device, the Harmony One+ screen shows the commands for that device. Choose the desired command. Once you've finished, press the center button to return to activities mode.



If you find yourself regularly switching to device mode to perform a particular function, you should consider adding that function to an activity. For more information, see [Setting up activities](#) on page 9.

Using your favorite channels

You can set up favorite channels for your TV, or your cable or satellite receiver. For each channel, you can choose the icon you want to appear on the touchscreen. For more information, see [Setting up favorite channels](#) on page 16.

To select a favorite channel:

1. Press the **Watch TV** button. On your remote's touchscreen, select the **Favorites** option. Your favorite channels will appear on the screen.
2. If you have set up more than four favorite channels, they will appear on multiple pages. Use the arrow buttons to move between pages.
3. To jump to a favorite channel, simply tap the channel number or icon.

Turning off your devices

Press the **Off** button to power off all the devices used in the current activity.



You don't need to turn off devices when switching between activities. The Harmony One+ ensures the proper devices for the activity are on or off.

Setting the date and time

You can change the date and time that appears on the Harmony One's touchscreen. To set or change the date and time, follow these steps:

1. On your Harmony One's screen, press the function button below **Options**.
2. Tap the **Date and Time** option.


Recharging your remote

Your Harmony One+ comes with a charging station. The charging station plugs into a wall outlet and charges the battery every time you put the remote on it. To ensure your remote stays charged, be sure to place it back on the charging station when you're done using it.



Using the Help button

Because obstacles or distance can interfere with the signals the Harmony One+ sends when it starts an activity (for example, someone walks between your Harmony One+ and the TV when you press **Watch TV**, or you're very far away from the system when you start an activity), your Harmony One+ can become "out of sync" with your devices.

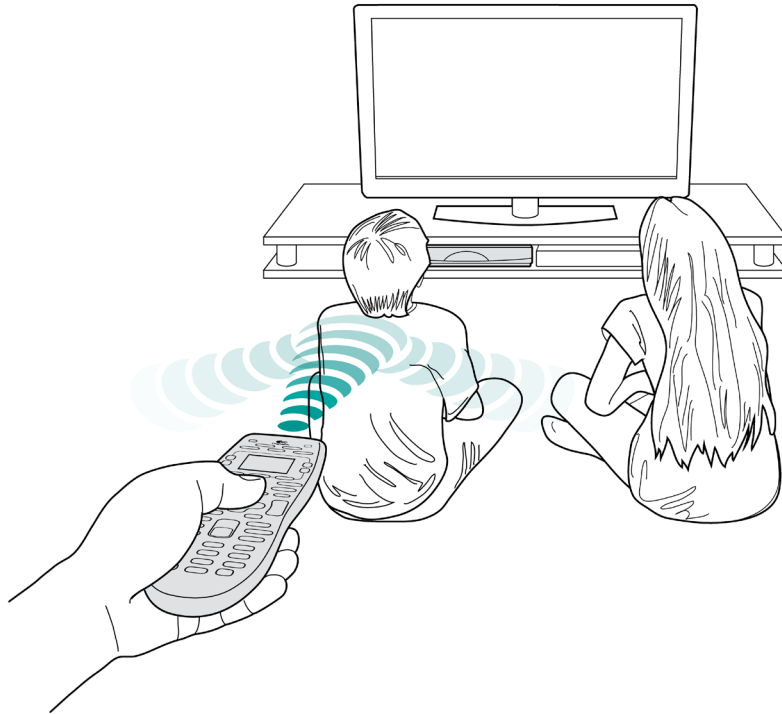

To fix the problem, use the Help feature on your remote.

1. On the remote, press the **Help** button.
2. Answer the questions and follow the instructions on the Harmony One+ touchscreen. The Harmony One+ re-sends commands to make your remote "in sync" with your devices.
3. To access advanced help features, press and hold the **Help** button for 5 seconds.

If you have used the Help feature to fix the problem several times in the past, you may be asked some questions to help fix the problem permanently. When you're done with this process, the Harmony One+ will be "in sync" with your devices.



Before pressing the **Help** button, be sure you've addressed the cause of the problem (for example, remove any obstacles from the line of sight).

Setting up your Harmony One+ for the first time

Overview

You set up your Harmony One+ using a guided online setup process called My Harmony. It asks you a series of questions about your entertainment system as it walks you through the following steps:

1. *Creating your user account:* The setup walks you through creating a user account on My Harmony. You may also be prompted to download and install software.
2. *Connecting your Harmony One+ to your computer:* You will be prompted to connect your remote to your computer so they can communicate with each other.
3. *Setting up the devices you want to control:* My Harmony walks you through entering the manufacturer and model numbers of the components of your entertainment system that you can collect using the [Device Worksheet](#) on page [11](#).
4. *Setting up activities:* My Harmony helps you set up one-button activities that save you the trouble of turning on multiple devices and switching inputs.
5. *Syncing the remote:* My Harmony transfers your setup information from your computer to the remote.

After you set up and sync your Harmony One+ remote, you can change your setup and add favorite channels. For more information, see [Changing your setup](#) on page [13](#).



Gathering your device information

To simplify the setup process, we recommend you fill out the Device Worksheet, so that all the device information is at hand when you need it.

Locating manufacturer and model number on your devices

Manufacturer names and model numbers are typically found at the front of a device, on a label on the back or side of the device, or in the user manual for that device.


1. Creating your user account

To access My Harmony, open a web browser and go to MyHarmony.com. When you visit MyHarmony.com for the first time, you must create a user account so you can save your settings and return at any time to make changes. From My Harmony, follow the online instructions to set up your remote and create your account. Depending on your system, you may be prompted to download and install software.

2. Connecting your Harmony One+ to your computer

When asked to do so, connect your Harmony One+ to your computer using the USB cable provided.

1. Connect the smaller end of the cable to the USB port on your remote.
2. Connect the wider end of the USB cable to a USB port on your computer.
3. Once connected, the Harmony One+ will begin communicating with your computer. A Welcome screen will appear when the connection is complete.

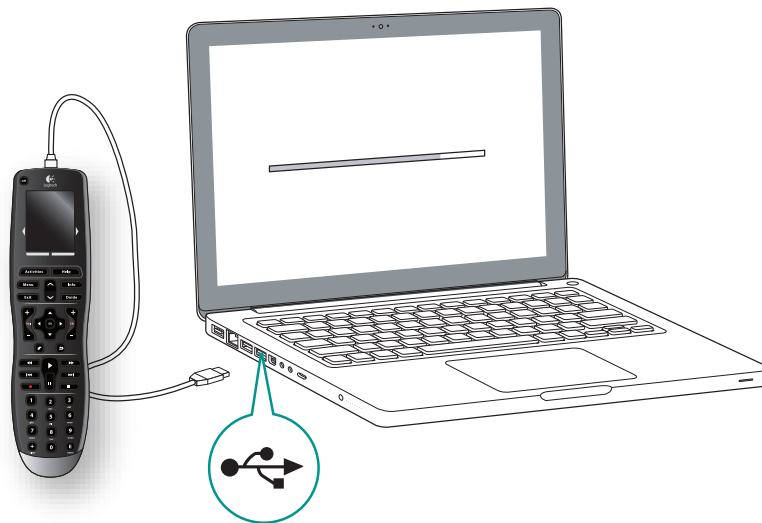

3. Setting up the devices you want to control

From the Welcome screen, click **Next** to begin. My Harmony will walk you through the process of setting up devices. You'll be asked to provide the manufacturer name and model number for all the entertainment devices you want to control with your Harmony One+. You can use the [Device Worksheet](#) on page 11 to gather the necessary information. For devices with multiple inputs (like TVs and AV receivers), you'll need to note which devices are connected to them, and with which inputs.




Adding new devices at a later time

If you want to add additional devices after the initial setup, see [Adding and changing devices](#) on page 13.

4. Setting up activities

After you have finished identifying your devices, you can start setting up your activities. An activity is something you do with your entertainment system, like watching TV, listening to music, or playing a game. Your Harmony remote automates activities so that a single button turns on all the necessary devices for each activity, and switches them to the required inputs. For example, pressing the **Watch a Movie** button might turn on your TV and your DVD player, and switch the TV to the DVD player's input.

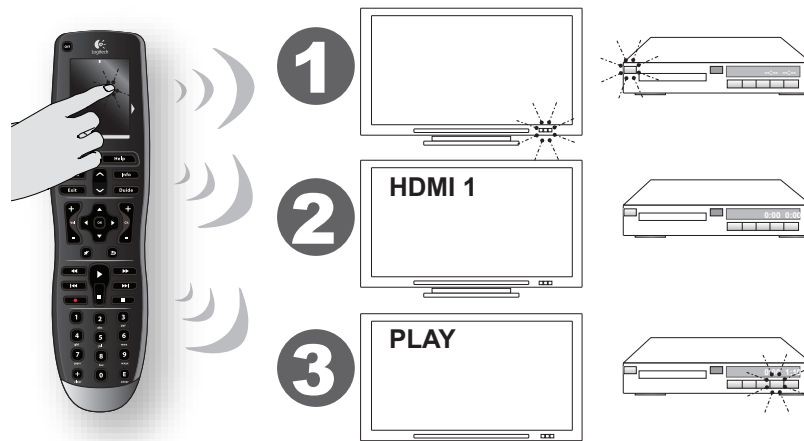

My Harmony prompts you to set up the Watch TV activity, and allows you to set up other activities (depending on the devices you have added to your account). If you haven't added enough devices to support an activity, you won't be given an opportunity to add any. When you set up an activity, you choose the devices that are involved in the activity, and indicate which devices you use to control which functions. For example, when you set up the Watch TV activity, you pick the device that changes the channels and the device that controls the volume. If the device has more than one input, My Harmony asks you which input the device uses. If you're not sure, see [Determining your inputs](#) on page 10 for more information. You may also be asked additional questions depending on your entertainment system.

5. Updating the remote

When you're finishing adding activities, click **Sync** to transfer your setup information to your Harmony One+. After the remote has been updated, the setup process will prompt you to disconnect the remote from your computer and test your remote on your home entertainment system. For specific details about testing your remote, see [Testing your remote](#) on page 12.

Determining your inputs

One of the most important steps in creating your activities for your Harmony One+ is determining which inputs your system uses for each device. If you're not sure, this section offers some suggestions on how to figure out which inputs your entertainment system uses.

Inputs are connections on the back of your devices. Using inputs, you connect your devices to each other. For example, your DVD or cable box may be connected to your TV through an HDMI input. After you know how your devices are connected, you can use the information to create your activities using My Harmony.

Step 1 — Turn on all your devices

To determine which devices are using which inputs, you should start by turning on all the devices in your entertainment system.

If possible, you should start playing something in your DVD player, CD player, VCR, etc.

By having all your devices on, it's easier to see how they're connected.

You can use the [Device Worksheet](#) on page 11 to keep track of which devices are connected using which inputs.

Step 2 — Watch the TV

In this step, you must use your TV's original remote control to switch between inputs.

1. Using your TV's original remote, press the input button and select each input one-at-a-time.
2. For each input, note which device appears to be connected to that input.
For example, if you switch to HDMI 1 and see your DVD playing, you know your DVD player is connected to HDMI 1.

Step 3 — Listen to the sound

You need to complete this step only if you have a separate device (called an audio receiver) that manages the sound for your entertainment system. For example, you® may have a home theater system or connect your TV to your stereo so that the® sound comes out of your stereo speakers.

You must use your audio receiver's original remote control to switch between inputs.

1. Using your audio receiver's original remote, press the input button and select each input one-at-a-time.
2. For each input, note which device appears to be connected to that input.
For example, if you switch to OPTICAL 1 and hear the sound from your DVD playing, you know your DVD player is connected to OPTICAL 1.

Getting Started



Add Devices

Create Activities

Finish Setup






As part of setting up your Harmony remote, you will need to enter information about the components in your entertainment system. Fill out this worksheet to use as your guide.

List the entertainment components below that you want to control with your new remote.

Device	Manufacturer	Model #	Inputs	From
<i>e.g. TV</i>	<i>Sony</i>	<i>KDL-42V4100</i>	<i>HDMI 1</i>	<i>Cable box</i>
TV				
Cable/Satellite				
DVD				
Game system				
AV Receiver / Home Theater				

Tip Center How to Find Model Numbers

On most entertainment components, the model number is usually found on a label located on the front, back, side, or bottom.

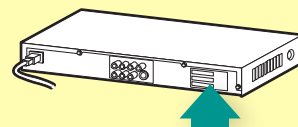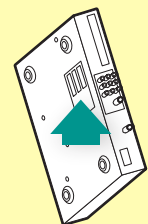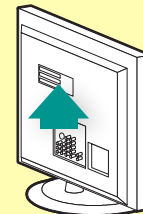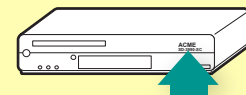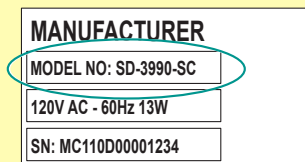

If you cannot find the model number on the component itself, the user manual that came with your component should list the manufacturer and model number.

What are inputs... and why do I need to know about them?

Inputs are how your devices are connected. Your Harmony remote needs to know your inputs so that it can switch them automatically for you when you start an activity.

Tips for identifying Manufacturer:

- also referred to as “make” or “brand name”
- typically on the front of the component
- sometimes on the label with the Model Number
- examples: Sony®, Phillips®, Denon®, DirecTV®, TiVo®, etc.

Tips for identifying Model Number:

- also “Model” or “M/N”
- usually on a label on the front, back or bottom of the component (see the Tip Center)
- model number may be different than model name
- also found in the component’s user manual
- examples: RC-QN3BK, CT-36XF36C, Explorer 3100, L32 HDTV 10A, etc.
- NOT model number on the old remote control
- NOT serial number (SN) which is usually much longer

Once you have gathered all of your information, take this worksheet to your computer and continue setting up your Harmony remote.

Testing your remote

Every time you update your Harmony One+, you should test your remote to ensure it's working the way you expect. This section gives you the information you need to test your remote. It also has some suggestions on what to check while you're testing your setup.

If you run into specific issues while testing your remote, see [Troubleshooting problems with your Harmony One+](#) on page 17 for suggestions and possible fixes for your problems.

Testing your Harmony One+ is simple. Just try out the activities you use most often and use the on-remote help to correct any issues.

In some cases, you may need to return to My Harmony to make changes to your remote's setup to ensure the remote is working the way you want.

To begin testing your remote:

1. Disconnect the USB cable from your remote.
If this is the first time you've updated your remote, the Harmony One+'s tutorial will appear on the touchscreen. Ensure all the devices in your entertainment system are turned off.
2. If you are viewing the tutorial, follow the instructions displayed on the remote's screen.
3. Go to your entertainment system and try each of your activities.
For tips on what to look for when starting an activity, or switching between activities, see below.
4. If an activity doesn't start correctly, press the **Help** button on the remote and the on-remote help will get you back "in sync". After you finish testing your activities, be sure to re-test any for which you had to use the **Help** button.

Testing your setup – Starting an activity

Look for these things in particular:

- Did all of your devices for that activity turn on?
- Do you hear the correct sound?
- If the activity includes your TV, do you see the correct picture?



Testing your setup – Switching between activities

Look for these things in particular:

- Are all devices needed for this new activity on?
- Did devices not needed for this activity turn off?
- Do you hear the correct sound?
- If the activity includes your TV, do you see the correct picture?

Changing your setup

Whether you have a new device, or want to add favorite channels, or change the behavior of some buttons, you may need to make changes to your Harmony One+'s setup. In each case, you return to MyHarmony.com, and sign into your account. From the screen that appears, you select the appropriate option and follow the online instructions.

Adding and changing activities

When changing an activity, you can add or remove the devices used, and change any inputs or control options.

To add or change activities: Go to **MyHarmony.com** and sign into your account.

1. From My Harmony, to the Activities page by clicking the **Activities** tab or the **Your Activities** link.
2. Click the appropriate link to add or change activities.
3. After you have finished adding or changing activities, sync your remote.

The number of activities you can add depends on the devices you have added to your account.

Adding and changing devices

To add or change the devices that your Harmony One+ controls:

1. Go to **MyHarmony.com** and sign into your account.
2. From My Harmony, go to the Devices page by clicking the **Devices** tab or the **Your Devices** link.
3. Click the appropriate link to add or change devices.
4. After you have finished adding or changing devices, sync your remote.

Note: If you have already set up 15 devices (the maximum number of devices for the Harmony One+), the option for adding devices will not be available.




If you delete a device, any activities using the device will also be deleted. Before deleting the device, modify any activities that use the device. If you're replacing a device, add the new one first, then modify your activities to use the new device, then delete the old device.

Adding a passthrough device to an activity

A passthrough device is a device that you add to your system that a signal passes through unaltered. For example, if you use your DVD recorder (or VCR) to record shows from your cable or satellite receiver, you may need to add your DVD recorder as a passthrough device to the Watch TV activity.

In these examples, the DVD recorder and the AV switch are used as passthrough devices.

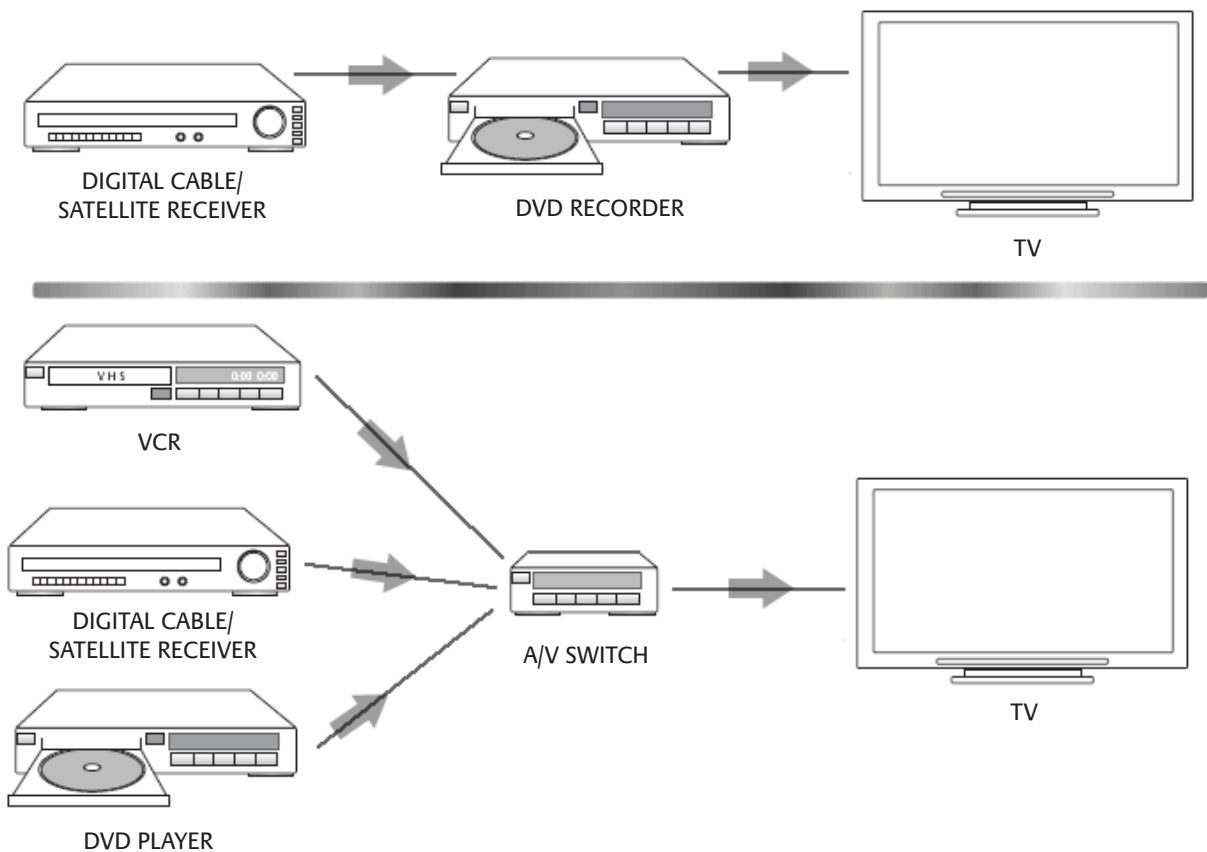

Changing buttons for a device or activity

You may wish to change how your remote buttons work for a particular device or activity. For example, your TV might have a picture-in-picture feature that you would like to make available on the remote. Using My Harmony, you can quickly and easily add or customize how buttons work for any device or activity.

To change how buttons work in a device or activity:

1. Go to **MyHarmony.com** and sign into your account.
2. From My Harmony, go to the Buttons page by clicking the **Buttons** tab or the **Change or Fix What a Button Does** link.
3. Click the appropriate link to change or fix buttons.
4. After you have finished changing buttons, sync your remote.


You can change functions for both the fixed buttons on your Harmony One+ remote, and for the options displayed on the remote's touchscreen. For screen options, you can change both the function and the label used to represent the function on the touchscreen.

Teaching commands using your old remote

If there's a command on your original remote that doesn't appear on your Harmony remote, or doesn't work properly, you can use your original remote to teach the command to your Harmony remote.

To teach commands to your Harmony remote using your old remote:

1. Go to **MyHarmony.com** and sign into your account.
2. Follow the online instructions to change the buttons that appear on your remote or the options that are displayed on the remote's screen.
3. Follow the instructions to add a command that is not included on the command list, or fix one that doesn't seem to work right.
4. Follow the online instructions to teach the command to your Harmony remote.

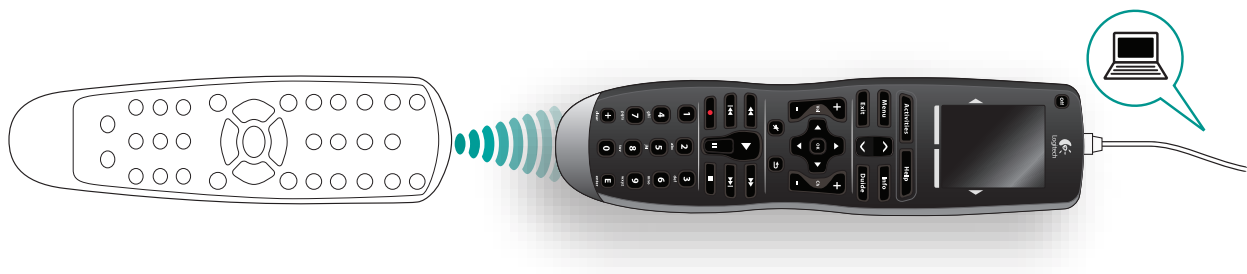

When naming a command, Logitech suggests using the following naming conventions to make button assignment easier:

- Don't use spaces or special characters such as /, & or * in the name.
- Capitalize the first letter of each word (for example, **NextDisc**, **ModeDigital**).
- Start the command name with its main function (for example, **VolumeRearUp**, **VolumeRearDown**, **VolumeFrontUp**). This helps group related commands.
- Start commands that select inputs (for example, on a stereo receiver) with the prefix "Input". Don't name the input based on what you've connected to your device; instead, name it according to how it's connected (for example, **InputHDMI1**, **InputHDMI2**, **InputVideo1**, **InputAux**).

You can also teach commands from your original remote to the Harmony remote while you are adding a device, while fixing device settings, when adding a missing command, or when fixing a button or screen option.

Setting up favorite channels

You can set up favorite channels for your TV, or your cable or satellite receiver. If your system has more than one channel changing device, you should set up the favorite channels within your Watch TV activity for the device you use to change channels.

To set up your favorite channels: Go to **MyHarmony.com** and sign into your account.

1. From My Harmony, go to the Favorites page by clicking the **Favorites** tab or the **Your Favorite Channels** link.
2. Follow the online instructions to set up favorite channels.
3. After you have finished setting up favorite channels, sync your remote.

Your favorite channels will appear on the remote's screen when you start the **Watch TV** activity then select **Favorites**.

Troubleshooting problems with your Harmony One+

In this section, you'll find some commonly reported issues and the suggested solutions. These solutions may help you fix problems you're experiencing. If you still cannot fix the problem, refer to [Getting help with your Harmony One+](#) on page 18.



The TV doesn't go to the right input when starting activities.

- From My Harmony, check your activity to ensure it is set up to use the correct input for your TV. Next, check that the inputs are in the correct order so the Harmony One+ can cycle through each input.



When you try to add a new TV to your account, you get a message informing you that you haven't entered the correct model number.

- The model number for many devices can be found on the front of the device. If it isn't there, it might be on a label on the back, bottom, or side of the device. The model number shouldn't be confused with the serial number for the device, or the model number of the device's remote control, as many different devices by a manufacturer can share the same remote.

If you can't find a device's model number, you can use the device's original remote to teach its commands to your Harmony remote. For more information, see [Teaching commands using your old remote](#) on page 15.



The On Demand command isn't on the Harmony One+ for the Watch TV activity.

- You can map the command to any unused button on the Harmony One+ or on the remote's screen. The command is likely in our database, but wasn't mapped to the activity. If we're missing the command, the Harmony One+ can learn it from your original remote. For more information, see [Teaching commands using your old remote](#) on page 15.



My Harmony is unable to communicate with the Harmony One+.

- Ensure that the USB cable is plugged into your computer and into your remote. Ensure that you are not connecting through a USB hub. If you are, connect the cable directly to a computer USB port. Unplug the USB cable from your computer, and plug it in again. Unplug the USB cable from your remote, and plug it in again. Close your browser, start your browser again, and return to My Harmony. Plug the USB cable into a different USB port of your computer. Disable any anti-virus, firewall, or pop-up blocker program. Restart your computer.

Getting help with your Harmony One+

Several support features are available to help you with the setup and customization of your Harmony One+. To access support for your Harmony One+, follow these steps:

1. Go to **MyHarmony.com**. Sign into your account.
2. Click **Support**.

You'll be taken you to Logitech's Support page where the following support options are available:

FAQs (Frequently Asked Questions)	A searchable list of customer questions with answers provided by Logitech's support staff and other users.
Community forums	A message board where Logitech users and moderators discuss product issues and suggest solutions (accessible directly at http://forums.logitech.com).
Support staff	Contact Logitech Support staff via phone or e-mail.

Using the on-remote help

When one or more of your devices don't power on or off, or when they don't switch inputs correctly, you can use the **Help** button on the remote for simple troubleshooting. Answer the questions on your Harmony One+ to re-synchronize it with your entertainment system. See [Using the Help button](#) on page 6.

Glossary

Activity

An activity is something you do with your entertainment system, like watching TV, listening to music, or playing a game. With your Harmony remote, you can set up an activity so that a single button on the remote turns on the necessary devices, and switches them to the required inputs.

Amplifier

A stereo component that outputs to speakers, and increases the gain or level of an audio signal. An amplifier doesn't typically include a radio.

Aspect ratio

The ratio of image width to image height. Common ratios are 1.85:1 and 2.35:1. Television screens are usually 1.33:1 (also known as 4:3). HDTV is 1.78:1, or 16:9.

AV switch

A device with several audio and video source inputs that sends a selected audio/video source input signal to an output device like speakers or a TV.

Device

A component in your home entertainment system.

DVD recorder (DVR)

A standalone unit that resembles and functions very much like a VCR. Like a VCR, DVD recorders all have AV source inputs; as well, it can record TV shows.

Input

Inputs are the connections on the back of your devices. Using these inputs, you connect your devices to each other.

In sync

The Harmony One+ knows what state all of your devices are in, such as whether they are on or off and which inputs they were last using. When it loses track of this information, it becomes "out of sync". Your remote can send commands to your devices to become "in sync" again.

IR (Infrared)

Type of signal used by most remote controls. Harmony remotes can control devices that use IR for remote control.

Mini-system

A single unit that is some combination of the functionality of a DVD, VCR, radio, and amplifier. Also known as a home theater or home cinema.

Output device

A device that produces the sound or picture, for example, a TV or speakers.

Passthrough

A device that routes video or audio from one device to another device.

Personal Video Recorder (PVR)

Contains an internal recorder and player that records and plays video without the use of a removable tape or disc. Typically PVRs can pause, rewind, instantly replay, and play slow-motion for live or recorded TV. Examples of PVR service providers are TiVo, ReplayTV, UltimateTV, and Keen PM. Many cable and satellite providers also provide PVR services and have PVRs included in some of their cable/satellite receivers.

Receiver

Also referred to as a tuner or a stereo receiver. A receiver can be any component that receives or tunes broadcast signals, or AM/FM radio. Typically refers to the single component that includes a preamplifier, surround processor, multi-channel amplifier, and AM/FM tuner.

RF (Radio Frequency)

Used by some remote controls to control devices because it doesn't have the same line-of-sight restrictions as IR (infrared) signals.

Product Specification

LCD Size	2.2" Diagonal
LCD Resolution	220 x 176 (QCIF+)
LCD Screen	64,000 colors
Touch Screen Technology	Capacitive
Power Source	Rechargeable
Power Type	Lithium Ion
Brands Supported	5,000+
Devices Supported	225,000+
Maximum number of devices per account	15
Backlit keypad	Yes
Backlight Color	White or Amber (depending on mode)
IR Learning	Yes (Up to 200 Khz)
Learning Capabilities	Any IR Device
IR Transmitters	2
IR Transmission Range	Up to 65ft
Memory Type	Flash
Memory Amount	4MB
Weight	6 oz (with battery installed)
Dimensions	8.75" x 2.3" x 1.3"
Warranty	1 Year
Supported Platforms	<p>Microsoft® Windows XP or Vista with Internet Explorer 7+, or Firefox 3+</p> <p>Microsoft® Windows 7 with Internet Explorer 8+ or Firefox 3+</p> <p>Intel Mac OS® 10.4.8+ with Firefox 3+ or Safari 4</p> <p>Note: + indicates the specified version of software, or a later version.</p>

© 2011 Logitech Inc. All rights reserved. Logitech's trademarks are either registered trademarks or trademarks of Logitech in the US and other countries. All other trademarks are the property of their respective owners.