




Enjoying the ideal companion for your Google TV™ system is just moments away.

Logitech® **Mini Controller**



From HD video calling on your couch  
to house-of-the-future touch screen remotes.  
Logitech accessories for Google TV make  
communication more personal, information  
more accessible and entertainment more fun.

[www.logitech.com/SmartTV/accessories](http://www.logitech.com/SmartTV/accessories)



Logitech®  
enjoy



## Unpack the box



Logitech® Mini Controller (TV730)




Unifying receiver



USB cable extender




Power adapter

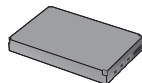

Li-ion battery



## Mini Controller at a glance

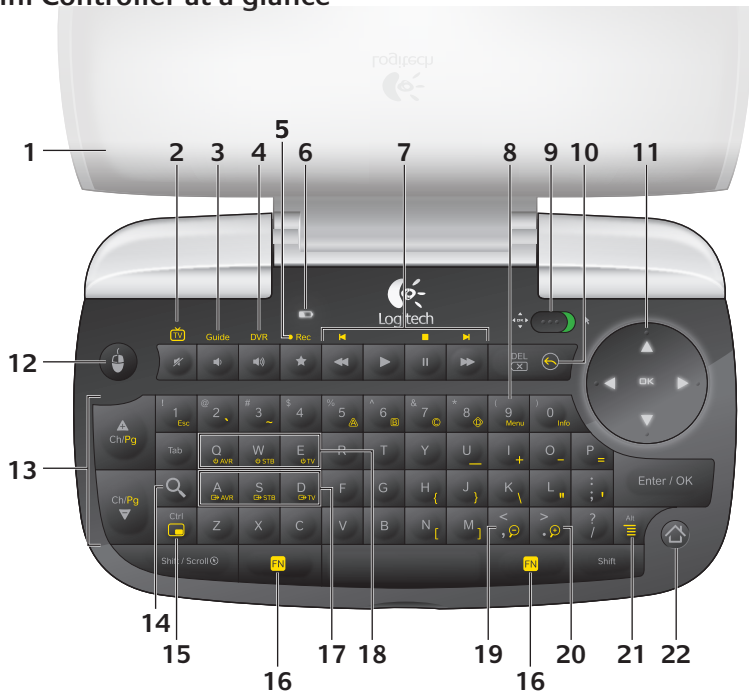


- 1. Cover** Functions as an on/off switch: open to turn on controller; close to put controller in standby mode
- 2. Mute** Mutes volume  
**TV** Switches to live TV when used with the FN key
- 3. Volume down** Reduces volume  
**Guide** Presents the program guide on your set-top box (STB) when used with the FN key
- 4. Volume up** Increases volume  
**DVR** Presents a list of recordings on your STB when used with the FN key
- 5. Favorite** Saves favorite locations  
**Record** Records when used with the FN key (may not be available for all devices)
- 6. Battery indicator light** Blinks green when battery is charging, turns solid green when battery is fully charged, and red when battery power is low
- 7. Playback** Controls video playback—Rewind, Forward, Play/Pause, and Fast Forward
- 8. Menu** Displays STB on-screen menu/guide when used with the FN key
- 9. Touchpad mode slider** Switches between Navigation mode, for navigating menus and web pages, and Pointing mode for cursor movement
- 10. Back** Returns to previous screen when used with the FN key
- 11. Dual-mode touchpad** Functions as a directional pad in Navigation mode for navigating menus and web pages, also functions as a touchpad in Pointing mode for cursor movement
- 12. Mouse** Functions as a left-mouse click
- 13. Ch/Pg up** Channel up, or scrolls up through web pages when used with the FN key  
**Ch/Pg down** Channel down, or scrolls down through web pages when used with the FN key
- 14. Search** Launches the Google TV™ search and navigation bar
- 15. Picture-in-picture** Activates and toggles picture-in-picture modes when used with the FN key
- 16. FN** Enables yellow-highlighted key commands when held down; press to turn on backlighting
- 17. Input** Switches TV input when used with the FN key
- 18. Device on/off** Turns on/off AVR, STB, and TV when used with the FN key
- 19. Zoom out** Zooms out when used with the FN key
- 20. Zoom in** Zooms in when used with the FN key
- 21. Menu** Displays Google TV menu options when used with the FN key
- 22. Home** Returns to the Google TV home screen.

# 1

## Insert battery in Mini Controller

1. Open the back cover of the Mini Controller by sliding the tab up.
2. Match the contacts on the left side of the battery with the pins on the left side of the battery compartment.
3. Push the battery release slider right to insert the battery.
4. Replace the back cover.

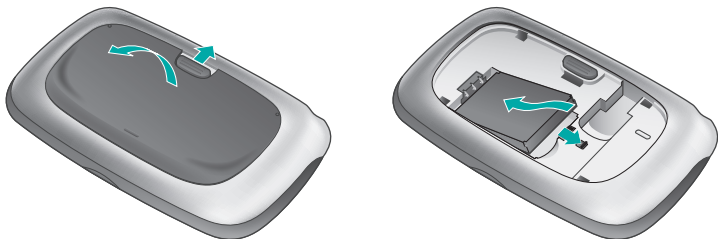


## 2

## Connect power to Mini Controller

1. Plug the AC cable into the power port on the side of the Mini Controller.
2. Plug the AC adapter into a wall socket to start charging the Li-ion battery. A full charge takes about four hours for up to ten days of use. A ten-minute charge provides about one day of use.\*

\* The Li-ion battery has a limited number of charge cycles. Battery life may vary based on user and computing conditions.

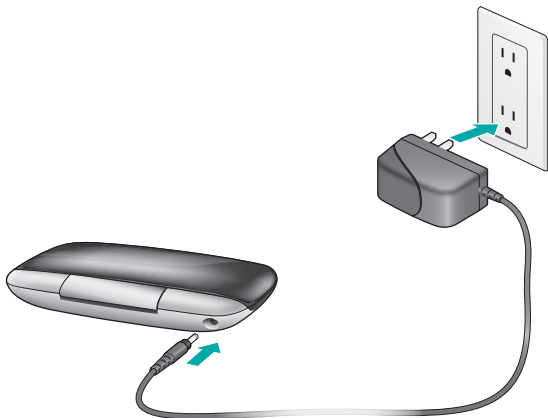


## 3

## Connect the Mini Controller

### Setup with a Google TV-based Smart TV system

Plug the Unifying receiver into a USB port in your Google TV-based Smart TV system.

If, while using the Mini Controller you notice performance issues (e.g., sluggish pointer movement or commands not being quickly recognized, etc.), try using the USB cable extender to place the Unifying receiver farther away from your TV, which may be producing electromagnetic interference.

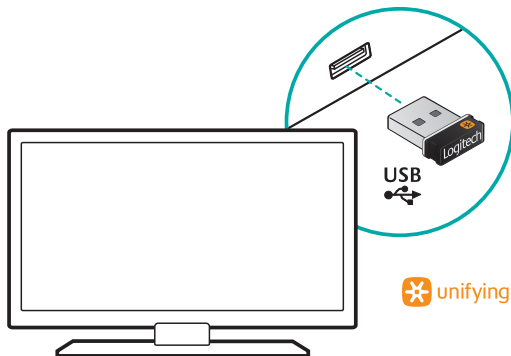




## Setup with a Logitech Revue Companion Box

1. Turn **ON** the Companion Box (sold separately).
2. Close the top cover of the Mini Controller to turn it **OFF**.
3. Press and release the pairing button on the back of the Companion Box. This button is located under the Unifying logo.
4. Open the top cover of the Mini Controller to turn it **ON** and to pair it with the Companion Box.



Mini Controller

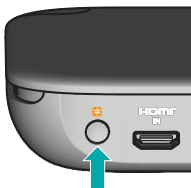

Logitech Revue™  
Companion Box



## 4

### Power everything on

Your new Mini Controller cannot control your devices until you complete the on-screen setup.

 
1. To begin, turn on all devices using your current method of control.
2. Open the Mini Controller's top cover to turn **ON** the unit.
3. Follow the instructions on the TV screen to complete setup.




TV



Companion Box



AVR

 

STB




## How changing modes affect the touchpad

The Mini Controller offers two operating modes: Navigation mode for navigating menus and web pages, and Pointing mode for moving the screen pointer. Use the Touchpad mode slider to switch between these two modes.

In Navigation mode, the touchpad functions as a directional pad. Use the touchpad's directional arrows to move up, down, left, or right.

In Pointing mode, place your finger on the touchpad surface and slide to move the pointer on the screen.

Note that when you hold down the FN key the mode switches (Navigation mode to Pointing mode, or vice versa). As long as you hold down the FN key, the modes remain switched.

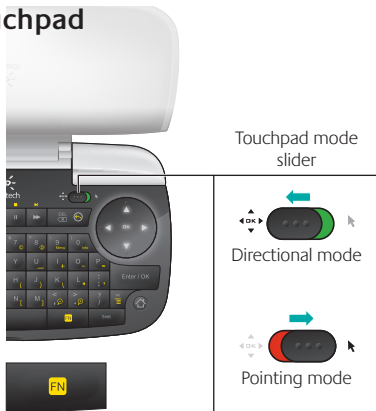

## Touchpad backlighting

In Navigation mode, the touchpad direction arrows and the word, "OK," are backlit in green. In Pointing mode, the perimeter of the touchpad is backlit in orange.



 
Touchpad in  
Navigation mode



Touchpad in  
Pointing mode


## Scrolling with the touchpad

To scroll in either Navigation or Pointing mode, hold down the Shift/Scroll key, and then move your finger (or thumb) up the touchpad to scroll up; move your finger down the touchpad to scroll down.

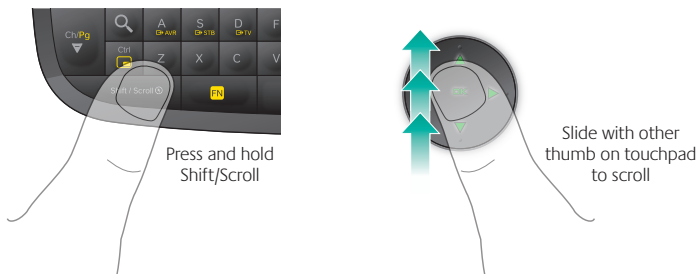

## Unifying receiver storage

When not using the Unifying receiver, you can store it conveniently inside the Mini Controller.

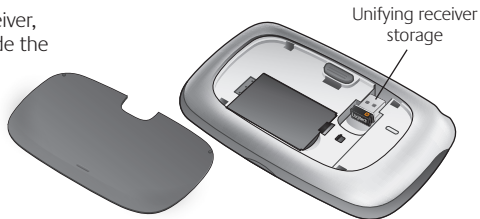

## Help with setup

**Problem:** My Mini Controller does not work or will not connect.

**Solution:** Check the following:

 
- Is the Mini Controller on? Open the top cover to turn on the unit. The Battery Indicator Light should be solid green when the battery is fully charged, and red when battery power is low. If the Battery Indicator Light is red, you will need to recharge the battery. Refer to page 7 for instructions.
- Is the battery installed correctly? Remove the battery cover and check battery installation. Refer to page 6 for more information.
- Is your Mini Controller paired with the Logitech Revue™ Companion Box (sold separately)? To pair the Companion Box with the Mini Controller, please refer to *Setup with a Logitech Revue™ Companion Box* on page 9.
- Is your Mini Controller paired with a Google TV–based smart TV system? Make sure the Unifying receiver is plugged into a USB port on your Google TV. Try using the USB cable extender to place the Unifying receiver farther away from your TV, which may be producing electromagnetic interference. You may need to re-establish the connection between the Mini Controller and its Unifying receiver:
  1. Insert the Unifying receiver in a USB port on a PC that is connected to the Internet.
  2. Download the Unifying software from [www.logitech.com/unifying](http://www.logitech.com/unifying).
  3. Follow the on-screen instructions to reconnect the Mini Controller with the Unifying receiver.
  4. When finished, insert the Unifying receiver back into a USB port on the TV. The connection between the Mini Controller and Unifying receiver should now be re-established.
- If you are navigating through TV channels or web pages, make sure the Mode Slider is set to Navigation mode by moving the slider left. To enter text or to move the screen pointer, move the Mode Slider right to activate Pointing mode.

**Problem:** In a Logitech Revue™ setup, my TV, STB (set-top box), or AVR (audio-video receiver) is not responding to the Mini Controller.

**Solution:** Check the following:

- Is the device IR controlled? Some home theater devices are controlled by line-of-sight, infrared communication (IR), and others are controlled by high-frequency radio waves (RF). If you are using the Logitech Revue Companion Box, this device only controls IR-enabled TVs, STBs, and AVRs, and will not communicate with RF-controlled components.
- Is the IR signal blocked? Use the mini blaster (which comes with your Logitech Revue Companion Box) to extend the range of the Companion Box IR signal.
- Is the mini blaster close enough to have a direct line of sight with your device? Try moving the mini blaster closer to the device.
- Is the device still not responding? You may need to teach additional IR commands to your Logitech Revue Companion Box. Launch the “Logitech Help and More” application from Logitech Revue to find the video, “Teaching Infrared commands to your Revue.”

**M/N:C-U0007**

Rating: 5V  100mA

FCC ID: JNZCU0007



MADE IN CHINA

# What do you think?

Please take a minute to tell us.  
Thank you for purchasing our product.

[www.logitech.com/ithink](http://www.logitech.com/ithink)

Now make yourself comfy. Settle in on the sofa.  
And get ready to hang out. There's one tricky thing left to do . . .  
choosing what to watch first.

[www.logitech.com](http://www.logitech.com)

For assistance, call toll free: **1-866-954-5644**

Go to [www.logitech.com/revue/support](http://www.logitech.com/revue/support) for current support hours

© 2010 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice. HDMI, the HDMI Logo and Hi-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

**620-003116.005**