




 

UE® 6000

Setup Guide

设置指南







English.	3
简体中文	9

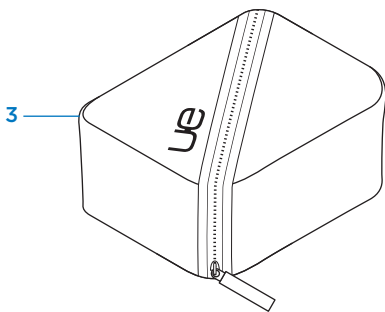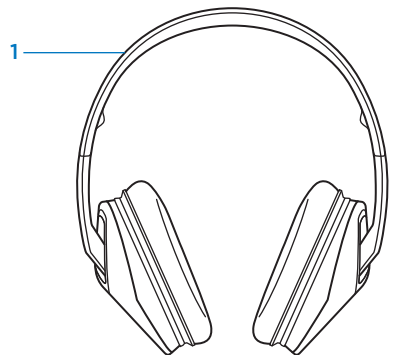

Package contents

  1. Headphones
2. Detachable audio cable with in-line remote
3. Travel case
4. Sharing splitter
5. 2 AAA alkaline batteries (pre-installed)
6. Y-cable adapter
7. ¼-inch (6.35 mm) adapter
8. Documentation

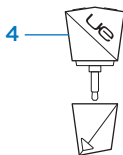


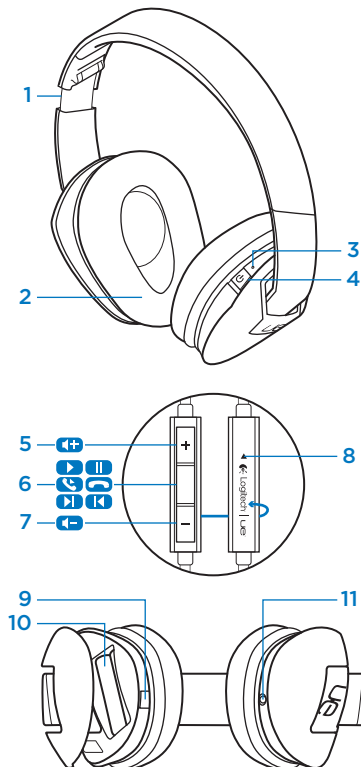

Know your product

1. Adjustable headband
2. Memory foam cushions
3. Battery LED
4. On/Off slider
5. Volume up
6. Media/calling controls
 - One click:
 - Play/pause (audio)
 - Call answer/hang up (phone)
 - Double click:
 - Next track (audio)
 - Triple click:
 - Previous track (audio)
 - One click, then click and hold:
 - Fast forward (audio)
 - Two clicks, then click and hold:
 - Rewind (audio)
 - Click and hold:
 - Activate/deactivate voice dial¹
7. Volume down
8. Microphone
9. Battery door release (Press button to open battery door.)
10. Battery compartment
11. 3.5 mm input

¹ Function varies by phone. Activates Siri® on iPhone® 4S.

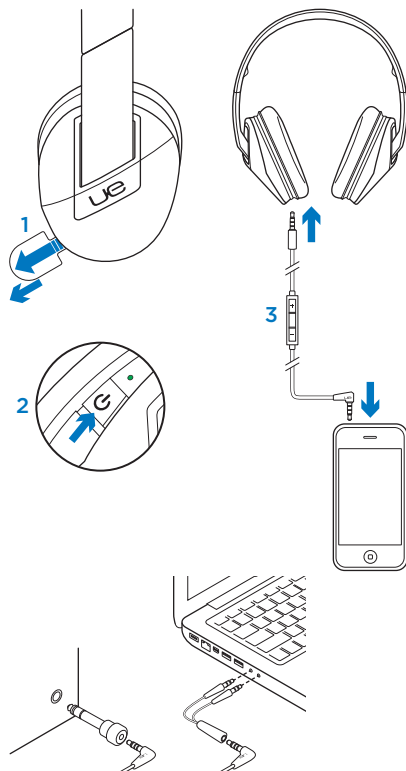

Set up your product

1. Pull the tab to activate batteries.
2. Move the slider to "On." The Battery LED turns green to indicate Active Noise Cancellation mode.
3. Connect the headphone to begin listening to music.

 
For devices with a 1/4-inch (6.35 mm) input jack, use the 1/4-inch (6.35 mm) adapter.

For PC with headphone and microphone jacks, use the Y-cable adapter to chat or make calls. (Works with most PCs.)

Note: When using on a PC, the media/calling controls will not work.


Product features

Answering a call



- On your phone, the music fades and a ring tone sounds.
- You can pick the call up on your phone or press the center button.
- To hang up, press the center button.

Sharing your music

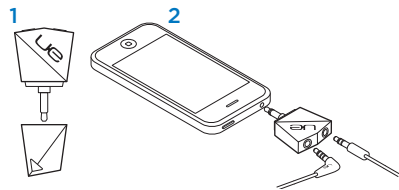


1. Remove the cap.
2. Plug in the sharing splitter and connect. Listen to music together.

Active Noise Cancellation Battery LED

- No light: headphone off
-  Green: Power on; batteries good
-  Red: Low power; change the batteries

If the power runs out, Active Noise Cancellation ends and music stops. Move the slider to the “Off” position to keep listening to music (without Active Noise Cancelling and equalization). Replace batteries for optimal performance.

Storage

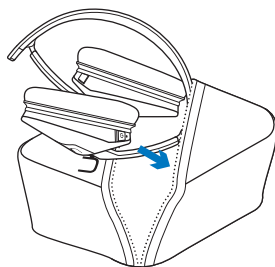

The headphone folds easily for storage.

Visit Product Central

There's more information and support online for your product. Take a moment to visit Product Central to learn more about your new Ultimate Ears headphone.

Browse online articles for setup help, usage tips, or information about additional features.

Connect with other users in our Community Forums to get advice, ask questions, and share solutions.

At Product Central, you'll find a wide selection of content:

- Tutorials
- Troubleshooting
- Support community
- Software downloads
- Online documentation
- Warranty information
- Spare parts (when available)

Go to **www.logitech.com/support/ue6000**

Troubleshooting

No sound or faint sound

- Check the cable connection. Make sure the straight connector is connected to the headphone and the angled connector is connected to your device.
- Try increasing the volume for the headphone and your media application.
- Restart your media application.
- If the Battery LED is red, replace the 2 AAA alkaline batteries.

Headphones not working with a computer

- Specify audio settings for your operating system:


 

Windows® (Control Panel)

- Voice playback and recording: Computer's soundcard
- Sound playback: Computer's speakers

Mac® OS X (Preferences)




- Sound input: Internal microphone
- Sound output: Internal speakers


Refer to your operating system documentation. For more information, go to www.logitech.com/support/ue6000.

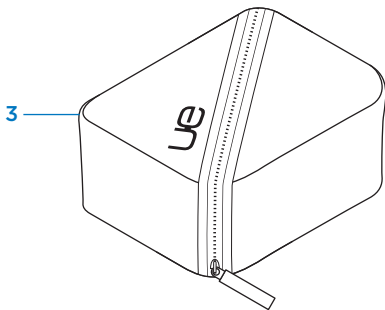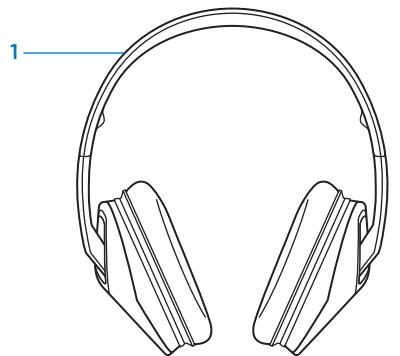

包装内容

  1. 耳机
2. 可拆卸音频线，带有内置麦克风和线控功能
3. 收纳盒
4. 共享分线器
5. 2 节 AAA 碱性电池（预装）
6. Y型接头
7. ¼ 英寸（6.35 毫米）适配器
8. 文档

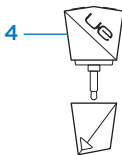

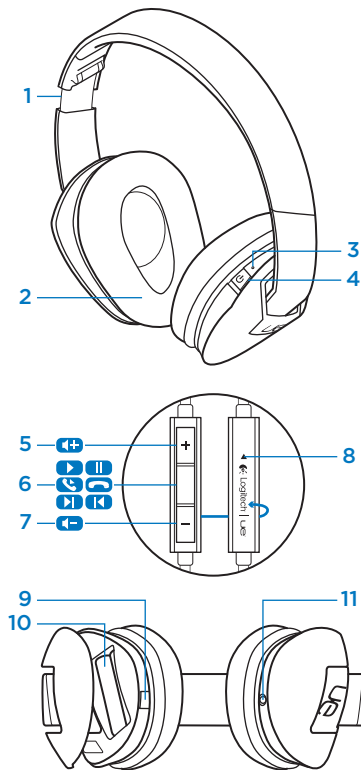

了解您的产品

1. 可调节头带
2. 记忆海绵垫
3. 电池 LED 指示灯
4. 开启/关闭滑动开关
5. 调高音量
6. 媒体/通话控制键
 - 单击一下：
 - 播放/暂停（音频）
 - 接听电话/挂断电话（手机）
 - 双击：
 - 下一曲目（音频）
 - 单击三下：
 - 上一曲目（音频）
 - 单击一下，之后单击并按住：
 - 快进（音频）
 - 双击，之后单击并按住：
 - 倒带（音频）
 - 单击并按住：
 - 启用/禁用语音拨号¹
7. 调低音量
8. 麦克风
9. 电池盖按钮（按下按钮可打开电池盖）
10. 电池存放槽
11. 3.5毫米音频输入插孔

¹ 功能依手机而异。在 iPhone® 4S 中激活 Siri®。


设置您的产品

1. 拉出挡片激活电池。
2. 将滑动开关移动到 On 位置 电池 LED 变为绿色则表示处于“主动降噪”模式。
3. 接上耳机即可开始聆听音乐。

对于具有 1/4 英寸 (6.35 毫米) 输入插孔的设备, 请使用 1/4 英寸 (6.35 毫米) 适配器。


带有耳机和麦克风插孔的个人电脑可通过 Y 型接头转接, 进行聊天或通话。(适用于绝大多数 PC。)

注意: 在 PC 上使用时, 媒体/通话控制键将失效。

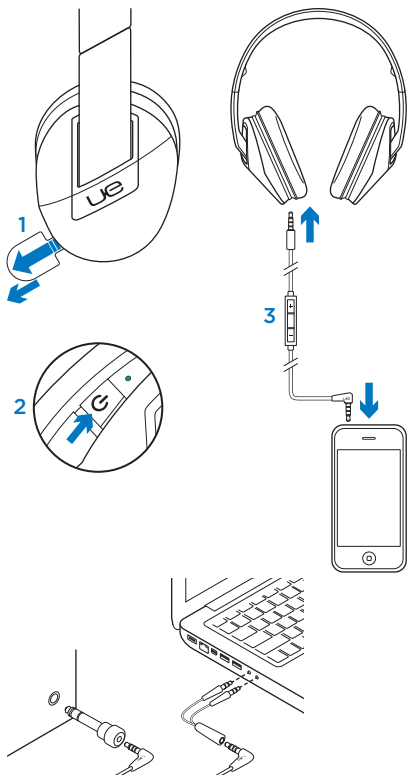


产品功能

接听电话

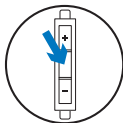

- 手机上的音乐停止，此时可听到来电铃声。
- 可通过手机或按下中间的按钮来接听电话。
- 按下中间的按钮可挂断电话。

共享音乐

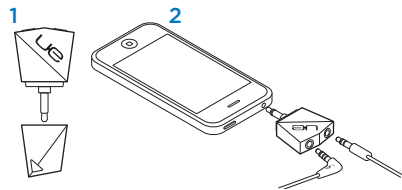


1. 打开盖子。
2. 插入共享分线器并连接耳机。共同聆听音乐。

主动降噪电池 LED

- 无指示灯：耳机电源关闭
- 绿灯：电源开启；电池电量充足
- 红灯：电量低；需更换电池

如果电量耗尽，则停止主动降噪且音乐停止播放。将滑动开关移动到“Off”位置以继续聆听音乐（无主动降噪和声音均衡）。更换电池以优化性能。

存放

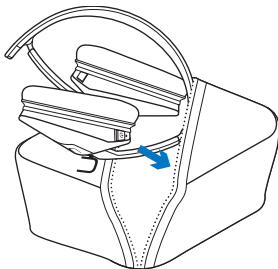

耳机可折叠，方便存放

访问“产品中心”

我们的网站提供有关于本产品的详细信息和支持服务。请抽时间访问“产品中心”，了解关于罗技UE耳机的更多信息。

浏览在线文章，查看设置帮助、使用技巧或关于更多功能的信息。

通过“社区论坛”与其他用户交流，获得建议，提出问题，分享解决方法。

“产品中心”提供了广泛的内容选择：

- 教程
- 疑难解答
- 支持社区
- 软件下载
- 在线文档
- 保修信息
- 备用部件（若有供应）

访问 www.logitech.com/support/ue6000

疑难解答

没有声音或声音模糊

- 检查连接线的连接。确保将直插头与耳机相连，将弯插头与设备相连。
- 尝试提高耳机和媒体应用程序的音量。
- 重启多媒体应用程序。
- 如果电池 LED 显示红灯，则更换 2 节 AAA 碱性电池。

耳机在电脑上无法正常工作

- 指定操作系统的音频设置：

Windows®（控制面板）

- 语音播放和录制：电脑的声卡
- 声音播放：电脑的扬声器

Mac® OS X（偏好设置）

- 声音输入：内置麦克风
- 声音输出：内置扬声器

请参阅操作系统文档。有关更多信息，请访问 www.logitech.com/support/ue6000。

Table of Toxic and Hazardous Substances/Elements and their Content

产品中有毒有害物质或元素的名称及含量
根据中国<<电子信息产品污染控制管理办法>>

Head Set 耳机麦克风						
有毒有害物质或元素						
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电缆 Cable	X	○	○	○	○	○
电路板组件 PWAs	X	○	○	○	○	○
塑料外壳 Plastic enclosure	○	○	○	○	○	○
塑料部件 Plastic parts	○	○	○	○	○	○
金属部件 Metal parts	X	○	○	○	○	○
Speaker 音箱						
有毒有害物质或元素						
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电缆 Cable	X	○	○	○	○	○
电路板组件 PWAs	X	○	○	○	○	○
塑料部件 Plastic parts	○	○	○	○	○	○
木制部件 Wood parts	○	○	○	○	○	○
金属部件 Metallic elements	X	○	○	○	○	○
○ = 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。 X = 表示该有毒有害物质至少在该部件的某一均质的含量超出 SJ/T11363-2006 标准规定的限量要求。 表中标有“X”的所有部件都符合欧盟 RoHS 法规 “欧洲议会和欧盟理事会 2003 年 1 月 27 日关于电子电器设备中限制使用某些有害物质的 2002/95/EC 号指令” 注：环保使用期限的参考标准取决于产品正常工作的温度和湿度等条件						





POWER TO THE MUSIC

我就是Music!

www.logitechUE.com.cn

© 2012 Logitech. All rights reserved. Logitech, the Logitech logo, 罗技 and other Logitech marks are owned by Logitech and may be registered. Apple, Mac, and the Mac logo are trademarks of Apple Inc., registered in the U.S. and other countries. Microsoft, Windows, and the Windows logo are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

版权所有©2012 年罗技。罗技、罗技标志、Logitech 和其他罗技商标均归罗技所有，并或已注册。Apple、Mac 和 Mac 图标是 Apple Inc. 在美国和其他国家注册的商标。Microsoft、Windows 和 Windows 标志是 Microsoft 集团公司的商标。所有其它商标均是各自所有者的财产。罗技对于本手册中可能出现的任何错误不承担任何责任。本手册中包含的信息如有更改，恕不事先通知。

620-004434.004