



Folio S37


for Samsung Galaxy Tab 3 (7.0")




Setup Guide

Read this guide before use


Contents

English	3
한국어	7
www.logitech.com/support 	11

Know your product

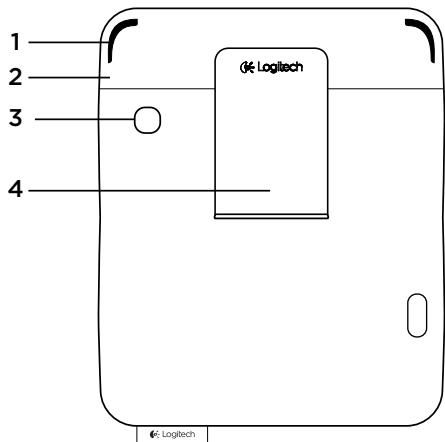


1. Tablet holder
2. Protective folio
3. Camera hole
4. Hook
5. Product documentation

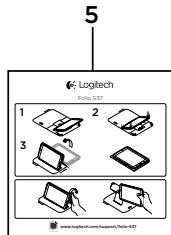


Setting up and using the folio with your Samsung Galaxy Tab 3

Setting up your folio

1. Open the folio and insert your Samsung Galaxy Tab 3 into the hook:

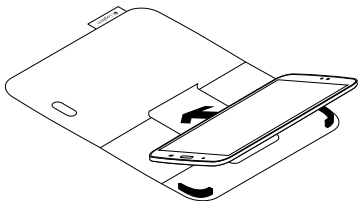


2. Push your Samsung Galaxy Tab 3 down into the tablet holder:

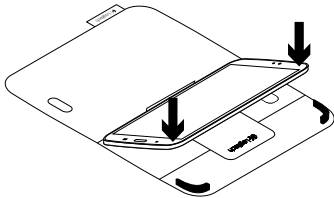

Using your Samsung Galaxy Tab 3

1. Open the folio:

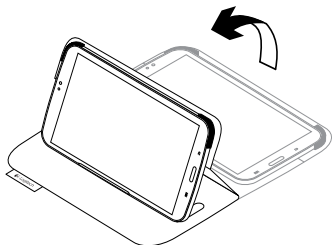

2. Turn on your Samsung Galaxy Tab 3.


When you have finished using your Samsung Galaxy Tab 3:

1. Turn off your Samsung Galaxy Tab 3.
2. Close the folio.


Two viewing positions

The folio provides two viewing positions—one for viewing media and another for browsing.

To view media, place your Samsung Galaxy Tab 3 at the angle you feel comfortable with:

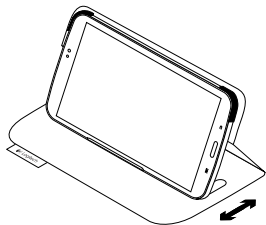


To browse, fold your folio back along its spine:

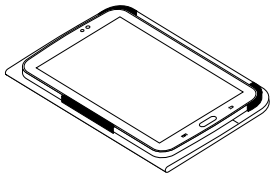


Detaching your Samsung Galaxy Tab 3

To detach your Samsung Galaxy Tab 3 from the folio, bend back one of the tablet holder corners:

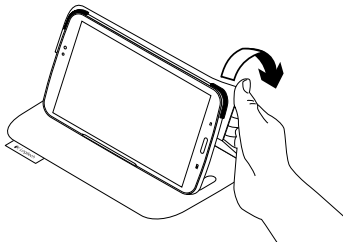

Your Samsung Galaxy Tab 3 is then released:

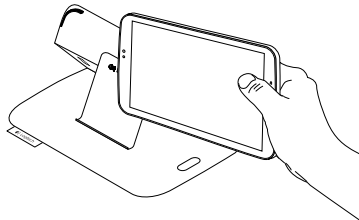

Visit Product Central

There's more information and support online for your product. Take a moment to visit Product Central to learn more about your new folio.

www.logitech.com/support/folio-S37

Browse online articles for setup help, usage tips, and information about additional features.

Connect with other users in our Community Forums to get advice, ask questions, and share solutions.

Find a wide selection of content including:

- Tutorials
- Troubleshooting
- Support community
- Online documentation
- Warranty information
- Spare parts (when available)

Troubleshooting


My Samsung Galaxy Tab 3 won't stand in the media position.

- Make sure your Samsung Galaxy Tab 3 is inserted in the tablet holder correctly, and that the viewing angle is between 55° and 65°.


My Samsung Galaxy Tab 3 won't wake when I open the folio, and doesn't go into sleep mode when I close it.

- Your Samsung Galaxy Tab 3 (7.0") doesn't support automatic wake and sleep. You must turn on your Samsung Galaxy Tab 3 (7.0") to use it, and turn it off again when you've finished.

제품 설명

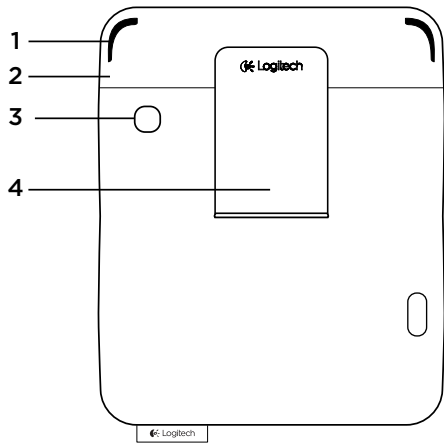


1. 태블릿 홀더
2. 보호 폴리오
3. 카메라 홀
4. 후크
5. 제품 설명서

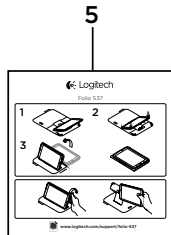


Samsung Galaxy Tab 3에서 폴리오 설정 및 사용

폴리오 설정

1. 폴리오를 열고 후크에 Samsung Galaxy Tab 3을 끼워 넣습니다:

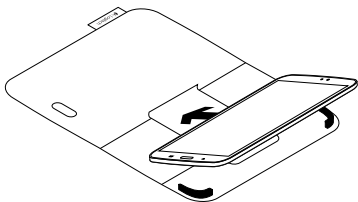


2. Samsung Galaxy Tab 3을 태블릿 홀더로 아래로 밀어 넣습니다:

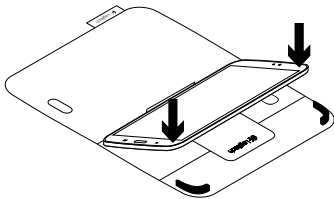

Samsung Galaxy Tab 3 사용

1. 폴리오를 엽니다:

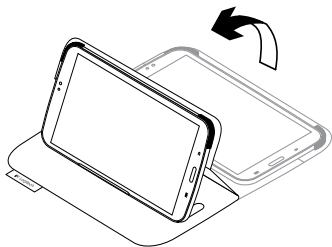

2. Samsung Galaxy Tab 3을 켭니다.


Samsung Galaxy Tab 3 사용을 마친 경우:

1. Samsung Galaxy Tab 3을 끕니다.
2. 폴리오를 닫습니다.


두 가지 보기 위치

폴리오는 미디어 감상과 탐색용의 두 가지 뷰를 제공합니다.

미디어 감상 시에는 편안한 각도로 Samsung Galaxy Tab 3을 거치합니다

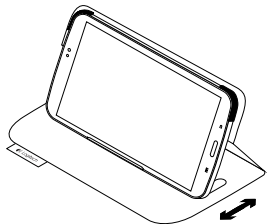


탐색하려면 측면을 따라 폴리오를 뒤로 접습니다.

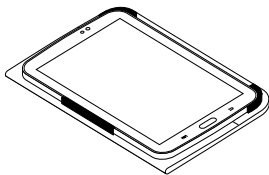


Samsung Galaxy Tab 3 분리

폴리오와 Samsung Galaxy Tab 3을 분리하려면 태블릿 홀더 모서리 중 하나를 뒤로 구부립니다.

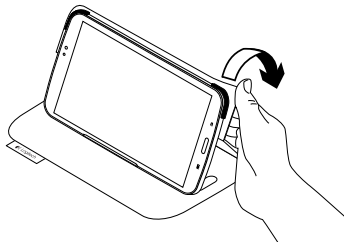

그런 다음 Samsung Galaxy Tab 3을 빼냅니다.

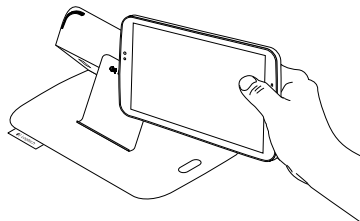

Product Central 방문

온라인상에서 제품에 대한 추가 정보와 지원을 확인할 수 있습니다. Product Central에는 폴리오에 관한 자세한 내용이 나와 있습니다.

www.logitech.com/support/folio-S37

설정 도움말, 사용 팁 및 추가 기능에 관한 정보를 온라인으로 찾아볼 수 있습니다.

Community Forums에서 다른 사용자들과 교류하면서 질문과 조언을 교환하고 솔루션을 공유할 수 있습니다.

다음과 같은 다양한 내용을 확인할 수 있습니다.

- 사용 지침
- 문제 해결
- 지원 커뮤니티
- 온라인 문서
- 보증 정보
- 예비 부품(해당되는 경우)

문제 해결

Samsung Galaxy Tab 3을 미디어 뷰 위치에 세울 수 없습니다.

- Samsung Galaxy Tab 3이 태블릿 홀더에 제대로 삽입되었고 시야각이 55°와 65° 사이인지 확인하십시오.

폴리오를 열어도 Samsung Galaxy Tab 3이 켜지지 않고 닫아도 슬립 모드로 전환되지 않습니다.

- Samsung Galaxy Tab 3(7.0")은 자동 켜기 및 슬립 모드 전환을 지원하지 않습니다. Samsung Galaxy Tab 3(7.0")을 켜서 사용하고, 마치면 다시 꺼야 합니다.

www.logitech.com/support/folio-S37



Korea	00798-601-8207
Hong Kong	800-966-992
Australia	1-800-025-544
Singapore	800-6011-372
New Zealand	0800-447-361



www.logitech.com

© 2013 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. Samsung, Galaxy and Tab are trademarks of Samsung Electronics Co., Ltd. Nexus and Android are trademarks of Google, Inc. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

621-000220.002