






Logitech® Wireless Combo MK345  
罗技® 无线键鼠套装 MK345




Setup Guide | 设置指南

English. . . . .	3	简体中文 . . . . .	7
------------------	---	----------------	---

## Know your product

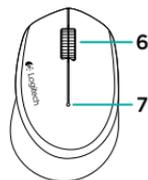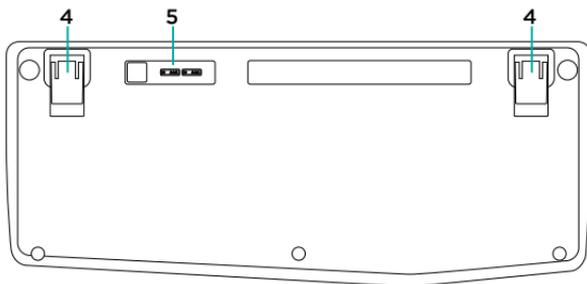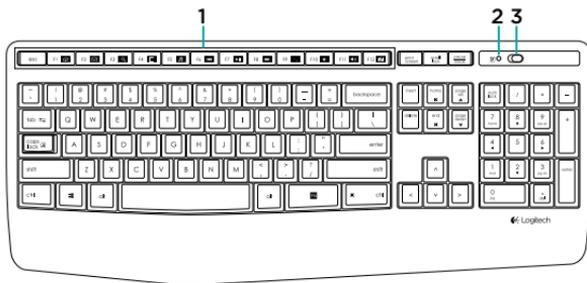


- |  |  |
|--|--|
| <ol style="list-style-type: none"> <li>1. F-keys</li> <li>2. Caps-lock LED</li> <li>3. On/off power switch</li> <li>4. Tilt-legs</li> <li>5. Battery door</li> </ol> | <ol style="list-style-type: none"> <li>6. Scroll wheel</li> <li>7. Battery indicator</li> <li>8. Receiver</li> <li>9. Product documentation</li> </ol> |
|--|--|

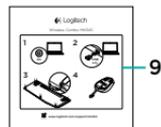


## Setting up your keyboard and mouse


1

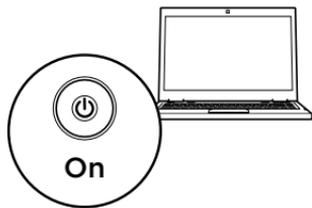

2

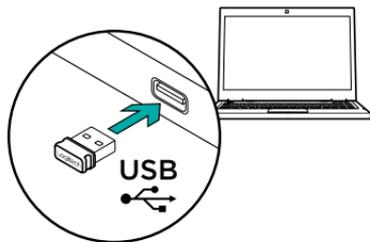

3

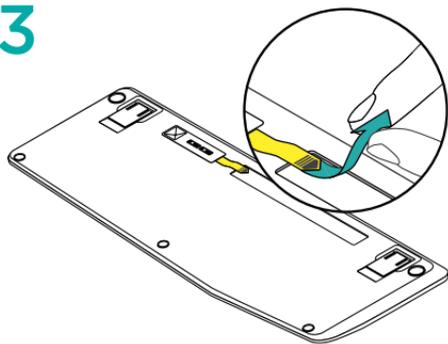


4



## Keyboard F-keys

User friendly enhanced F-keys let you launch applications easily. To use the enhanced functions, first press and hold the **FN** key, then press the F-key you want to use.

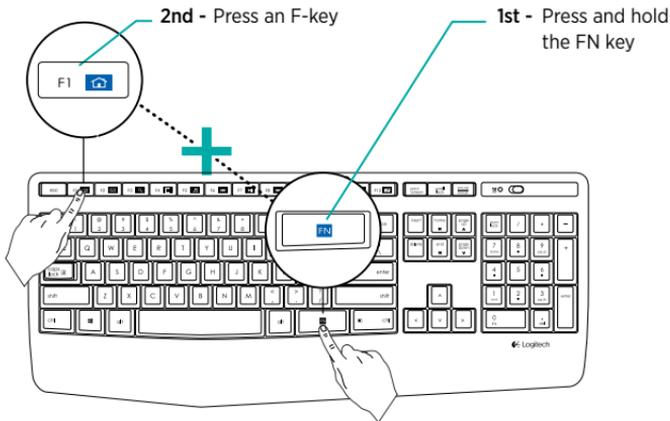

**FN** + **F1** =  Launch Web browser

**FN** + **F2** =  Launch Email application

**FN** + **F3** =  Search

**FN** + **F4** =  Launch calculator

**FN** + **F5** =  Launch media player

**FN** + **F6** =  Previous track

**FN** + **F7** =  Play/pause track

**FN** + **F8** =  Next track

**FN** + **F9** =  Mute

**FN** + **F10** =  Volume down

**FN** + **F11** =  Volume up

**FN** + **F12** =  Print screen

**Tip:** You can use the Logitech SetPoint™ software to reprogram **F1**, **F2**, and **F4** with your preferred features

## Visit Product Support

There's more information and support online for your product. Take a moment to visit Product Support to learn more about your new keyboard and mouse.

Browse online articles for setup help, usage tips, or information about additional features. If your keyboard has optional software, learn about its benefits and how it can help you customize your product.

Connect with other users in our Community Forums to get advice, ask questions, and share solutions.

At Product Support, you'll find a wide selection of content:

- Tutorials
- Troubleshooting
- Support community
- Software downloads
- Online documentation
- Warranty information
- Spare parts (when available)

Go to [www.logitech.com/support/mk345](http://www.logitech.com/support/mk345)

## Troubleshooting

### Keyboard and mouse not working

- Check your keyboard and mouse are powered on.
- Check that the receiver is securely plugged into a USB port on your computer.
- If the receiver is plugged into a USB hub, try plugging it directly into your computer.
- Try plugging the receiver into a different USB port closer to your keyboard and mouse.
- Remove any metallic objects between the receiver and your keyboard and mouse.
- Check that you pulled the battery tab out of your keyboard and mouse.
- Check the orientation of the batteries. The mouse uses one AA alkaline battery and the keyboard uses two AAA alkaline batteries.

---





## What do you think?

Please take a minute to tell us.


**Thank you for purchasing our product.**

[www.logitech.com/ithink](http://www.logitech.com/ithink)

## 了解您的产品

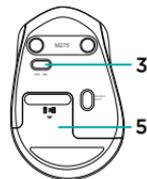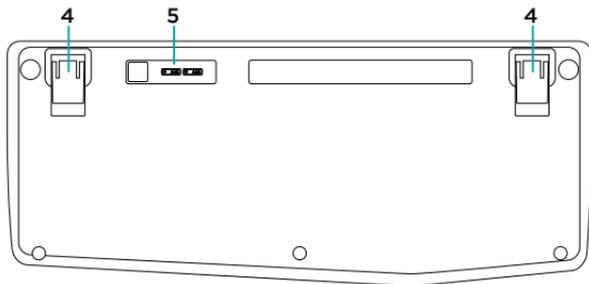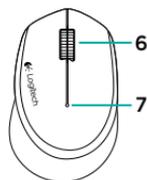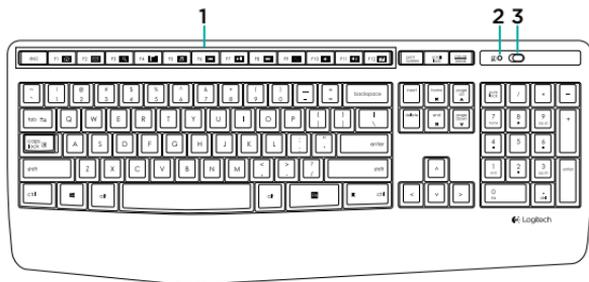


- |                      |          |
|----------------------|----------|
| 1. F 键               | 5. 电池盖   |
| 2. Caps-lock LED 指示灯 | 6. 滚轮    |
| 3. 电源开关按钮            | 7. 电池指示灯 |
| 4. 支架                | 8. 接收器   |
|                      | 9. 产品文档  |

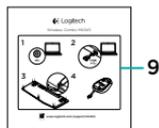


## 设置键盘和鼠标


1

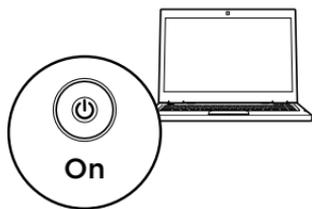


2

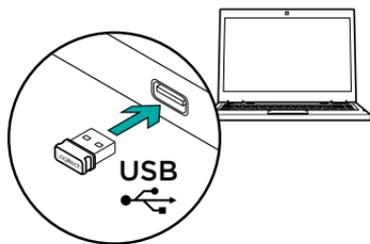

3

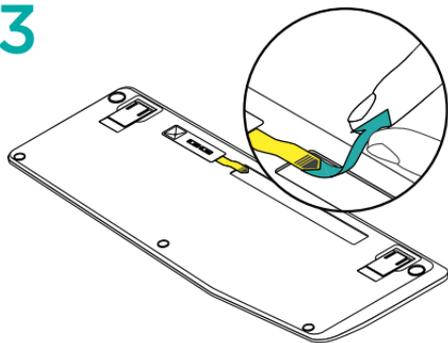


4

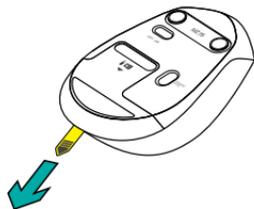

## 键盘 F 键

用户友好的增强型 F 键使您可轻松启动应用程序。要使用增强功能，请先按住 **FN** 键，然后再按想要使用的 F 键。

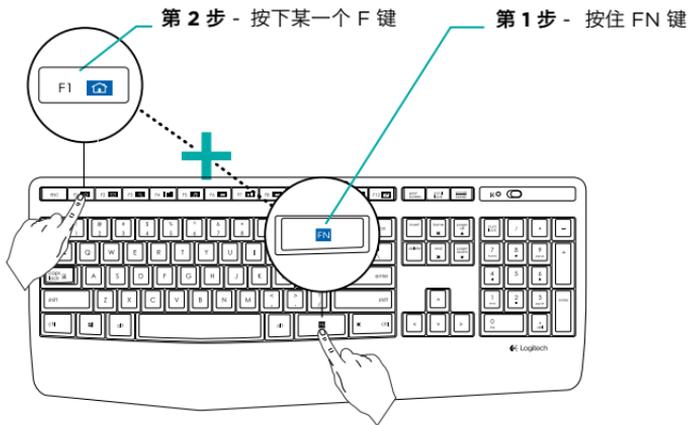

**FN** + **F1** = 启动 Web 浏览器

**FN** + **F2** = 启动电子邮件应用程序

**FN** + **F3** = 搜索

**FN** + **F4** = 启动计算器

**FN** + **F5** = 启动媒体播放器

**FN** + **F6** = 上一曲目

**FN** + **F7** = 播放/暂停曲目

**FN** + **F8** = 下一曲目

**FN** + **F9** = 静音

**FN** + **F10** = 调低音量

**FN** + **F11** = 调高音量

**FN** + **F12** = 全屏截图

**提示：** 您可以使用罗技 SetPoint™ 软件对 F1、F2 和 F4 重新编程以获得所需的功能

## 访问“产品支持”

我们的网站提供有关于本产品的详细信息和支持服务。请抽时间访问“产品支持”，了解关于新键盘和新鼠标的更多信息。

浏览在线文章，查看设置帮助、使用技巧或关于更多功能的信息。如果键盘有可选软件，请了解其优点以及如何帮助对键盘进行自定义。

通过“社区论坛”与其他用户交流，获得建议，提出问题，分享解决方法。

“产品支持”提供了广泛的内容选择：

- 教程
- 疑难解答
- 支持社区
- 软件下载
- 在线文档
- 保修信息
- 备用部件（若有供应）

访问 [www.logitech.com/support/mk345](http://www.logitech.com/support/mk345)

## 疑难解答

### 键盘和鼠标不能正常工作

- 检查键盘和鼠标是否已开启。
- 检查是否已将接收器稳固地插入电脑的 USB 端口。
- 如果接收器已插入 USB 集线器，则尝试将其直接插入电脑。
- 尝试将接收器插入到离键盘和鼠标较近的其他 USB 端口。
- 移开接收器与键盘和鼠标之间的任何金属物体。
- 检查是否已将键盘和鼠标上的电池标签拉出。
- 检查电池的朝向。本套装的鼠标使用一节 AA 碱性电池，键盘使用两节 AAA 碱性电池。

---

## 您对本产品有何感想？

欢迎拨冗告知我们。  
感谢您购买罗技产品。

[www.logitech.com/ithink](http://www.logitech.com/ithink)

## 产品中有毒有害物质或元素的名称及含量

根据中国<<电子信息产品污染控制管理办法>>

有毒有害物质或元素 Toxic or Hazardous Substances and Elements						
部件名称 Parts Name	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电缆线/电源 Cable/Adaptor	X	O	O	O	O	O
电路板组件 PWAs	X	O	O	O	O	O
塑料/其它部件 Plastic/Others parts	O	O	O	O	O	O
玻璃部件 Glass parts	X	O	O	O	O	O
金属部件 Metal parts	X	O	O	O	O	O
电池 Battery	X	O	O	O	O	O
<p>O = 表示该有害物质在该部件所有均质材料中的含量均在 SJ/T 2006-11 36 规定的限量要求以下。            X = 表示该有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 2006-11 36 规定的限量要求。            表中标有 " X " 的所有部件均符合欧盟 RoHS Recast 法规 65/2011- / E 指令。            此表显示 " 罗技科技有限公司 " 的电子信息产品部件中何处存在这些有毒有害物质。请注意，并非内装产品都包含上述所有部件。            注：环保使用期限的参考标准，取决于产品正常工作的温度和湿度等条件。</p>						





[www.logitech.com](http://www.logitech.com)

[www.logitech.com/support/mk345](http://www.logitech.com/support/mk345)

2014 Logitech. All rights reserved. Logitech, the Logitech logo, 罗技, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

版权所有 © 2014 年罗技。罗技、罗技标志、Logitech 和其他罗技商标均归罗技所有,并或已注册。所有其它商标 是其各自所有者的财产。罗技对于本手册中可能出现的任何错误不承担任何责任。本手册中包含的信息如有更改,恕 不事先通知。

621-000368.003