




Logitech® PTZ Pro Camera
罗技® 商务高清摄像头PTZ Pro
Setup Guide
设置指南



Contents / 目录

English.	3	简体中文	8
------------------	---	----------------	---

Know your product

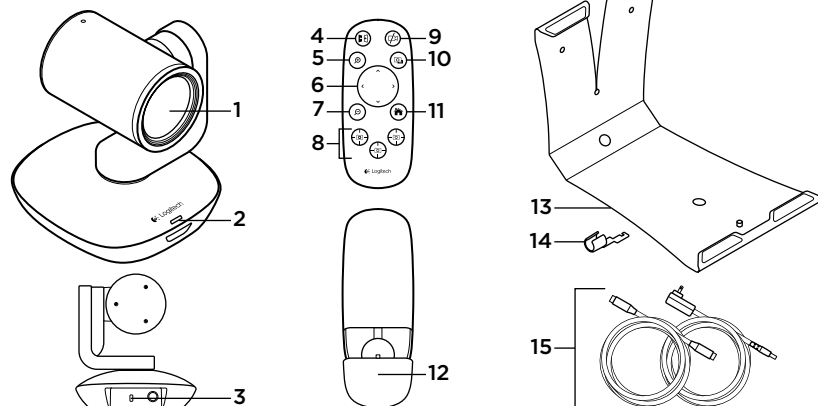

Camera

1. 10X lossless zoom
2. Camera LED
3. Kensington® Security Slot


Remote

4. Mirror
5. Zoom in
6. Pan and tilt
7. Zoom out
8. Camera presets 1, 2, and 3
9. Video mute
10. Far end control
11. Home
12. Remote battery door

Accessories

13. Camera mount
14. Cable lock
15. Cables

Set up your product

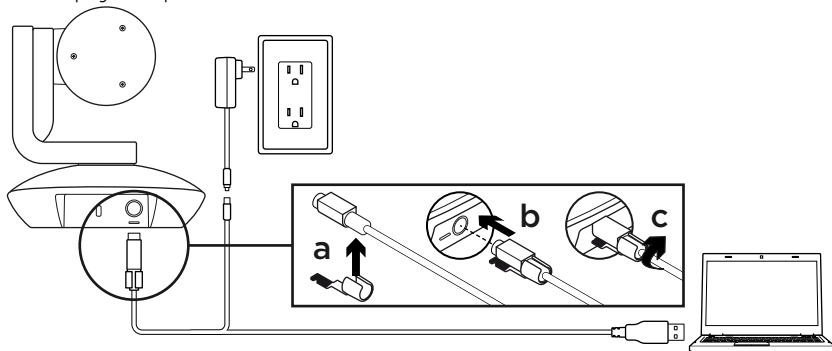

1. Set up camera on table, or using mount on table or wall.
2. Connect PTZ Pro camera (refer to diagram above).
3. Attach cable lock before plugging in cable to the camera port.
4. Connect to external power.
5. To start video from your PC or Mac application, connect the USB cable to your USB port.
6. The camera LED will flash to show that connection is taking place, and when completed, the camera head will rotate.
7. If these activities do not take place, try again and then consult Troubleshooting or call technical support.
8. Start your video call from your application. The LED on the camera will alight when streaming.

Visit Product Central

Discover your product's full potential. Get valuable information and usage tips by browsing easy-to-use FAQs. Find answers to product questions and get help setting up your product. See if there's software available for download that can enhance your product experience.

To enjoy all the benefits of your Logitech product, visit **www.logitech.com/support/ptz** and take advantage of Logitech's wide range of useful support services:

- Troubleshooting
- Diagnostics
- Firmware upgrades
- Support community
- Software downloads
- In-box documentation
- Warranty information
- Spare parts (if available)

Use your product

Video


- **Starting the video:** The video is controlled by the application and will start once the camera is selected and the video is started in the application. An LED will light when the video is streaming.
- **Pan and tilt** the camera using the controls on the remote control. Press once for incremental or press and hold for continuous pan or tilt. Caution: Do not manually rotate webcam head. Doing so may damage unit.
- **Zoom** the camera up to 10X by pressing the zoom button.
- **Home:** Select the Home button to return the default, out-of-box home position.
- **Camera Presets:** You can set up to 3 Camera Preset positions. First, position the camera using the remote control, and then press and hold one of the Camera Preset buttons for 3 seconds to save that position. You may return to your defined position at any time by pressing the Preset button once.

Use Preset 1 as your own defined “home” position. When the camera is reconnected to the PC, it will return to the position set in Preset 1. If no position is set for Preset 1, the camera will return to the default home position.

All three Presets are by default set to the out-of-box home.

- **Far end control:** By selecting this key and downloading the application from www.logitech.com/support/ptz, you may control the pan, tilt and zoom of any Logitech ConferenceCam product or C930e Webcam in supported applications. Camera selection and pan, tilt and zoom tools are also available from the downloadable application for PC as well as ability to disable this feature locally. Please visit the download page listed for more information.

Mounting your camera

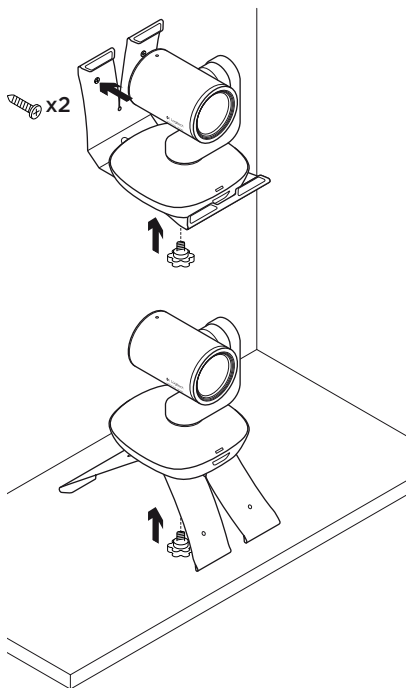

Changing the remote control battery

The PTZ Pro remote control runs on a Li-ion CR2032 battery. Battery life will vary based on usage.

Troubleshooting tips


Please visit www.logitech.com/support/ptz for troubleshooting tips, information on software tools and for a diagnostic tool to help troubleshoot issues you may have with your PTZ Pro.

What do you think?

Please take a minute to tell us.
Thank you for purchasing our product.

www.logitech.com/ithink

了解您的产品

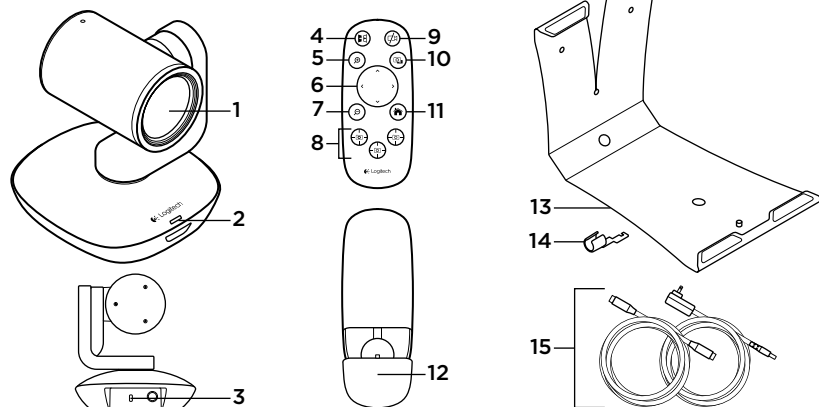

摄像头

1. 10X 无损变焦
2. 摄像头指示灯
3. Kensington® 防盗锁插孔


遥控

4. 镜像
5. 放大
6. 水平与垂直拍摄
7. 缩小
8. 摄像头预置
1、2 和 3
9. 视频静音
10. 远端控制
11. Home
12. 遥控器电池盖

配件

13. 摄像机底座
14. 线缆锁
15. 线缆

设置您的产品

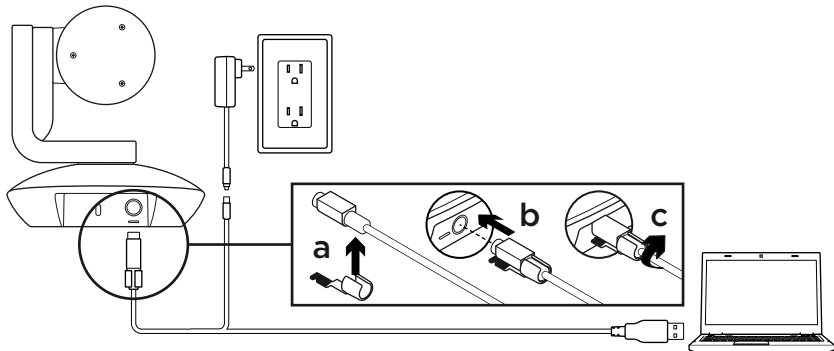

1. 将摄像头置于桌子上，或通过底座将摄像头支在桌子或墙上。
2. 连接 PTZ Pro 摄像头（参照上述示意图）。
3. 将线缆插入摄像头端口前，先安装线缆锁。
4. 连接外部电源。
5. 要使用 PC 或 Mac 应用程序开始视频，先将 USB 连接线连接到 USB 端口。
6. 摄像头指示灯闪烁，表示正在连接，连接成功后，摄像头旋转。
7. 若上述情况并未出现，再试一次，如果依然无效，请查看故障排除或致电技术支持。
8. 通过应用程序启动视频通话。播放时，摄像头上的指示灯将亮起。

访问产品中心

全面发掘产品潜力。请浏览常见问答集，了解相关的实用信息和技巧。查询有关产品问题的答案及产品安装帮助。查看是否有软件可供下载，提升产品体验。如需尽享罗技产品的所有优势，请访问 **www.logitech.com/support/ptz**，充分利用罗技体贴周到的支持服务：

- 故障排除
- 诊断
- 固件升级
- 支持社区
- 软件下载
- 包装盒内文件
- 保修信息
- 备用部件（若有供应）

使用您的产品

视频


- **观看视频:** 视频由应用程序控制，选择摄像头时启动并在应用程序中播放。视频播放时，指示灯亮起。
- **使用遥控器**上的控制装置可上下左右移动调整摄像头。单次按下可进行增量调节，按住不放可连续进行上下左右调整。
注意: 请勿手动旋转网络摄像头。否则可能损坏设备。
- **按下缩放键，可实现摄像头 10X 变焦。**
- **Home:** 选择 Home 按键可返回出厂设置的默认原位。
- **摄像头预置:** 最多可设置 3 个摄像头预置位置。首先，通过遥控器确定摄像头位置，之后按住其中一个摄像头预置键 3 秒钟以保存该位置。按下预置按钮，可随时恢复到自定义主页位置。

将预置 1 自定义为“原位”。当摄像头重新连接至 PC 时，将返回至预置 1 所设置的位置。如果预置 1 未设置位置，摄像头将返回至默认原位。

所有三个预置默认均设置为出厂原位。

- **远端控制:** 通过选择此键及在 www.logitech.com/support/ptz 下载应用程序，可在受支持的应用程序中控制罗技 ConferenceCam 产品或 C930e 网络摄像头，实现平移、倾斜和变焦功能。通过 PC 下载的应用程序可以实现摄像头选择及平移、倾斜和变焦功能，同时也可以在本地上禁用该功能。请访问下载页面查看更多信息。

安装摄像头

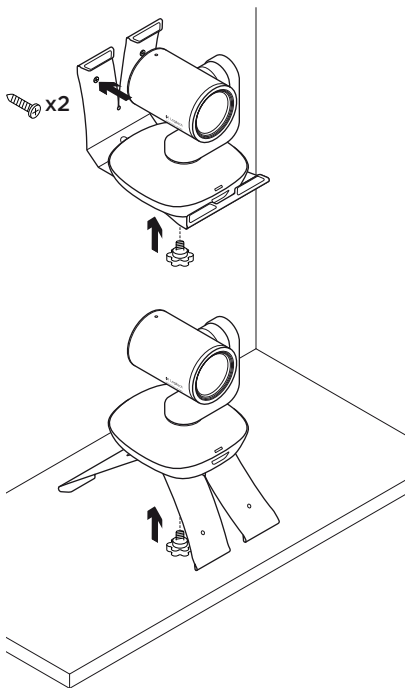

更换遥控器电池

PTZ Pro 遥控器使用 CR2032 锂离子电池。电池寿命依使用情况而异。

故障排除技巧

请访问 www.logitech.com/support/ptz, 查看故障排除技巧、软件工具信息及诊断工具, 以帮助您解决 PTZ Pro 的相关问题。

您对本产品有何感想?

欢迎拨冗告知我们。
感谢您购买罗技产品。

www.logitech.com/ithink

Table of Toxic and Hazardous Substances/Elements and their Content

产品中有毒有害物质或元素的名称及含量
根据中国<<电子信息产品污染控制管理办法>>

Webcam 网络摄像头						
有毒有害物质或元素						
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电缆 Cable	X	○	○	○	○	○
电路板组件 PWAs	X	○	○	○	○	○
塑料外壳 Plastic enclosure	○	○	○	○	○	○
塑料部件 Plastic parts	○	○	○	○	○	○
镜头 Lens	○	○	○	○	○	○
○ = 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。 X = 表示该有毒有害物质至少在该部件的某一均质的含量超出 SJ/T11363-2006 标准规定的限量要求。 表中标有“X”的所有部件都符合欧盟 RoHS 法规 “欧洲议会和欧盟理事会 2003 年 1 月 27 日关于电子电器设备中限制使用某些有害物质的 2002/95/EC 号指令” 注：环保使用期限的参考标取决于产品正常工作的温度和湿度等条件						





www.logitech.com

© 2015 Logitech. All rights reserved. Logitech, 罗技, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. *Bluetooth*® is a registered trademark of Bluetooth SIG, Inc. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

版权所有 © 2015 年罗技。罗技、罗技标志、Logitech 和其他罗技商标均归罗技所有，并或已注册。

Bluetooth® 文字商标和标志由 Bluetooth SIG, Inc. 所有其它商标均是其各自所有者的财产。

罗技对于本手册中可能出现的任何错误不承担任何责任。本手册中包含的信息如有更改，恕不事先通知。

620-006478.002