 


MX MASTER

WIRELESS MOUSE | 无线鼠标

www.logitech.com/MXMaster

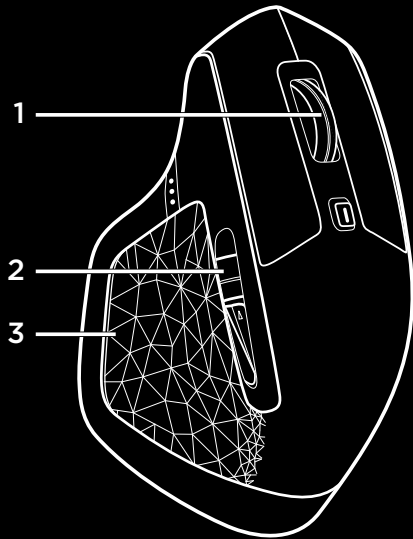

English

Your **MX MASTER™**

1. Auto-shift scroll wheel
2. Unique thumb wheel
3. Gesture button

To unlock and to discover the true potential of these 3 controls and more, install the Logitech Options software, available at:

www.logitech.com/download/MXMaster

简体中文



您的 **MX MASTER™**

1. 自动切换滚轮
2. 别致的拇指轮
3. 手势按钮

安装 Logitech Options 软件解锁并挖掘这 3 个及更多控件的潜在功能，安装软件请访问：

www.logitech.com/download/MXMaster

Battery disposal | 电池弃置

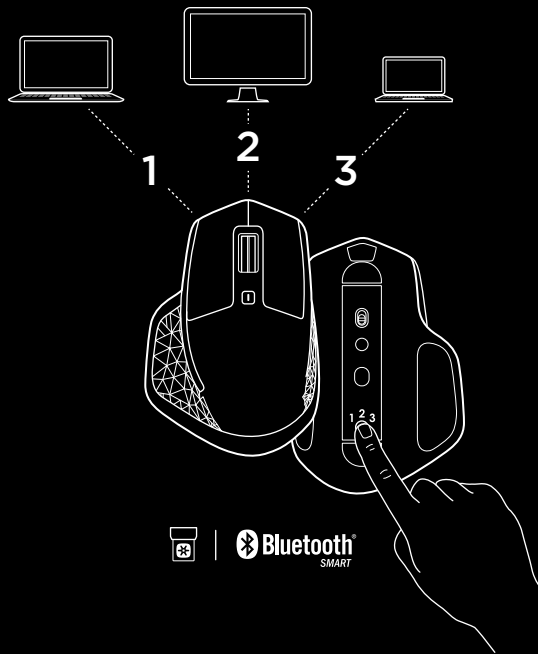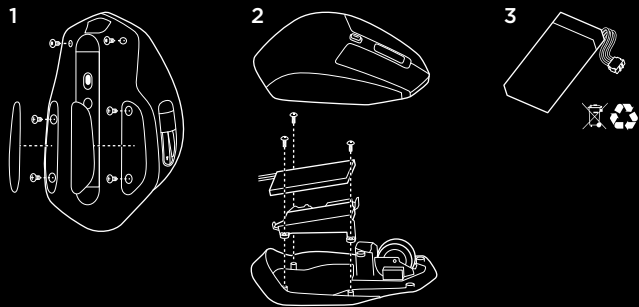  

English

Dual connectivity

Connect via included Logitech Unifying™ receiver or via *Bluetooth*® Smart.

Easy-Switch™

Pair up to 3 devices and easily switch between them with the press of a button.

简体中文

双重连接

通过随附的罗技® Unifying™ 接收器或蓝牙智能建立连接。

易于切换

最多可与 3 台设备配对，按下按钮可在装置间轻松切换。

www.logitech.com/MXMaster

© 2015 Logitech. All rights reserved. Logitech, the Logitech logo, 罗技, and other Logitech marks are owned by Logitech and may be registered. Registered in the U.S. and other countries. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

版权所有 © 2015 年罗技。罗技、罗技标志、Logitech 和其他罗技商标均归罗技所有，并已注册。所有其它商标均是各自所有者的财产。罗技对于本手册中可能出现的任何错误不承担任何责任。本手册中包含的信息如有更改，恕不事先通知。

620-006433.004