



Getting started with
快速入门


Logitech® Stereo Headset H151
罗技® 立体声耳机麦克风 H151




English. 3

简体中文 7

 What's in the box

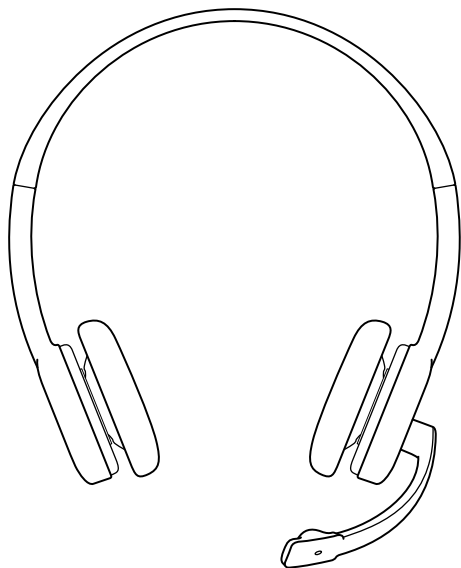


Headset features

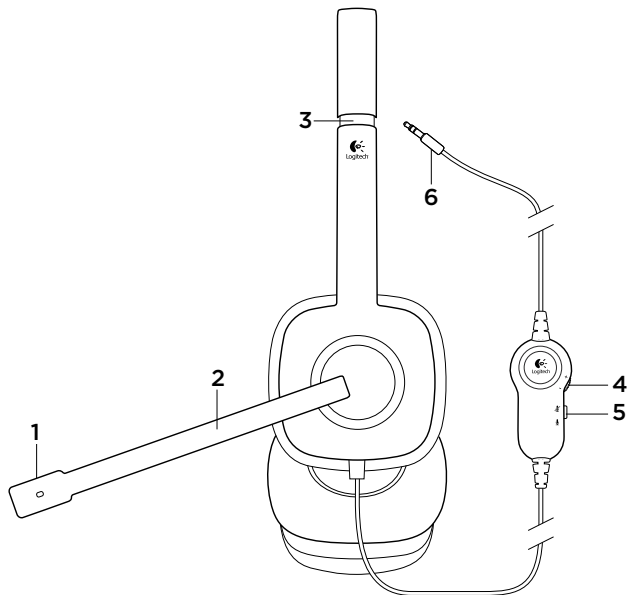 

- 1. Noise-canceling microphone
- 2. Rotating microphone boom
- 3. Adjustable headband

- 4. Volume control
- 5. Mute switch
- 6. Single Headphone and Microphone plug

 Setup

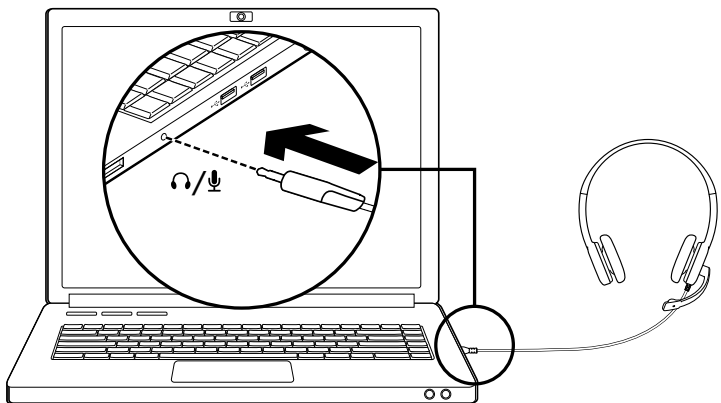

Connect the headset

Insert the 3.5 mm plug into the single headphone & microphone jack on your computer, tablet or smartphone.


Help with setup: headset not working?


- Check cable connection between the headset and your computer.
- If your computer is using two separate jacks for microphone and headphone, a 1-to-2 adapter is necessary to use all the features of this headset
- Adjust the volume and microphone settings to an audible level in the application and operating system.
- Try restarting the media application.
- Close all media applications and check whether your computer soundcard has been selected in your Windows operating system for playback and voice.

Windows Vista and Windows 7: Go to Start/Control Panel/Sounds/Playback Devices tab. Choose your sound card and click OK. Go to the Recording devices tab, choose your sound card, and click OK. Restart the media application.


Windows 8: From Start Menu, select Desktop tile. From Charms menu, select Settings > Control Panel > Hardware and Sound. Go to Sound > Playback tab. Choose your sound card and click OK. Go to the Recording devices tab, choose your sound card, and click OK. Restart the media application.

  For additional assistance, please visit www.logitech.com/support.

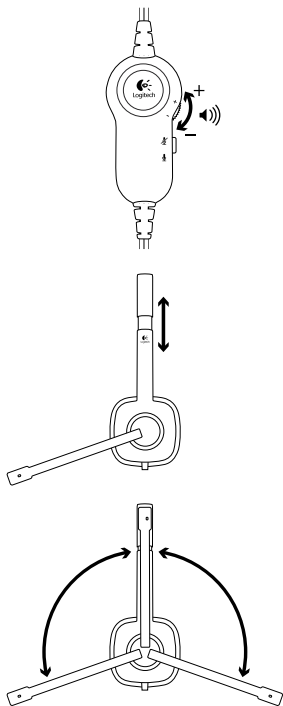

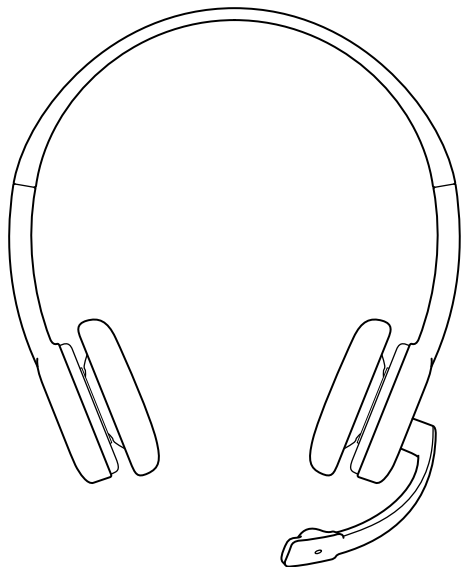 包装内容

 
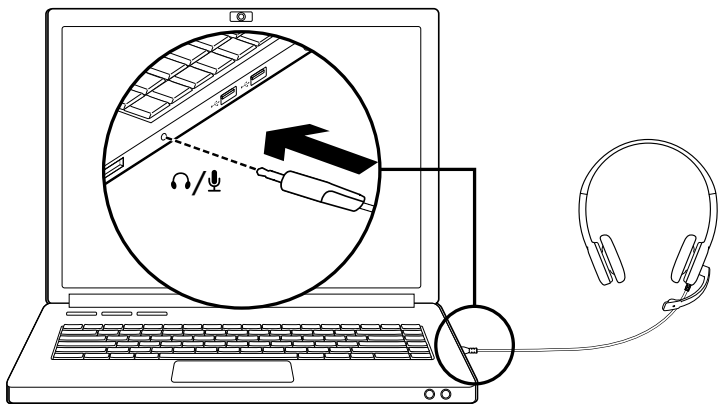 
耳机麦克风功能

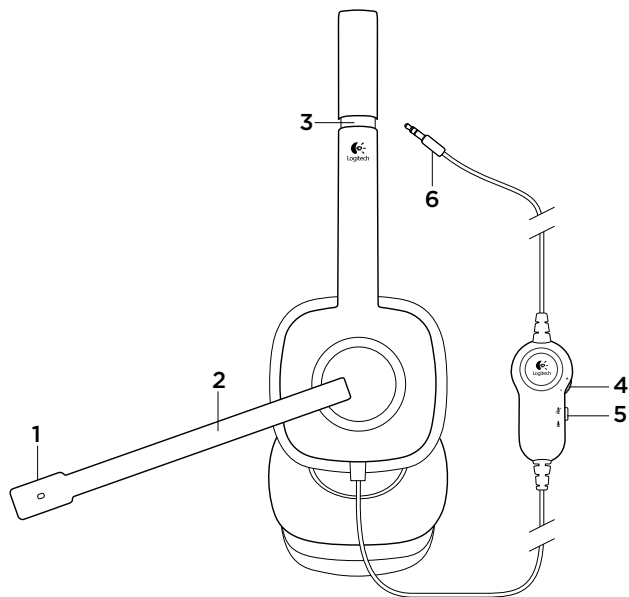

1. 具备噪音消除功能的麦克风
2. 旋转式麦克风杆
3. 可调节头带

4. 音量控制
5. 静音开关
6. 耳机与麦克风复合插头

✕ 设置



连接耳机麦克风

将 3.5 毫米插头插入计算机、平板电脑或智能手机上的耳机和麦克风复合插孔中。


设置帮助: 耳机麦克风无法正常工作?

- 请检查耳机麦克风与计算机之间的连接情况。
- 如果您的计算机使用两个单独的插孔来连接耳机和麦克风，则需使用 1-转-2 转接器才能使用此耳机麦克风的全部功能
- 在应用程序和操作系统中将音量和麦克风设置调整至适当音量。
- 尝试重新启动媒体应用程序。
- 关闭所有媒体应用程序并检查是否已在 Windows 操作系统中将您的声卡选为默认声音播放和语音设备。

Windows Vista 和 Windows 7: 依次单击 "开始" / "控制面板" / "声音" / "播放设备" 选项卡。选择声卡后，单击 "确定"。单击 "录制设备" 选项卡，选择声卡，然后单击 "确定"。重新启动媒体应用程序。

Windows 8: 从 "开始" 菜单选择 "桌面" 磁贴。从 Charm 菜单依次选择 "设置" > "控制面板" > "硬件和声音"。依次选择 "声音" > "播放" 选项卡。选择声卡并单击 "确定"。单击 "录制设备" 选项卡，选择声卡，然后单击 "确定"。重新启动媒体应用程序。

 有关更多帮助信息，
请访问 www.logitech.com/support。

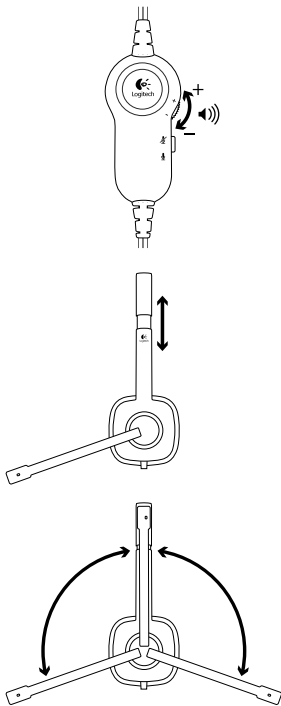

产品中有害物质的名称及含量

根据中国<<电子电气产品有害物质限制使用标识要求>>

有害物质 Hazardous Substances						
部件名称 Parts Name	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电缆线/电源 Cable/Adaptor	X	0	0	0	0	0
电路板组件 PWAs	X	0	0	0	0	0
塑料/其它部件 Plastic/Others parts	0	0	0	0	0	0
玻璃部件 Glass parts	X	0	0	0	0	0
金属部件 Metal parts	X	0	0	0	0	0
电池 Battery	X	0	0	0	0	0
本表格依据 SJ/T 11364 的规定编制。 0 = 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572规定的限量要求以下。 X = 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572规定的限量要求。 表中标有 "X" 的所有部件均符合欧盟 RoHS Recast法规 65/2011-/EU 指令。 此表显示"罗技科技有限公司"的电子电气产品部件中何处存在这些有害物质。请注意，并非内装产品都包含上述所有部件。 注：环保使用期限的参考标准，取决于产品正常工作的温度和湿度等条件。						





www.logitech.com/support/H151

© 2015 Logitech. All rights reserved. Logitech, 罗技, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

版权所有 © 2015 年罗技。罗技、罗技标志、Logitech 和其他罗技商标均归罗技所有，并或已注册。罗技对于本手册中可能出现的任何错误不承担任何责任。本手册中包含的信息如有更改，恕不事先通知。

621-000491.002