



Logitech® Stereo Headset H111

罗技® 立体声耳机麦克风 H111

Setup Guide

设置指南



English.	3	简体中文	8
------------------	---	----------------	---

 What's in the box

Thank you!

Thank you for purchasing the Logitech® Stereo Headset H111. Plug your new headset into your computer, tablet or smartphone jack and use it with your favorite Internet calling application, media players, or game.

Setup


1



2



3

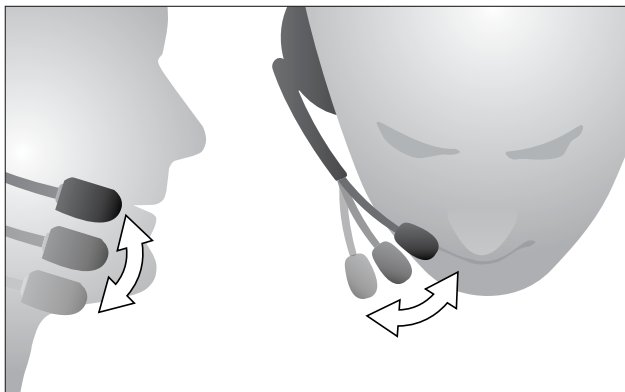

Help with setup:

Something does not sound right? No sound at all?

- Ensure the plug is well inserted into the single headphone & microphone jack on your computer, tablet or smartphone.
- Increase the input and output audio volumes in the operating system and application.
- Unplug USB audio devices from your computer.
- Set your computer's sound card as the default audio device in the Sounds Control Panel, and then restart the application you wish to use with the headset.

Visit www.logitech.com/support for instructions configuring your audio devices within the operating system.

Protect your hearing:

Listening advice to avoid hearing damage

Listening via headphones, earbuds or headsets at a high volume may cause permanent hearing loss to occur. The louder the volume, the less time is required before your hearing could be affected.

To establish a safe volume level:

- Start your equipment with the volume control at its lowest setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.
- Avoid setting the volume at a level that prevents you from hearing conversations and other similar noises around you.

Once you have established a comfortable sound level, leave it there. If you experience a ringing in your ears, discomfort or muffled speech, reduce the volume or stop listening and have your hearing checked.

See the product support page on the Logitech website www.logitech.com for additional information.

包装内容



谢谢！

感谢您购买罗技®立体声耳机麦克风 H111。将您新购的耳机麦克风插入电脑、平板电脑或智能手机插孔，与您最喜欢的网络通话应用程序、媒体播放器或游戏配合使用。

✕ 设置


1



2



3

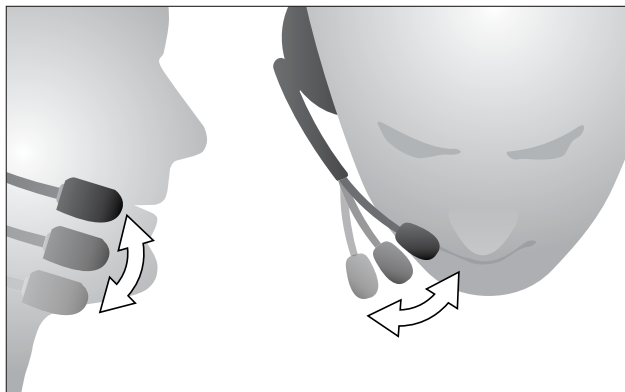

设置帮助:

声音听起来有些异常？ 根本没有声音？

- 将插头牢牢插入电脑、平板电脑或智能手机上的耳机和麦克风复合插孔中。
- 在操作系统与应用程序中提高输入与输出的音频音量。
- 将 USB 音频设备从电脑上拔出。
- 在“声音控制”面板中，将电脑声卡设置成默认的音频设备，
- 然后重新启动您想用耳机麦克风配合使用的应用程序。

请访问 www.logitech.com/support 了解有关配置操作系统音频设备的信息。

保护您的听力：

防止听力受损的收听建议

使用各类耳机、耳塞或耳机麦克风收听时，如果音量过大，可能会造成听力的永久丧失。音量越大，对听力的影响就越大。

调节至适当的安全音量：

- 打开设备时将音量控制调到最低。
- 慢慢增大音量，直到声音听起来舒适、清晰且不失真即可。
- 音量的大小以不妨碍听到对话及其它类似的环境杂音为宜。

调到适当的音量后，保持不变。如果出现耳鸣、不适或声音失真的现象，请调低音量或停止收听并检查听力状况。

有关更多信息，请浏览罗技网站 www.logitech.com 上的“产品支持”页面。



www.logitech.com/support/H111

© 2015 Logitech. All rights reserved. Logitech, the Logitech logo, 罗技, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

版权所有 © 2015 年罗技。罗技、罗技标志、Logitech 和其他罗技商标均归罗技所有，并或已注册。在美国和其他国家注册的商标。所有其它商标均是其各自所有者的财产。罗技对于本手册中可能出现的任何错误不承担任何责任。本手册中包含的信息如有更改，恕不事先通知。

621-000495.003