



HINGE

Flexible Case | iC0742 灵活的保护套

iPad mini 4




Setup Guide | 设置指南

Contents

English.	3	简体中文	8
------------------	---	----------------	---

Know your product

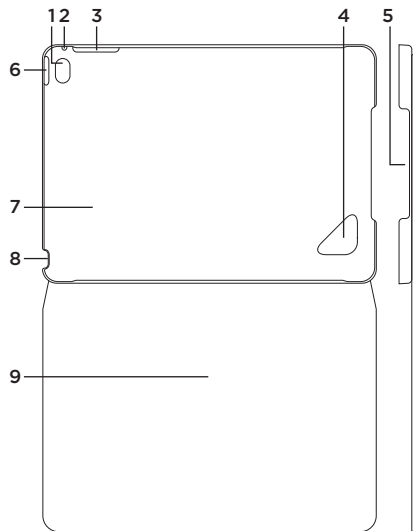


1. Camera hole
2. Microphone hole
3. Cut out for access to volume buttons
4. Detach hole
5. Cut out for access to charging port
6. Cut out for access to on/off button
7. iPad mini holder
8. Cut out for access to headphone socket
9. Protective folio


Setting up and using the folio with your iPad mini

Setting up your folio

1. Open the folio and insert your iPad mini into the protective shell:

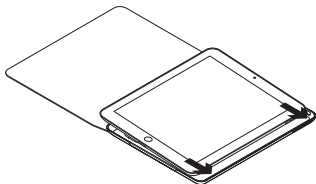


2. Push your iPad mini down:

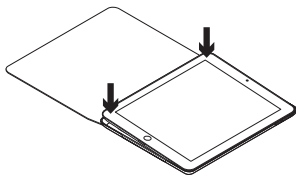


Using your iPad

Opening the folio wakes your iPad mini:

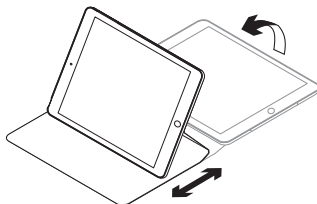


Closing the folio puts your iPad mini into sleep mode:

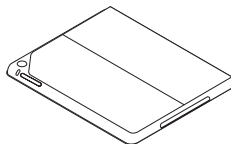


Two viewing positions

The folio provides two viewing positions—one for viewing media and another for browsing.


To view media, open your iPad mini:

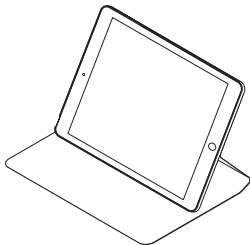

In the viewing position you can adjust your iPad mini to any angle you feel comfortable with:

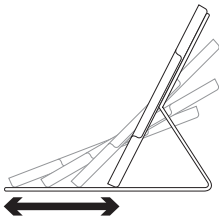


To browse, lie your iPad mini flat:

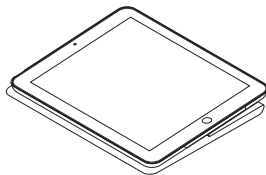


The browsing position lets you use your iPad mini easily with one hand.

Detaching your iPad mini

1. Push a finger through the hole in the back of the iPad mini holder to release your iPad mini:

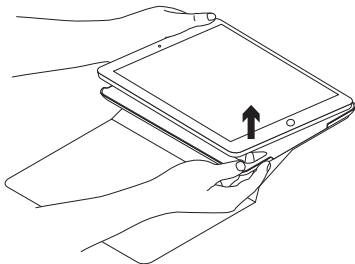

2. Using your other hand, remove your iPad mini from the holder:

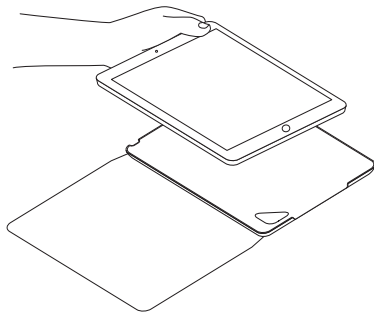

Visit Product Central

There's more information and support online for your product. Take a moment to visit Product Central to learn more about your new folio.

www.logitech.com/support/hinge-mini4

Browse online articles for setup help, usage tips, and information about additional features.

Connect with other users in our Community Forums to get advice, ask questions, and share solutions.

Find a wide selection of content including:

- Tutorials
- Troubleshooting
- Support community
- Online documentation
- Warranty information
- Spare parts (when available)

Troubleshooting

My iPad mini won't wake when I open the folio, and doesn't go into sleep mode when I close it.

- Make sure your iPad mini is inserted in the iPad mini holder the right way round. When your iPad mini is inserted correctly, the camera on your iPad mini should be lined up with the camera access hole.


What do you think?

Please take a minute to tell us.

Thank you for purchasing our product.

www.logitech.com/ithink

了解您的产品

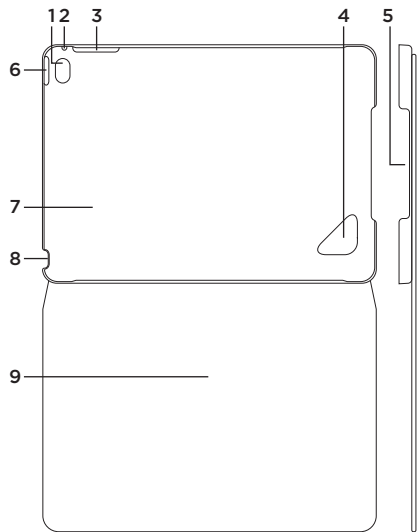


1. 摄像头孔位
2. 麦克风孔位
3. 音量按钮开孔
4. 拆卸孔
5. 充电端口开孔
6. 开/关按钮开孔
7. iPad mini 支架
8. 耳机插口开孔
9. 保护套


在 iPad mini 上设置和使用保护套

设置您的保护套

1. 打开保护套，将 iPad mini 插入保护壳：

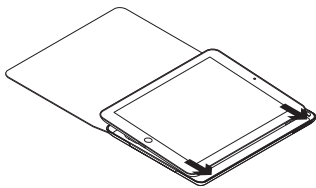


2. 向下推入 iPad mini：

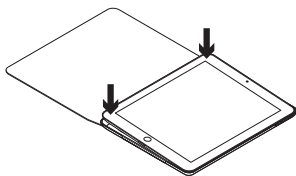


使用 iPad

打开保护套即可唤醒 iPad mini：

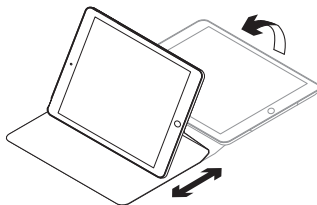


闭合保护套 iPad mini 即进入休眠模式：

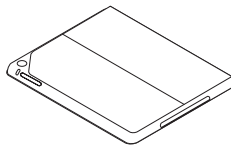


两种放置方式

保护套提供两种放置方式：一种用于媒体观看，一种用于浏览。


如要观看媒体，打开 iPad mini：

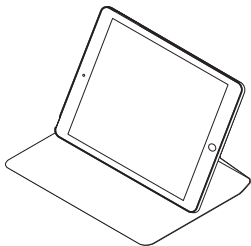

在观看位置，可将 iPad mini 调节至任何您感觉舒适的角度：

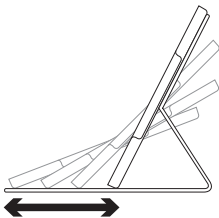



如要浏览，将 iPad mini 平放：

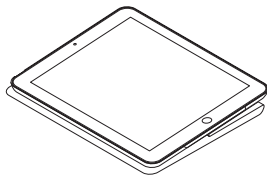

在浏览位置，可单手轻松操作 iPad mini。

卸下 iPad mini

1. 用一根手指穿过 iPad mini 支架背部的孔以将其推出：
2. 用另一只手将 iPad mini 从支架取下：

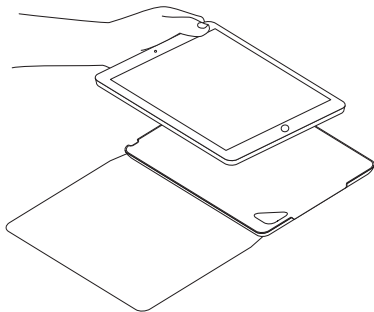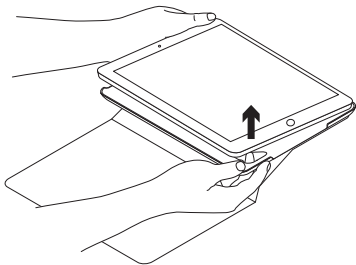

访问“产品中心”

我们的网站提供有关于本产品的详细信息和支持服务。请抽时间访问“产品中心”，了解关于新保护套的更多信息。

www.logitech.com/support/hinge-mini4

浏览在线文章，查看安装帮助、使用技巧以及关于更多功能的信息。

通过“社区论坛”与其他用户交流，获得建议，提出问题，分享解决方法。

“社区论坛”涵盖众多内容，其中包括：

- 教程
- 疑难解答
- 支持社区
- 在线文档
- 保修信息
- 备用部件（若有供应）

疑难解答

打开保护套无法唤醒 iPad mini，闭合保护套也无法使其进入休眠模式。

- 确保将 iPad mini 以正确的方式插入 iPad mini 支架中。

在 iPad mini 正确插入的情况下，iPad mini 上的摄像头应对准摄像头通孔。

您对本产品有何感想？

欢迎拨冗告知我们。

感谢您购买罗技产品。

www.logitech.com/ithink



www.logitech.com

www.logitech.com/support/hinge-mini4

© 2016 Logitech. Logitech, Logi, 罗技 and other Logitech marks are owned by Logitech and may be registered. iPad and iPad mini are trademarks of Apple Inc., registered in the U.S. and other countries. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

版权所有 © 2016 年罗技。罗技、Logi 和其他罗技商标均归罗技所有，并或已注册。Apple 和 iPad 和 iPad mini 是 Apple Inc. 在美国和其他国家注册的商标。所有其它商标均是其各自所有者的财产。罗技对于本手册中可能出现的任何错误不承担任何责任。本手册中包含的信息如有更改，恕不事先通知。

621-000694.002