




Logitech® Wireless Mouse M545 / M546  
罗技® 无线鼠标 M545 / M546

Setup Guide  
设置指南




## Contents / 目录


|                  |   |
|------------------|---|
| English. . . . . | 3 |
| 简体中文 . . . . .   | 9 |

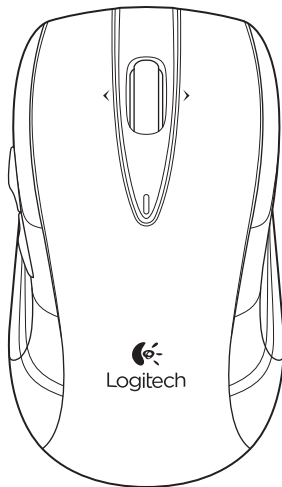


# 1

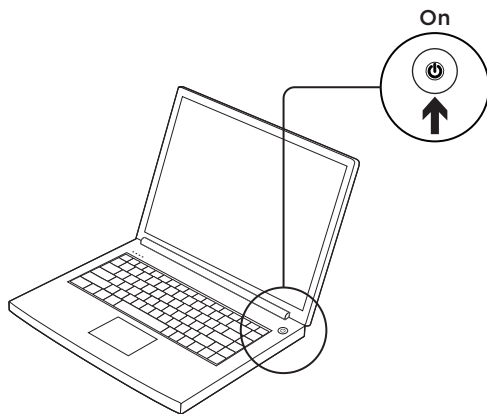

# 2

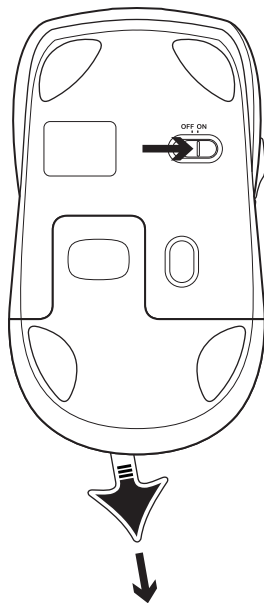


# 3

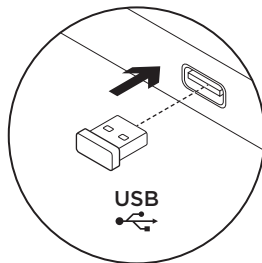

## Advanced features:

Software is optional for this mouse!  
Download the free mouse software  
at [www.logitech.com/support/m545](http://www.logitech.com/support/m545)  
or at [www.logitech.com/support/m546](http://www.logitech.com/support/m546)  
to customize button functions, adjust speed  
of tracking and scrolling.

**Note:** If other USB 3.0 devices are in use,  
please try to plug Pico receiver into other  
USB port at a distance.

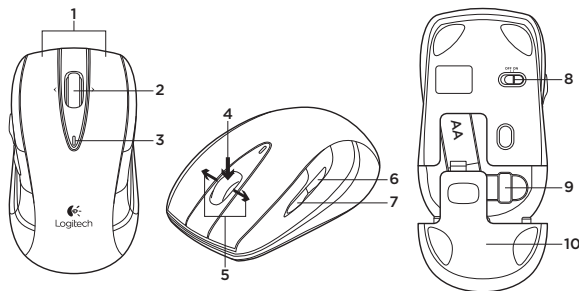

## Features

- 1. Left and right mouse buttons**
- 2. Scroll wheel**
- 3. Battery LED**—Flashes green when mouse is powered on, and flashes red when the battery power is low.
- 4. Middle button**—The function of this button depends on your operating system and the application being used. For example, if you are browsing the Internet in Windows and click on a link using the Middle button, typically the link opens in a new tab.
- 5. Tilt button**—Tilt left/right for side to side scrolling.\*
- 6. Side button**—Go backward\*
- 7. Side button**—Go forward\*
- 8. On/off button**
- 9. Pico receiver storage**—When the mouse is not in use, you can store the Pico receiver inside the mouse.
- 10. Battery door**

\* On MacOS, software is required to get the functions.

## The Logitech® Unifying receiver

### **Plug it. Forget it. Add to it.**

Your new Logitech product ships with a Logitech® Unifying receiver. Did you know you can add a compatible Logitech wireless device that uses the same receiver as your current Logitech Unifying product?

### **Are you Unifying-ready?**

If you have a Logitech wireless device that's Unifying-ready, you can pair it with additional Unifying devices. Just look for the orange Unifying logo on the new device or its packaging. Build your ideal combo. Add something. Replace something. It's easy, and you'll use only one USB port for up to six devices.

### **Getting started is easy**

If you're ready to pair your device(s) via Unifying, here's what you need to do:

1. Make sure your Unifying receiver is plugged in.
2. If you haven't already, download the Logitech® Unifying software from [www.logitech.com/unifying](http://www.logitech.com/unifying).
3. Start the Unifying software\* and follow the onscreen instructions to pair the new wireless device with your existing Unifying receiver.

**\*Go to Start / All Programs / Logitech / Unifying / Logitech Unifying Software**


## Help with setup:

### Mouse not working


- Is the mouse powered on?
- Is the Pico receiver securely plugged into a computer USB port? Try changing USB ports.
- If the Pico receiver is plugged into a USB hub, try plugging it directly into a USB port on your computer.
- Try moving the Pico receiver to a USB port closer to the mouse.
- Remove metallic objects between the mouse and the Pico receiver.
- Check the orientation of the battery inside the mouse. Replace the battery if necessary. The mouse uses one AA alkaline battery.
- Try reconnecting the mouse and Pico receiver using the Logitech Unifying software. (Refer to the Unifying section in this guide.)
- If other USB 3.0 devices are in use, try plugging Pico receiver into other USB port at a distance.

Windows® is a trademark of the Microsoft group of companies.


# 1

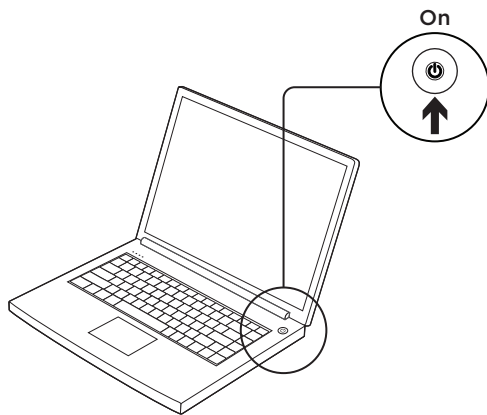

# 2

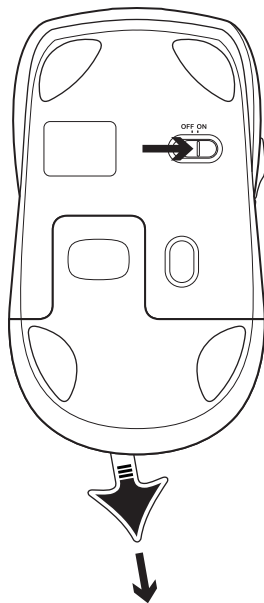


# 3

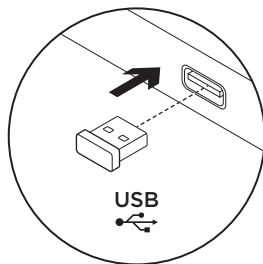

## 高级功能:

可选择为此鼠标安装软件!  
可在 [www.logitech.com/support/m545](http://www.logitech.com/support/m545)  
可在 [www.logitech.com/support/m546](http://www.logitech.com/support/m546)  
下载免费鼠标软件, 以自定义按键功能并调整跟踪和滚动速度。

**注意:** 如果正在使用其他 USB 3.0 设备, 请尝试将微型接收器插入一定距离以外的其他 USB 端口。

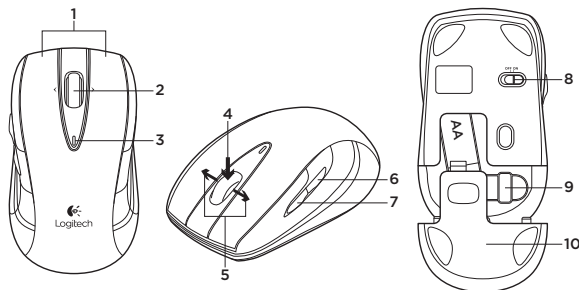

## 功能

1. 左/右鼠标按键
2. 滚轮
3. 电池 LED 指示灯 — 鼠标电源处于开启状态时闪烁绿灯，电池电量低时闪烁红灯
4. 中键—此键的功能取决于您的操作系统和所使用的应用程序。例如，如果您在 Windows 系统中浏览网页并使用“中键”点击链接，则链接通常会在新的标签中打开。
5. 倾斜按钮—向左/右倾斜按钮实现侧向滚动。\*
6. 侧边按钮—后退\*
7. 侧边按钮—前进\*
8. 开启/关闭按钮
9. 微型接收器的收存 — 鼠标处于停用状态时，可将微型接收器收存到鼠标内。
10. 电池盖

\* 使用 MacOS 时，需下载软件才能启用此功能。

## 罗技 Unifying™ 优联接收器

### 即插 即忘、一联百通。

全新的罗技产品将随附 Unifying™ 优联接收器。您知道吗，您可以将兼容的罗技无线设备添加到现有罗技 Unifying™ 优联产品正在使用的接收器上。

### 您已准备好开始使用 Unifying™ 优联了吗？

如果您有可以使用 Unifying™ 优联的罗技无线设备，您可以将该设备与其他 Unifying™ 优联设备配对使用。只需确认新设备或其包装上有橙色的 Unifying™ 优联徽标。打造您的理想组合。添加设备。替换设备。这很简单，而且您只需一个 USB 端口就可连接多达六个设备。

### 简单入门

如果您已准备好通过 Unifying™ 优联配对使用您的设备，您需要：

1. 确认已插入 Unifying™ 优联接收器。
2. 如果您还没有下载罗技® Unifying™ 优联软件，请访问 [www.logitech.com/unifying](http://www.logitech.com/unifying) 下载该软件。
3. 启动罗技 Unifying™ 优联®并按照屏幕上的说明进行操作，将新的设备与现有的 Unifying™ 优联接收器配对。

\*依次单击“开始” / “所有程序” / “罗技” / “Unifying™优联” / “罗技 Unifying™ 优联软件”

## 设置帮助： 鼠标不运作

- 鼠标是否已接通电源？
- 微型接收器是否已牢固插入电脑的 USB 端口？尝试更换 USB 端口。
- 如果微型接收器已插入 USB 集线器，则尝试将其直接插入电脑的 USB 端口。
- 尝试将微型接收器移至离鼠标较近的 USB 端口。
- 移除鼠标和微型接收器之间的金属物体。
- 检查鼠标内的电池方向。如有必要，请更换电池。本鼠标使用一节 AA 碱性电池。
- 尝试使用罗技 Unifying™ 优联软件重新连接鼠标和微型接收器。（请参考此指南的 Unifying™ 优联部分。）
- 如果正在使用其他 USB 3.0 设备，则尝试将微型接收器插入一定距离以外的其他 USB 端口。

## 产品中有害物质的名称及含量

根据中国<< 电子电气产品有害物质限制使用标识要求>>

| 有害物质<br>Hazardous Substances                                                                                                                                                                                                                                                             |           |           |           |                 |               |                 |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|-----------|-----------|-----------------|---------------|-----------------|
| 部件名称<br>Parts Name                                                                                                                                                                                                                                                                       | 铅<br>(Pb) | 汞<br>(Hg) | 镉<br>(Cd) | 六价铬<br>(Cr(VI)) | 多溴联苯<br>(PBB) | 多溴二苯醚<br>(PBDE) |
| 电缆线/电源 Cable/Adaptor                                                                                                                                                                                                                                                                     | X         | 0         | 0         | 0               | 0             | 0               |
| 电路板组件 PWAs                                                                                                                                                                                                                                                                               | X         | 0         | 0         | 0               | 0             | 0               |
| 塑料/其它部件 Plastic/Others parts                                                                                                                                                                                                                                                             | 0         | 0         | 0         | 0               | 0             | 0               |
| 玻璃部件 Glass parts                                                                                                                                                                                                                                                                         | X         | 0         | 0         | 0               | 0             | 0               |
| 金属部件 Metal parts                                                                                                                                                                                                                                                                         | X         | 0         | 0         | 0               | 0             | 0               |
| 电池 Battery                                                                                                                                                                                                                                                                               | X         | 0         | 0         | 0               | 0             | 0               |
| 本表格依据 SJ/T 11364 的规定编制。<br>0 = 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。<br>X = 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。<br>表中标有 "X" 的所有部件均符合欧盟 RoHS Recast 法规 65/2011-/EU 指令。<br>此表显示"罗技科技有限公司"的电子电气产品部件中何处存在这些有害物质。请注意，并非内装产品都包含上述所有部件。<br>注：环保使用期限的参考标准，取决于产品正常工作的温度和湿度等条件。 |           |           |           |                 |               |                 |





[www.logitech.com/support/m545](http://www.logitech.com/support/m545)

[www.logitech.com/support/m546](http://www.logitech.com/support/m546)

© 2015 Logitech. Logitech, Logi, 罗技 and other Logitech marks are owned by Logitech and may be registered. Windows® is a trademark of the Microsoft group of companies. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

版权所有 © 2015 年罗技。罗技、Logi 和其他罗技商标均归罗技所有，并或已注册。Windows® 是 Microsoft 集团公司的商标。所有其它商标均是其各自所有者的财产。罗技对于本手册中可能出现的任何错误不承担任何责任。本手册中包含的信息如有更改，恕不事先通知。

621-000655.002