



 
# Logitech® Speaker System Z443

## Setup Guide






## Package contents

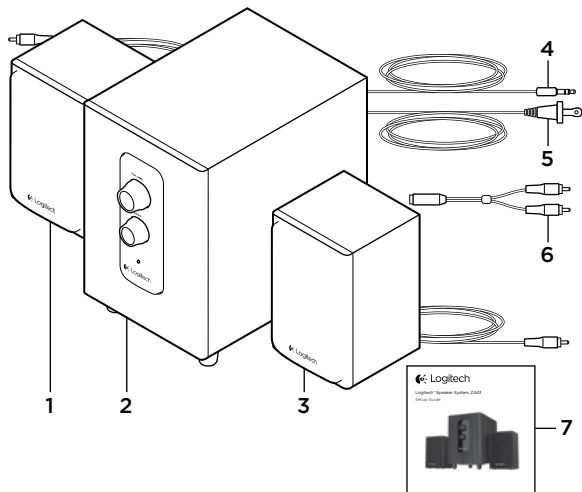


1. Left satellite speaker
2. Subwoofer
3. Right satellite speaker

4. 3.5mm audio cable
5. AC power cable
6. 3.5mm to RCA adaptor
7. Documentation

## Know your product

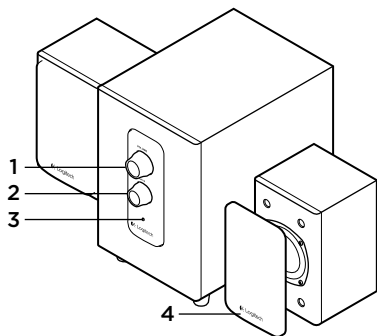 
**Subwoofer (front)**

 1. System volume
2. Bass Volume
3. Power LED
4. Detachable grill

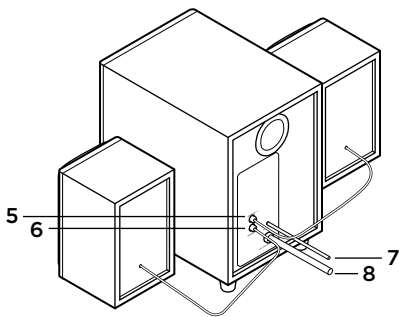**Subwoofer (back)**

5. Left satellite RCA output
6. Right satellite RCA output
7. Audio 3.5mm input
8. AC input

## Setup your product

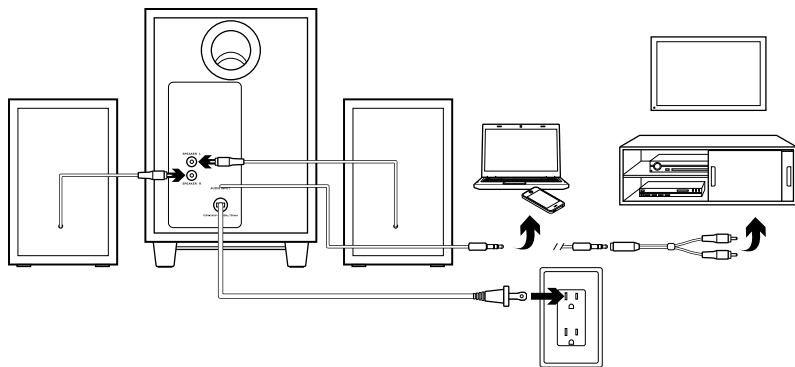 

### 1. Set up on subwoofer:

- Connect satellites: Right satellite plugs into right output and left satellite plugs into left output.
- Connect AC power into an AC outlet.

### 2. Connect audio source:

- For smartphones, tablets, music players and PCs: Use 3.5mm cable (included).
- OPTIONAL: For TV's, DVD/Blue-ray players or game consoles: Use 3.5mm to RCA adapter (included).

## Visit Product Central

There's more information and support online for your product. Take a moment to visit Product Central to learn more about your new Logitech speaker system.

Browse online articles for setup help, usage tips, or information about additional features.

 
Connect with other users in our Community Forums to get advice, ask questions, and share solutions.

At Product Central, you'll find a wide selection of content:

- Tutorials
- Troubleshooting
- Support community
- Software downloads
- Online documentation
- Warranty information
- Spare parts (when available)

Go to [www.logitech.com/support/Z443](http://www.logitech.com/support/Z443)

## Use your product

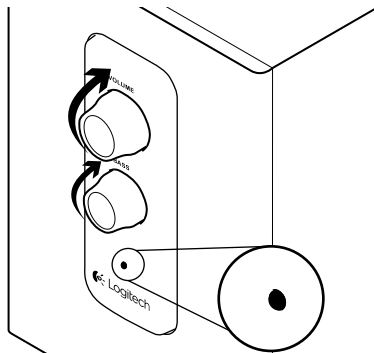

### Power on and volume

Rotate the volume knob on subwoofer until you hear a “click”. The green power LED will be lit.

Further rotate the volume knob right or left to adjust the volume to your desired level.

### Bass level

Rotate bass control right to increase bass output or left to lower it.

## Troubleshooting

### **One or three speakers produce little or no sound?**

- Check power connection to the subwoofer. Try a different AC outlet. Rotate the speaker volume knob to the 12 o'clock position.
- Check the speaker cable connection with your computer the speaker cable must be plugged into the line-level, speaker, or headphone output jack.
- Check volume and balance controls in your media application and computer's operating system.
- Quit your media application, and then restart it.
- Connect the speakers to another audio source (e.g., MP3 player). If they work, your computer's soundcard may be the cause of the problem.

### **Checking operating system volume/balance controls**

- Windows® Vista and Windows® 7: Go Start/Control Panel/Sounds/Playback Devices tab. Select your soundcard as the sound playback device. Verify that the Speaker Icon is not muted.
- Windows® 8: From Start Menu, select Desktop tile. From Charms menu, select Settings/Control Panel/Hardware and Sound/Sound/Playback devices tab. Select your soundcard as the sound playback device. Verify that the Speaker Icon is not muted.
- Mac OS X: Open System Preferences and select Sound/Output tab. Select your soundcard as the sound output device and adjust the Output Volume slider. Verify that the Mute box is not checked.

For more troubleshooting help, go to **[www.logitech.com/support/Z443](http://www.logitech.com/support/Z443)**

What do you think?  
Please take a minute to tell us.  
Thank you for purchasing our product.

**[www.logitech.com/ithink](http://www.logitech.com/ithink)**



[www.logitech.com](http://www.logitech.com)

© 2013 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. Apple, Mac, and the Mac logo are trademarks of Apple Inc., registered in the U.S. and other countries. Microsoft, Windows and the Windows logo are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

620-005244.003