




POWERSHELL

CONTROLLER + BATTERY

Setup Guide


English.	4
繁體中文	12
한국어	20
www.logitech.com/support 	31

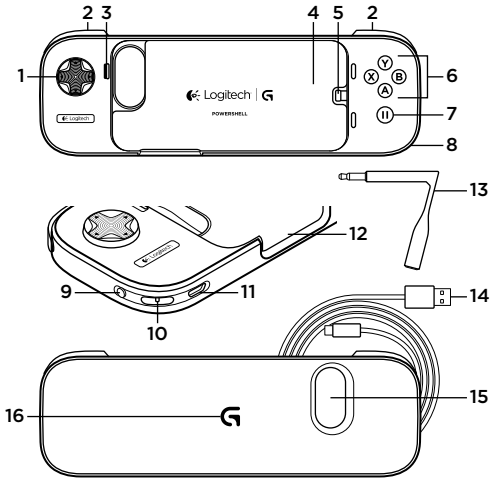

Know your product


1. 8-Way Analog D-Pad
2. Analog shoulder buttons
3. iPhone Sleep/Wake button
4. iPod touch adapter
5. Lightning connector
6. Analog buttons
7. Pause button
8. Audio Jack access port
9. Extended battery on/off switch
10. Wrist strap mount (wrist strap not included)
11. Micro-USB charging port
12. iPhone/iPod touch volume and ring/silent switch access
13. Headset extender cable
14. Micro-USB charging cable
15. Camera opening
16. Battery indicator

Getting Started

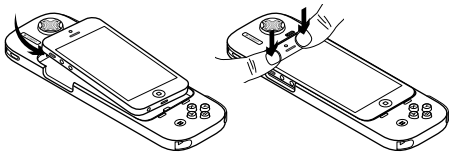

iPhone:

1. Place the iPhone onto the Controller's Lightning connector
2. Press phone into the Controller's frame until the phone is held securely

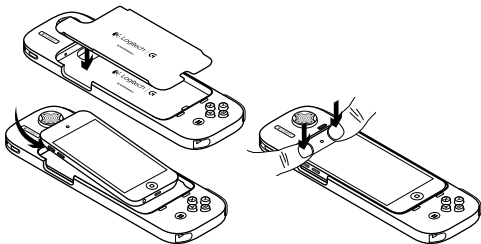

iPod touch:

1. Place iPod touch adapter into the body of the Controller's cradle.
Note: Insert the iPod touch adapter so that the G pull-tab rests behind the Lightning connector.
2. Place the iPod touch onto the Lightning connector
3. Press the iPod touch into the Controller's frame until the iPod touch is held securely

Using your Controller


1. Use the Controller to play iOS 7 games
2. To use a headset with your Controller, insert the included headphone extender cable into the audio jack access port
3. To extend your iPod touch or iPhone battery, simply move the Extended Battery switch to "On"



4. When the Controller's battery needs to be charged, the G logo on the back will turn red. Please charge your Controller when possible.



Removing your iPod touch or iPhone from your Controller

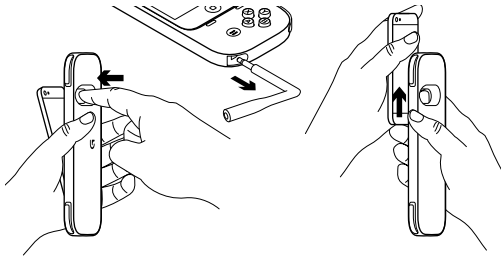


1. Remove any headphones or other audio jack devices from the headset port
2. Over a table, hold your Controller and press through the camera opening until the iPhone or iPod touch rotates slightly out of the Controller's frame
3. Once the iPhone or iPod touch is slightly out of the frame, pull your Apple device directly away from the Lightning connector

Charging your Controller

1. Plug your USB charging cable into your iPhone or iPod AC adapter*
2. Plug the micro-USB connector into the Controller's charging port
3. The G logo will blink while charging. Once the Controller is fully charged, the G logo will glow solid blue. Your Controller is now charged.
4. To charge your iPhone or iPod touch while charging your Controller, make sure to set the Extended Battery switch to On

* Only use Apple power adapters compatible with iPhone 5 or iPod touch (5th generation).

Note: At the end of product life remove battery as shown.

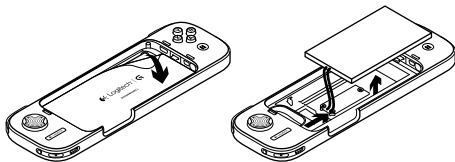

Troubleshooting

My Controller isn't working with my iPhone/iPod touch


- Ensure you are running iOS 7 or later
- Make sure your game supports the game controller feature
- Make sure your Controller is fully charged

I can't remove my iPhone/iPod touch from the Controller

- Remove the headset adapter or any other plug from the audio jack access port
- Three inches over a soft surface, gently press through the camera opening to release from Controller's frame

My iPhone or iPod touch isn't charging properly


- Make sure you are using the original AC adapter included with your iPod touch/iPhone, or make sure you are using a USB AC adapter providing 5V 1A of power output.
- Set the Extended Battery switch to On
- Try a different USB port or AC adapter

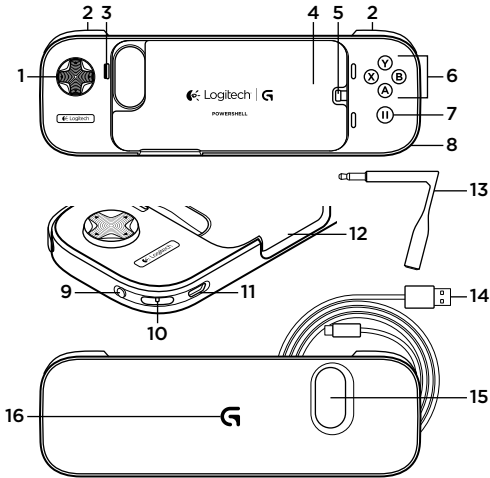

認識產品


1. 8 向類比 D-pad
2. Analog Shoulder Buttons
3. iPhone 休眠/喚醒按鍵
4. iPod touch 轉接器
5. Lightning 接頭
6. 類比按鍵
7. 暫停按鍵
8. 音訊插孔接線口
9. 延長電池壽命開啟/關閉開關
10. 腕帶接座 (腕帶未隨附)
11. Micro-USB 充電埠
12. iPhone/iPod touch 音量與鈴聲/靜音開關接口
13. 耳機麥克風延長線
14. Micro-USB 充電連接線
15. 攝影機開口
16. 電池狀態指示燈

開始使用

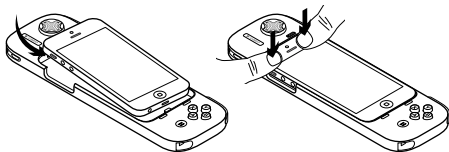

iPhone:

1. 將 iPhone 放到控制器的 Lightning 接頭上
2. 按壓電話使其進入控制器的框格中，直到電話穩固夾住

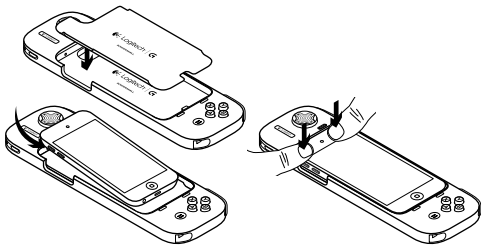

iPod touch:

3. 將 iPod touch 轉接器放入控制器底座本體中。
注意：插入 iPod touch 轉接器時請將 G 拉片置於 Lightning 接頭之後。
4. 將 iPod touch 放置到 Lightning 接頭
5. 按壓 iPod touch 使其進入控制器的框格中，直到 iPod touch 穩固夾緊頭

使用控制器


1. 使用控制器進行 iOS 7 遊戲
2. 若要搭配控制器使用耳機麥克風，請將隨附的耳機延長線插入到音訊插孔接線口
3. 若要延長您的 iPod touch 或 iPhone 電池電量使用時間，僅需將延長電池壽命開關切換到「開啟」位置即可



4. 當控制器的電池需要充電時，背面的 G 標誌會轉為紅色。請在合適的情況下為控制器充電。



從控制器中取出 iPod touch 或 iPhone

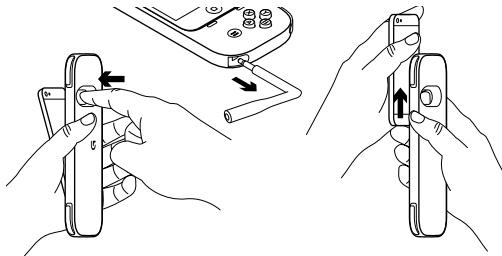


1. 從耳接麥克風連接埠上取下任何耳機麥克風或其他音訊插孔裝置
2. 在桌面上握住控制器，然後按壓攝影機開口，直到 iPhone 或 iPod touch 稍微從控制器的框格鬆脫
3. 當 iPhone 或 iPod touch 稍微從框格中鬆脫後，直接將您的 Apple 裝置從 Lightning 接頭上取出

為控制器充電

1. 將 USB 充電連接線插入到 iPhone 或 iPod 電源轉接器*
2. 將 micro-USB 接頭插入到控制器的充電連接埠
3. 在充電時 G 標誌會閃爍。當控制器充滿電力後，G 標誌會亮起穩定藍燈。您的控制器現在已充好電
4. 若要在控制器充電時對 iPhone 或 iPod touch 充電，請確認延長電池壽命開關設定在「開啟」位置

* 僅可使用適用於 iPhone 5 或 iPod touch (第 5 代) 的 Apple 電源供應器

注意：要棄置產品時，請如圖所示取下電池。

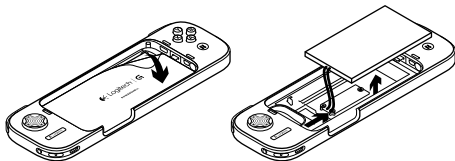

疑難排解

我的控制器無法與 iPhone/iPod touch 搭配使用


- 確認您執行的是 iOS 7 或更新版本
- 確認您的遊戲支援遊戲控制器功能
- 確認您的控制器已充滿電

我無法從控制器上取下 iPhone/iPod touch

- 從音訊插孔接線口中取下耳機麥克風轉接器或其他插頭
- 在柔軟表面上方約 8 公分位置，輕輕按壓攝影機開口，使其脫離控制器框格

iPhone 或 iPod touch 無法正確充電


- 確認您是使用 iPod touch/iPhone 隨附的原廠電源轉接器，或確認您是使用能提供 5V 1A 電源輸出的 USB 電源轉接器。
- 將延長電池壽命開關設定到「開啟」位置
- 嘗試使用不同 USB 連接埠或電源轉接器

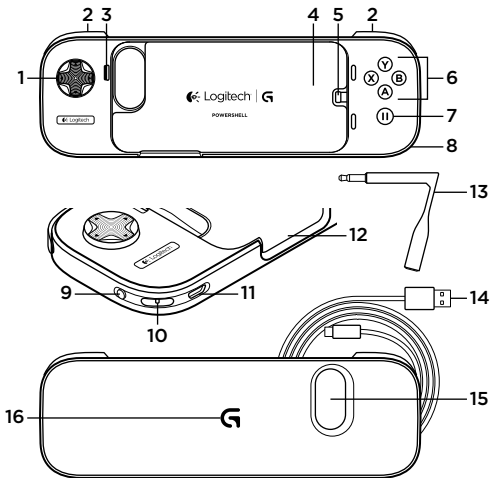

제품 설명


1. 8방향 아날로그 D-패드
2. 아날로그 슬라이더 버튼
3. iPhone 슬립 모드/슬립 모드 해제 버튼
4. iPod touch 어댑터
5. 빠른 커넥터
6. 아날로그 버튼
7. 일시 정지 버튼
8. 오디오 잭 액세스 포트
9. 연장 배터리 켜기/끄기 스위치
10. 손목 스트랩용 마운트(손목 스트랩은 포함되지 않음)
11. 마이크로 USB 충전 포트
12. iPhone/iPod touch 볼륨 및 벨소리/무음 전환 액세스
13. 헤드셋 연장 케이블
14. 마이크로 USB 충전 케이블
15. 카메라 입구
16. 배터리 표시기

시작하기

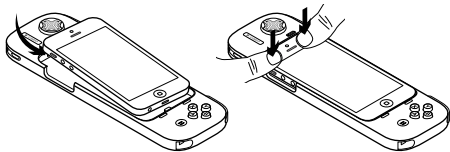

iPhone:

1. iPhone을 컨트롤러의 빠른 커넥터에 놓습니다.
2. 휴대폰이 단단히 고정될 때까지 컨트롤러 프레임에 맞춰 휴대폰을 누릅니다.

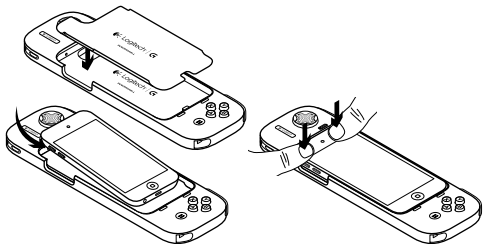

iPod touch:

1. iPod touch 어댑터를 컨트롤러 거치대 본체에 놓습니다.
참고: 빠른 커넥터 뒤에 G 폴-탭이 놓여지도록 iPod touch 어댑터를 삽입합니다.
2. iPod touch를 빠른 커넥터에 놓습니다.
3. iPod touch가 단단히 고정될 때까지 컨트롤러 프레임에 맞춰 iPod touch를 누릅니다.

컨트롤러 사용


1. 컨트롤러를 사용하여 iOS 7 게임을 플레이합니다.
2. 컨트롤러와 함께 헤드셋을 사용하려면 포함된 헤드폰 연장 케이블을 오디오 잭 액세스 포트에 연결합니다.
3. iPod touch 또는 iPhone 배터리를 연장하려면 연장 배터리 스위치를 “켜기”로 이동합니다.



4. 컨트롤러 배터리를 충전해야 하는 경우 후면의 G 로고가 빨간색으로 바뀝니다. 이 경우 컨트롤러를 충전하십시오.



컨트롤러에서 iPod touch 또는 iPhone 제거

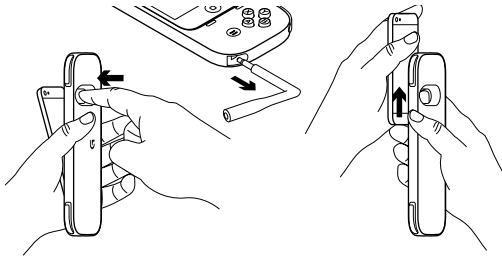


1. 헤드셋 포트에서 헤드폰 또는 기타 오디오 잭 장치를 제거합니다.
2. 테이블 위에서, 컨트롤러를 잡고 iPhone 또는 iPod touch가 컨트롤러 프레임 밖으로 약간 나올 때까지 카메라 입구를 누릅니다.
3. iPhone 또는 iPod touch가 프레임 밖으로 약간 나오면, 빠른 커넥터에서 Apple 장치를 직접 꺼냅니다.

컨트롤러 충전

1. USB 충전 케이블을 iPhone이나 iPod AC 어댑터에 연결합니다*.
2. 마이크로 USB 커넥터를 컨트롤러의 충전 포트에 연결합니다.
3. 충전되는 동안 G 로고가 깜빡입니다. 컨트롤러가 완전히 충전되면 G 로고가 계속 파란색으로 켜집니다. 이제 컨트롤러가 충전되었습니다.
4. 컨트롤러를 충전하는 동안 iPhone 또는 iPod touch를 충전하려면 연장 배터리 스위치를 켜기로 설정했는지 확인합니다.

* iPhone 5 및 iPad Touch(5세대)와 호환 가능한 Apple 파워 어댑터만 사용하십시오.

참고: 제품 수명이 다하면, 다음과 같이 배터리를 제거하십시오.

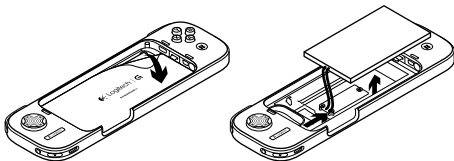

문제 해결

내 컨트롤러가 내 iPhone/iPod touch에서 작동하지 않습니다.

- iOS 7 이상을 실행 중인지 확인합니다.
- 게임이 게임 컨트롤러 기능을 지원하는지 확인합니다.
- 컨트롤러가 완전히 충전되었는지 확인합니다.

컨트롤러에서 내 iPhone/iPod touch를 제거할 수 없습니다.

- 오디오 잭 액세스 포트에서 헤드셋 어댑터 또는 다른 모든 플러그를 제거합니다.
- 부드러운 표면의 3인치 위에서 카메라 입구를 살짝 눌러 컨트롤러 프레임에서 빼냅니다.

내 iPhone 또는 iPod touch가 제대로 충전되지 않습니다.

- iPod touch/iPhone에 포함된 원래 AC 어댑터를 사용 중인지 확인하거나, 5V 1A의 전원 출력을 제공하는 USB AC 어댑터를 사용 중인지 확인합니다.
- 연장 배터리 스위치를 켜기로 설정합니다.
- 다른 USB 포트 또는 AC 어댑터를 사용해 봅니다.

www.logitech.com/support/powershell



Taiwan	Mandarin	0800-012-300
Korea	Korean	00798-601-8207
Hong Kong	Cantonese only	800-966-992
Australia	English	1-800-025-544
India	English	800-600-1133
Malaysia	English only	1800-88-0719
Singapore	English only	800-6011-372
New Zealand	English	0800-447-361



www.logitech.com

"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

© 2013 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

620-005540.002