






Harmony® 350 Remote Setup Guide

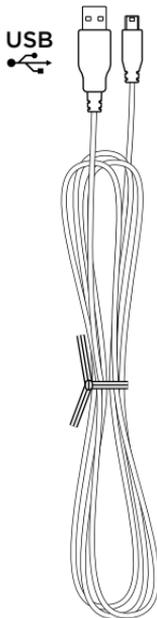

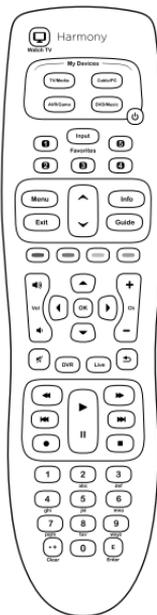

Buttons

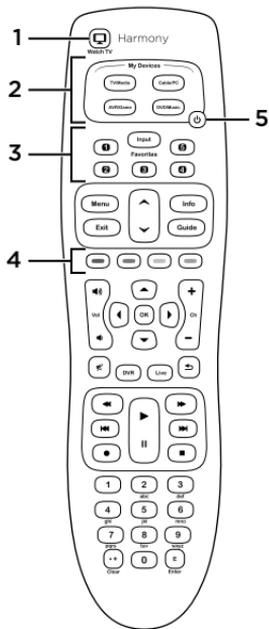

- 1. Watch TV button:** Powers devices on/off for your Watch TV Activity
- 2. Device buttons:** Set the remote to control specific devices
- 3. Favorite Channel buttons:** Configure these buttons for quick access to favorite TV channels.
- 4. Color buttons:** Navigate menus and select options on some TVs, cable/satellite receivers, DVRs, and Blu-ray players
- 5. Power button:** Select one of the Device buttons, then use the Power button to turn that device on or off.

How the remote works

 
Harmony 350 is an infrared (IR) remote that controls other IR devices such as TVs, audio/video receivers, and cable/satellite receivers. Visit setup.myharmony.com to create an account and set up your new Harmony remote.



Watch TV

Watch TV button

Set up a Watch TV Activity to automatically power on/off devices you use to watch TV, such as your TV, audio/video receiver, and cable/satellite receiver. After pressing the Watch TV button, be sure to keep the remote pointed at your devices until the Device buttons turn off. Press the Watch TV button again to turn off all the devices.



Device buttons

Control up to eight devices individually using these four Device buttons, each with a short press or a longer two second press. Each Device button will light up when an IR command is being sent.




Favorite Channel buttons

Program up to five Favorite Channels for your TV or cable/satellite receiver.

To make changes after setup, sign in to your account at myharmony.com


Setting up your Harmony 350

1. Install the batteries

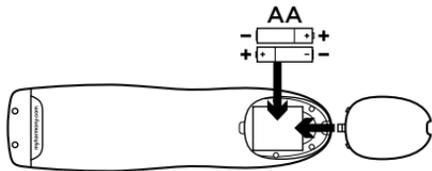

Insert the two AA batteries (included) into the battery compartment.


2. Gather your device information

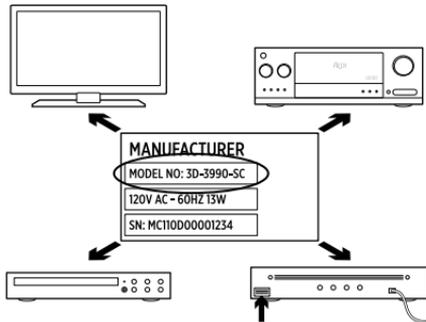

In order for Harmony 350 to control your entertainment system, we'll need to know the manufacturer and model number of each of the devices you own.

The manufacturer and model number of your devices are typically printed on the front bezel, or on a label located on the bottom or the back of your entertainment devices. Write them down in the table provided on the back page of this Setup Guide for quick reference during setup.

3. Complete setup online.

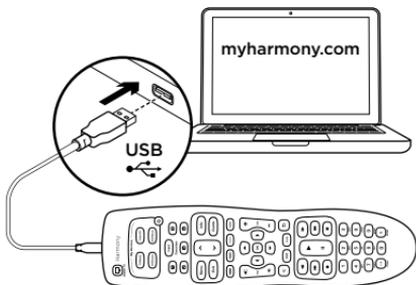

Complete the setup online via
setup.myharmony.com

- a. Connect your Harmony 350 to your computer using the supplied USB cable.
- b. Open a browser and go to **setup.myharmony.com**
- c. Follow the on-screen instructions to create a Harmony account and set up your remote.

Test your remote

Once you've completed the online setup and synced your Harmony 350, please test it.

1. Unplug your Harmony 350 from your computer and take it to your entertainment system.
2. To test your remote, press the Watch TV button. Make sure to keep the remote pointed at your devices until the Device buttons are no longer lit. If you did not set up a Watch TV Activity, test by pressing the Power button to power a device on and off.
3. To make changes, connect the remote to your computer and sign in to your account at **myharmony.com**

Note: Once setup is complete, use Harmony 350 as your only remote; using other remotes could cause the devices in Watch TV Activity to become out of sync.

Frequently asked questions

- **How do I customize buttons or change my Favorite Channels?**

Sign in to your account on myharmony.com, plug in your remote using the included USB cable, then click on the Buttons tab to customize buttons and the Favorites tab to change Favorite Channels. When changes are completed, be sure to sync your remote.

Troubleshooting

- **The remote does not seem to work with my device.**

First ensure that fresh batteries are inserted properly into the remote. Then check that one of the four Device buttons should flash when a button is pressed. Refer to support.
[myharmony.com/350](https://support.myharmony.com/350) for more information.

- **Pressing the Watch TV button does not properly turn on all my devices and set them to the correct inputs.**

The devices must be in the same power state, on or off, at all times in order for the Watch TV button to function properly. Use the Device buttons in combination with the Power button to keep the devices in the same power state. Refer to support.
support.myharmony.com/350 for more information.

Get support

For more detailed information, please visit support.myharmony.com/350

- **Finding answers to questions**

Visit our knowledgebase at support.myharmony.com/350

- **Getting help with online setup**

Many screens and pages presented to you during the online setup contain 'Learn more' or 'Help' links designed to provide additional information or assistance with various features.

- **Logitech's Harmony Remote user forums**

Visit the Harmony Remote User Forums located at forums.logitech.com

support.myharmony.com/350

Manufacturer (e.g., Sony®, Pioneer®)	Model Number (e.g., DV-414, Explorer 3100)

© 2014 Logitech. Logitech, the Logitech logo, Harmony, the Harmony logo, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

620-006239.002