



ConferenceCam Connect

罗技高清会议网络摄像头

QuickStart Guide | 入门指南




English. 3

简体中文 13



 
What's in the box

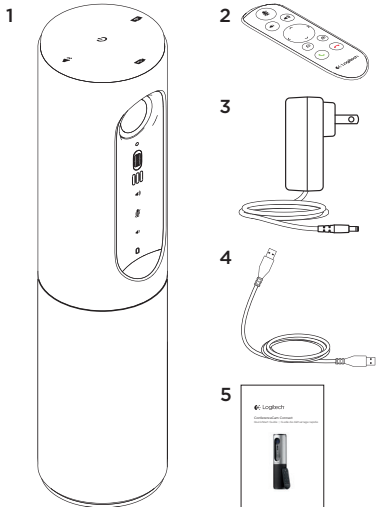



1. Main unit with camera and speakerphone
2. Remote control
3. Power cable and regional plugs

4. USB Cable
5. User documentation

   Know your product

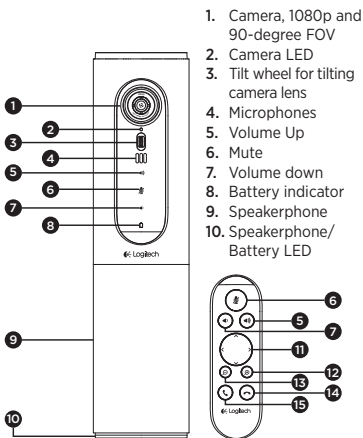

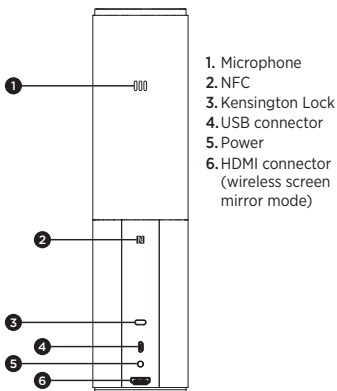


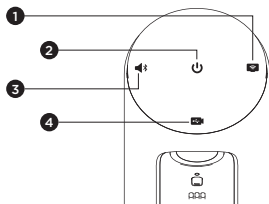

1. Wireless screen mirror mode
2. Power On/Off button
3. *Bluetooth*® mode
4. Video conferencing mode


Setup your product

 1

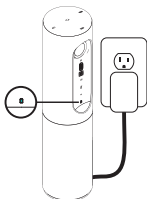


1. Connect ConferenceCam Connect to external power. Although ConferenceCam Connect comes with rechargeable battery, it must first be plugged into external power and charged till the green battery light displays.
Note: The device can also be charged through USB on your PC or Mac (charging times may vary.)

 2



2. Press and hold power On/Off button to turn on the device. A sound will play and the device LEDs will light for 2-3 seconds, with the last used mode LED staying lit when on.

 3

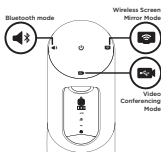

3. Select the following modes and follow the instructions to get started.

1. Video Conferencing Mode:

1. Connect the USB cable to the device and to your USB port.
2. To start a call from your PC or Mac application, select Video Conferencing Mode on *ConferenceCam Connect*. The camera and speakerphone LEDs will flash to show that connection is taking place, and when completed, the camera LED will light steady for a few seconds and the speakerphone will play a sound. If these activities do not take place, try again and then consult Troubleshooting or call technical support.
3. Ensure that ConferenceCam Connect is selected as the default video and audio device in your OS settings and in your conferencing application. Start your video or audio call from your application. The LEDs on the camera and speakerphone will alight when streaming.

2. Bluetooth Mode

To connect ConferenceCam Connect speakerphone to your mobile device:

1. Select Bluetooth mode on the ConferenceCam Connect.
2. If your device is NFC enabled, touch the mobile device to the NFC icon on the speakerphone, which should enable Bluetooth acceptance on the mobile device, or hold down the Bluetooth button until the LED on the speakerphone starts blinking blue rapidly.
3. On your mobile device, go to settings and turn on Bluetooth to connect. The ConferenceCam Connect will also play a sound to acknowledge connection.

3. **Wireless Screen Mirror Mode (Screen share content from your mobile device):**
 1. Connect the HDMI cable from your display to the back of the ConferenceCam Connect device.
 2. Select Wireless Screen Mirror Mode on the ConferenceCam Connect.
 3. On your mobile device, go to Settings, and then select your mobile device's option for screen mirroring. The listed option name will differ from device to device. For help with your mobile device setting, please consult www.logitech.com/support/connect for list of tested devices.
Note: Only Bluetooth mode and Wireless Screen Mirror Mode may operate at the same time.
Wireless performance may vary.

Use your product

- Video
 - Starting the video: The video is controlled by the application and will start once the camera is selected and the video is started in the application. Camera LED will light when the video is streaming.
 - Pan, tilt and zoom the camera using the controls on the remote control. Press once for incremental or press and hold for continuous pan or tilt. You can also pan and tilt the camera image – first zoom in, and then pan the image or tilt the image. You may also tilt the actual camera with the tilt wheel on the unit. Do not manually try to tilt camera itself. Doing so may damage unit.
 - Saving pan, tilt and zoom settings: An optional application is available which includes a software interface to control camera settings. These can be saved so your camera settings remain next time you turn on the unit. You may download the software from www.logitech.com/support/connect
 - Far end control: You may control the pan, tilt and zoom of a remote ConferenceCam CC3000e, ConferenceCam Connect or a ConferenceCam BCC950, in supported applications. Please visit the download page listed for more information.
- Audio
 - Volume: Volume Up and Down adjusts volume.
 - Mute: Mute audio with Mute button.
 - Calling: Run video conferencing software. Answer picks up call. Hang up ends call. For call waiting, select hang up to reject second call or answer button to toggle between calls
Note: Answer and Hang up buttons may not work in some applications. Use video conferencing software to answer and end call. To enable answer and hangup buttons for Skype or Cisco Jabber, please download the plugin available from www.logitech.com/support/connect
 - SpeakerPhone Activity light indications

Blue: ConferenceCam is in active call. Blinking Blue: Call is being received or Bluetooth is in pairing mode.

Bluetooth to connect ConferenceCam Connect speakerphone to your mobile device for speakerphone broadcast of call:

- If your device is NFC enabled, touch the mobile device to the NFC icon on the speakerphone, which should enable Bluetooth acceptance on the mobile device
OR
- Press the Bluetooth button on the speakerphone until connection is made to the mobile device
- Battery Light Indicator
 - When the battery is fully charged, the battery light turns green. The green turns off when the power dips below 75%.
 - When the battery has 25% power left, a red battery light will alight continuously steady, indicating that the device needs to be plugged into external power very soon.
 - When the battery has 10% power left, the red battery light will blink, indicating that the device will no longer operate unless plugged into external power immediately, and a sound will also play once.
 - The ConferenceCam Connect battery indicator will blink green when the unit is being charged.
 - When the device is completely charged, the LED will turn off until the device is unplugged from external power and running on battery.
 - When the remote is docked the speakerphone indicator will represent the same sequence.

Visit Product Central

Discover your product's full potential. Get valuable information and usage tips by browsing easy-to-use FAQs. Find answers to product questions and get help setting up your product. See if there's software available for download that can enhance your product experience. To enjoy all the benefits of your Logitech product, visit www.logitech.com/support/connect and take advantage of Logitech's wide range of useful support services:

 
- Product information
- Tutorials
- Troubleshooting
- Diagnostics
- Firmware upgrades
- Support community
- Software downloads
- In-box documentation
- Warranty information
- Spare parts

Troubleshooting tips

- Please visit www.logitech.com/support/connect for troubleshooting tips, information on software tools and for a diagnostic tool to help troubleshoot any issues you may have with your ConferenceCam Connect.




包装内容

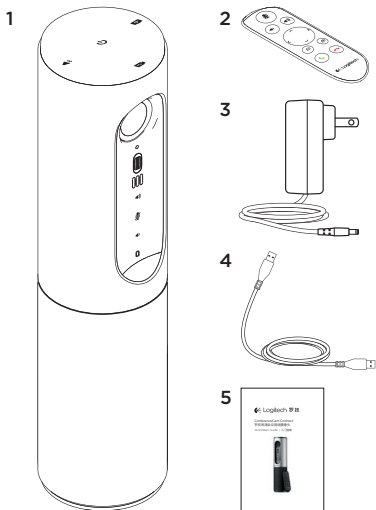


1. 配置摄像头和扬声器电话的主设备
2. 遥控器
3. 电源线缆和地区通用插头


4. USB 线缆
5. 用户文档

  了解您的产品

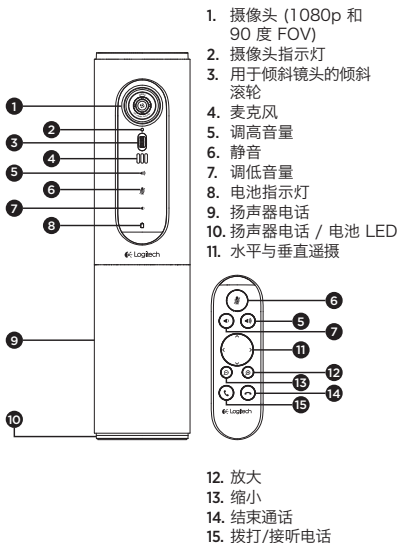

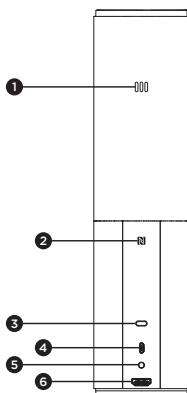

 
1. 麦克风
2. NFC (近场通讯)
3. Kensington 防盗锁孔
4. USB 接口
5. 电源
6. HDMI 接口
(无线屏幕镜像模式)

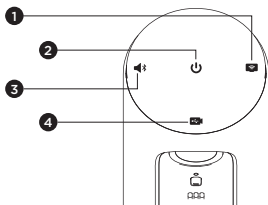

1. 无线屏幕镜像模式
2. 电源打开/关闭按钮
3. 蓝牙模式
4. 视频会议模式


设置您的产品

 1

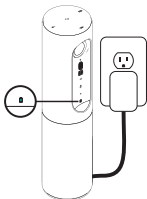


1. 将 ConferenceCam Connect 接入外部电源。尽管 ConferenceCam Connect 随附可充电电池, 但是初次使用时, 必须将其接入外部电源, 直至绿色电池指示灯亮起, 表示充电完成。
 请注意: 本设备也可通过 PC 或 Mac 上的 USB 接口充电 (充电时间可能有所区别)。

 2



2. 按住电源打开/关闭按钮, 开启设备。此时出现开机提示音, 设备的各项 LED 指示灯亮起并持续 2-3 秒, 其中代表上一次使用模式的 LED 指示灯将保持亮起状态。

 3

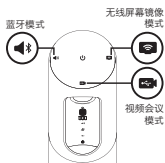

3. 从下列模式中进行选择, 并遵循说明继续下一步操作。

1. 视频会议模式：

1. 将 USB 线缆分别与设备和 USB 端口连接。
2. 要通过 PC 或 Mac 应用进行通话，请在 ConferenceCam Connect 上选择视频会议模式。摄像头和扬声器电话的 LED 指示灯闪烁，表示正在连接，连接成功后，摄像头的 LED 指示灯将稳定亮起并持续几秒钟，同时扬声器电话会发出提示音。若上述情况并未出现，再试一次，如果依然无效，请查看故障排除技巧或致电技术支持。
3. 请务必在操作系统设置和视频会议应用设置中选择 ConferenceCam Connect 作为默认视频/音频设备。通过应用程序启动视频或音频通话。播放时，摄像头和扬声器电话上的 LED 指示灯将亮起。

2. 蓝牙模式

要连接 ConferenceCam Connect 扬声器电话与移动设备：

1. 在 ConferenceCam Connect 上选择蓝牙模式。
2. 如果移动设备已启用 近场通讯 功能，触控移动设备连接扬声器电话的 近场通讯 按钮，即可在移动设备上接收蓝牙，或者按住蓝牙按钮，直至扬声器电话上的 LED 指示灯变成蓝色并开始快速闪烁。
3. 打开移动设备上的蓝牙设置，使用蓝牙进行连接。ConferenceCam Connect 也会发出确认连接的提示音。

3. 无线屏幕镜像模式 (屏幕共享移动设备的内容):

1. 将显示器的 HDMI 线缆连接至 ConferenceCam Connect 设备背面。
2. 在 ConferenceCam Connect 上选择无线屏幕镜像模式。
3. 打开移动设备上的设置界面, 完成屏幕镜像所需的选项设置。下列选项名称可能因设备类型不同而有所区别。在移动设备的设置方面如有疑问, 请浏览 www.logitech.com/support/connect 中的测试设备清单。
请注意: 只有蓝牙模式和无线屏幕镜像模式可实现同时运行。无线性能可能因设备而异。

使用您的产品

- 视频
 - 观看视频: 视频由应用程序控制, 选择摄像头时启动并在应用程序中播放。视频播放时, 摄像头的 LED 指示灯亮起。
 - 使用遥控器上的控制装置可上下左右移动和缩放, 以此来调整摄像头。单次按下可进行增量调节, 按住不放可连续进行上下左右调整。您还可以对摄像头中的图像进行调整 -- 即放大、平移或倾斜图像。此外, 还可通过设备上的倾斜滚轮来调整实际摄像头的位置。切勿 尝试手动倾斜摄像头。否则可能损坏设备。
 - 保存平移、倾斜和缩放设置: 目前提供一种可选的应用软件, 可通过其软件界面控制摄像头的设置。将这些设置保存以后, 下一次打开设备时即可继续沿用上一次的摄像头设置选项。上述软件的下载地址为 www.logitech.com/support/connect
 - 远端控制: 用户可通过设备支持的应用软件从远端控制 ConferenceCam CC3000e、ConferenceCam Connect 或 ConferenceCam BCC950, 实现平移、倾斜和缩放功能。请访问下载页面查看更多信息。
- 音频
 - 音量: 使用 "调高音量" 和 "调低音量" 来调节音量。
 - 静音: 使用静音按钮关掉音频。
 - 通话: 运行视频会议软件。使用 "接听" 接听通话。使用 "挂断" 结束通话。对于排队等待通话的情形, 可选择 "挂断" 按钮拒绝接听第二通电话, 或者选择 "接听" 按钮在两通电话之间切换
注意: "接听" 和 "挂断" 按钮在某些应用程序中可能无法使用。使用视频会议软件接通和挂断电话。如需在 Skype 或 Cisco Jabber 中启用接听和挂断功能, 请从 www.logitech.com/support/connect 下载相应的可用插件。
- 扬声器电话活动指示灯的状态说明

蓝灯: ConferenceCam 正在通话中。闪烁蓝灯: 准备接听电话或蓝牙正处于配对模式中。

通过蓝牙方式将 ConferenceCam Connect 扬声器电话连接至移动设备, 可实现扬声通话:

- 如果您的设备已启用 近场通讯 功能, 触控移动设备连接扬声器电话的 近场通讯 按钮, 在移动设备上接收蓝牙; 或者
 - 按下扬声器电话的蓝牙按钮直至其成功连接移动设备。
-
- 电池状态指示灯
 - 电池电量充满后, 电池状态指示灯变为绿色。如果电池电量降至 75% 以下, 绿灯将熄灭。
 - 如果电池电量降至 25%, 将持续亮起稳定红灯, 表示设备需要立即连接外部电源。
 - 如果电池电量降至 10%, 红灯开始闪烁, 表示设备将停止运行 (除非立即外接电源), 同时设备还会发出一个提示音。
 - ConferenceCam Connect 电池状态指示灯在设备充电过程中将会闪烁绿色。
 - 设备充满电后, LED 指示灯将关闭, 直到设备从外部电源拔出并依靠电池运行。
 - 使用遥控器时, 扬声器电话指示灯的含义也如上述序列所示。

访问产品中心

全面发掘产品潜力。请浏览常见问答集, 了解相关的实用信息和技巧。查询有关产品问题的答案及产品安装帮助。查看是否有软件可供下载, 提升产品体验。如需尽享罗技产品的所有优势, 请访问 www.logitech.com/support/connect, 充分利用罗技体贴周到的支持服务:

- 产品信息
- 教程
- 故障排除
- 诊断
- 固件升级
- 支持社区
- 软件下载
- 包装盒内文件
- 保修信息
- 备件

故障排除技巧

- 请访问 www.logitech.com/support/connect, 查看故障排除技巧、软件工具信息及诊断工具, 以帮助您解决 ConferenceCam Connect 的相关问题。

产品中有害物质的名称及含量

根据中国<< 电子电气产品有害物质限制使用标识要求>>

有害物质 Hazardous Substances						
部件名称 Parts Name	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电缆线/电源 Cable/Adaptor	X	O	O	O	O	O
电路板组件 PWAs	X	O	O	O	O	O
塑料/其它部件 Plastic/Others parts	O	O	O	O	O	O
玻璃部件 Glass parts	X	O	O	O	O	O
金属部件 Metal parts	X	O	O	O	O	O
电池 Battery	X	O	O	O	O	O
本表格依据 SJ/T 11364 的规定编制。 O = 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。 X = 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。 表中标有 "X" 的所有部件均符合欧盟 RoHS Recast 法规 65/2011/EU 指令。 此表显示"罗技科技有限公司"的电子电气产品部件中何处存在这些有害物质。请注意，并非内装产品都包含上述所有部件。 注：环保使用期限的参考标准，取决于产品正常工作的温度和湿度等条件。						





www.logitech.com/support/connect

© 2015 Logitech. All rights reserved. Logitech, 罗技, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. *Bluetooth®* is a registered trademark of Bluetooth SIG, Inc. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

版权所有 © 2015 年罗技。罗技、罗技标志、Logitech 和其他罗技商标均归罗技所有，并或已注册。*Bluetooth®* 文字商标和标志由 Bluetooth SIG, Inc. 所有其它商标均是其各自所有者的财产。罗技对于本手册中可能出现的任何错误不承担任何责任。本手册中包含的信息如有更改，恕不事先通知。

620-006409.005