

SMARTDOCK FLEX

logitech®

INTRODUCTION:

This document is written for installers setting up a Skype Room System with Logitech SmartDock and Logitech SmartDock Flex.

Installer: the installer should have the following knowledge and skills:

- Basic networking
- Basic AV

Separate from the physical installation. a system administrator will need the following knowledge and skills:

- Skype for Business Endpoint
- Skype for Business Server
- Microsoft® Exchange on-premises
- Office 365® software cloud services
- Windows® 10 operating system troubleshooting

The system administrator, shall consult Microsoft Technet articles for more information on planning, configuring and deploying skype room systems.

<https://technet.microsoft.com/library/mt790550.aspx>

<https://technet.microsoft.com/library/mt790551.aspx>

<https://technet.microsoft.com/library/mt790558.aspx>

OPERATING ENVIRONMENT

Logitech SmartDock and Logitech SmartDock Flex are designed for use in office and meeting room environments not to exceed 35 degrees Celsius / 95 degrees Fahrenheit.

WHAT'S INCLUDED IN THE BOX

- SmartDock Flex Base
- SmartDock Flex Extender Box
- CAT6 Cable (AWG 23, SFTP)
- USB Cable (Mini USB to USB Type A)
- AV Pass through adapter (HDMI female to male)
- Cable ties
- Screwdriver (Torx T8)
- Screws (4)
- Color coded label
- HDMI Content sharing cable

ADDITIONAL REQUIRED EQUIPMENT

Microsoft Surface Pro pre-configured with Microsoft Skype Room System software*
Skype Certified Audio and Video devices, such as Logitech ConferenceCams HD Display(s) / Projector(s)

*If the Microsoft Surface Pro is not pre-configured, please refer to the Microsoft TechNet articles.

INSTALLATION

Steps 1-7 may be skipped if Surface Pro is already installed in SmartDock.

Please ensure Surface Pro is completely powered off prior to installation of SmartDock Flex.

简介:

本文档是为使用罗技智能底座和罗技智能底座集线盒设置 Skype Room System 的安装人员编写的。

安装人员: 安装人员应具备以下知识和技能:

- 基本网络知识
- 基本音视频知识

与物理安装不同, 系统管理员需要以下知识和技能:

- Skype for Business 终端
- Skype for Business 服务器
- Microsoft® Exchange 本地部署
- Office 365® 软件云服务
- Windows® 10 操作系统故障排除

系统管理员应参阅 Microsoft Technet 文章, 以获取有关规划、配置和部署 skype room systems 的更多信息。

<https://technet.microsoft.com/library/mt790550.aspx>

<https://technet.microsoft.com/library/mt790551.aspx>

<https://technet.microsoft.com/library/mt790558.aspx>

操作环境

罗技智能底座和罗技智能底座集线盒设计用于不超过 35 摄氏度的办公室和会议室环境。

包装内容

智能底座集线盒基座

智能底座集线盒延长线盒

CAT6 线缆 (AWG 23, SFTP)

USB 线缆 (Mini USB 至 USB Type A)

AV 直连适配器 (HDMI 母对公)

线缆扎带

螺丝刀 (梅花头 T8)

螺丝 (4)

彩色标签

HDMI 内容共享线缆

其他设备需求

预配置 Microsoft Skype Room System 软件的 Microsoft Surface*

Skype 认证音视频设备, 如罗技视频协作高清显示器/投影机


*若 Microsoft Surface Pro 未进行预配置, 请参阅 Microsoft TechNet 文章。

安装

如果 Surface Pro 已经安装在智能底座中, 可跳过步骤 1-7。

安装智能底座集线盒之前, 请确保 Surface Pro 完全关闭。

1

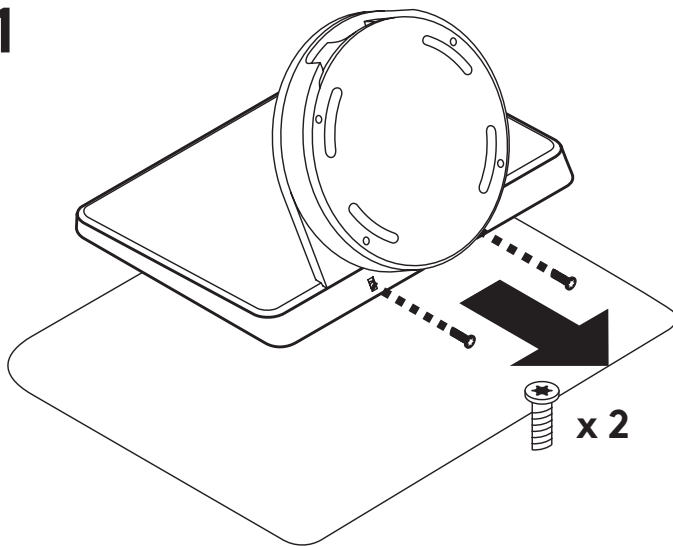


English

Disassemble SmartDock
Remove Bezel Screws.

简体中文

拆开智能底座。
卸下挡板螺丝。

2

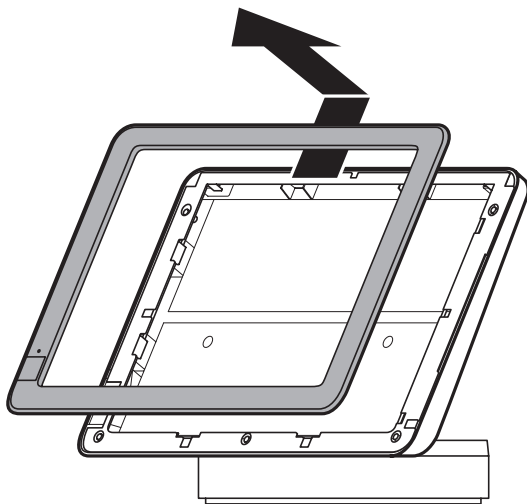


English

Remove Bezel.

简体中文

卸下挡板。

3

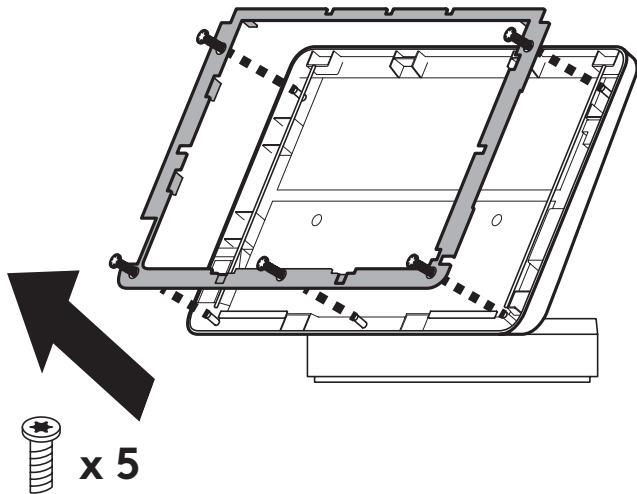


English

Remove Metal Bracket.

简体中文

卸下金属支架。

4

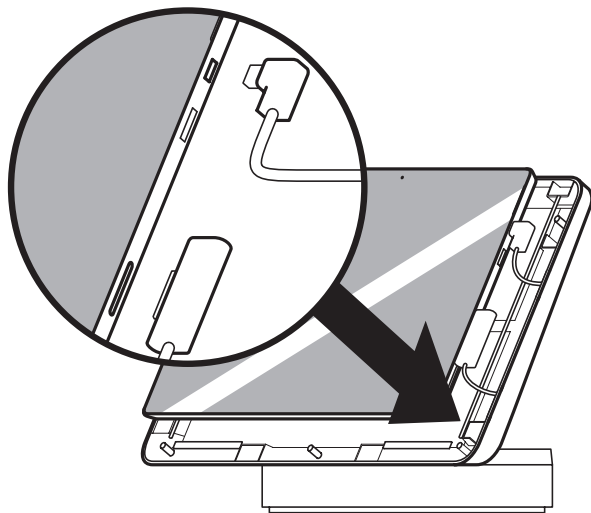


English

Plug in and install Surface Pro.

简体中文

插入并安装 Surface Pro。

5

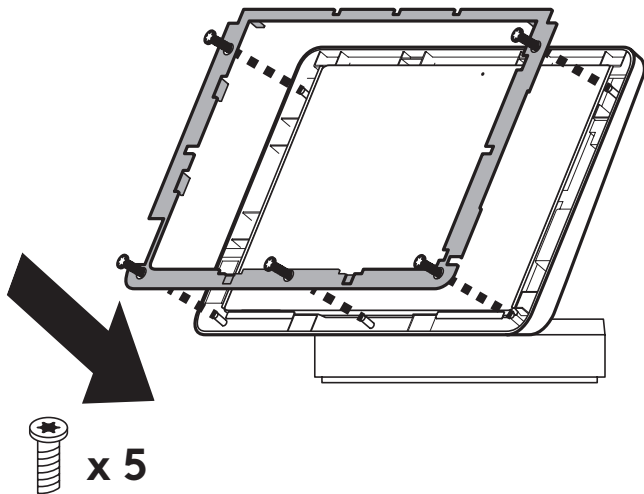


English

Reassemble SmartDock.
Install Metal Bracket.

简体中文

组装智能底座
安装金属支架。

6

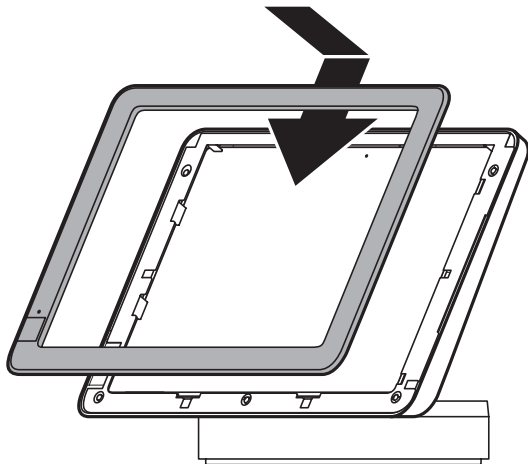


English

Install Bezel.

简体中文

安装挡板。

7

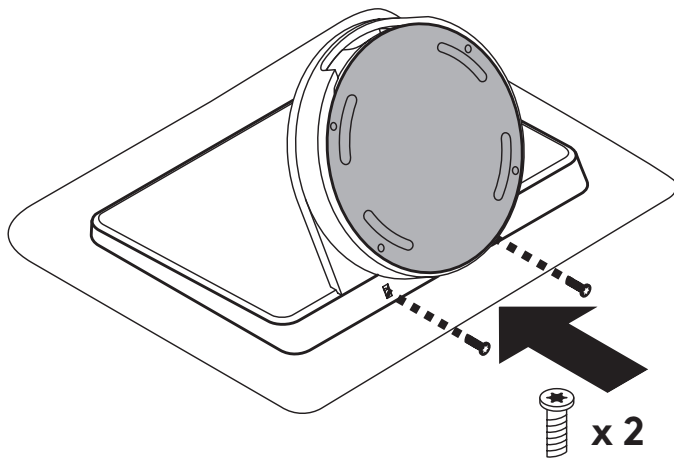


English

Install Bezel Screws.

简体中文

安装挡板螺丝。

8

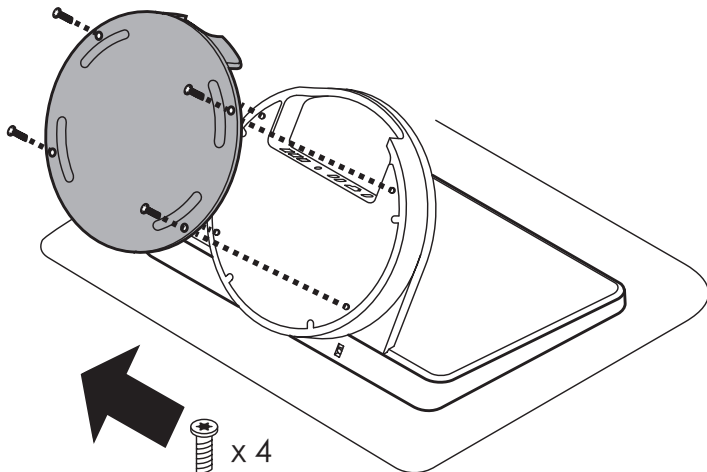


English

Remove SmartDock base cover and put aside. With SmartDock Flex, this cover will no longer be needed.

简体中文

卸下智能底座底座盖并放在一边。搭配智能底座集线盒使用时，则不再需要此底座盖。

9

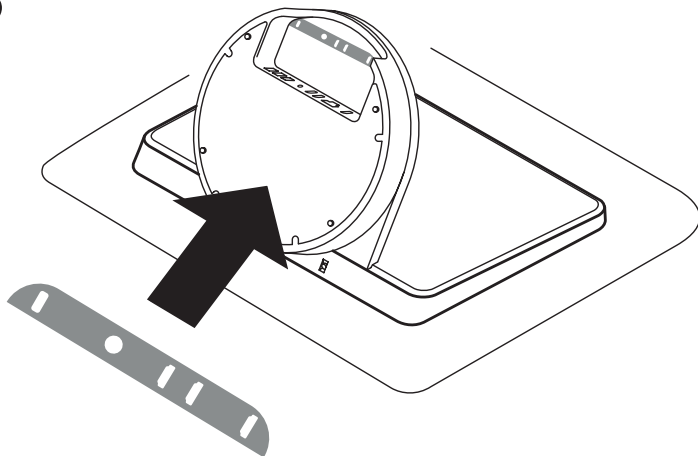



English

Apply color coded label in the SmartDock connector area as shown.

简体中文

如图所示，在智能底座连接器区域使用彩色标签。

10

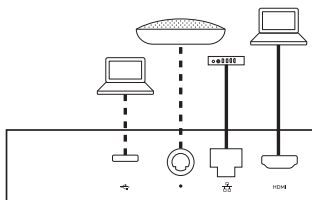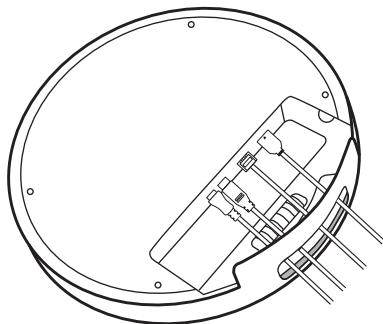

English

Connect external cables to SmartDock Flex base.


- CAT6 Cable
- USB Cable (Optional)
- HDMI content sharing Cable (included with Logitech SmartDock)
- Logitech GROUP Speakerphone DIN Connector (Optional)

简体中文

连接外部线缆至智能底座集线盒基座。

- CAT6 线缆
- USB 线缆 (选配)
- HDMI 内容共享线缆 (罗技智能底座随附)
- 罗技 CC3500e 扬声器麦克风连接器 (选配)

11

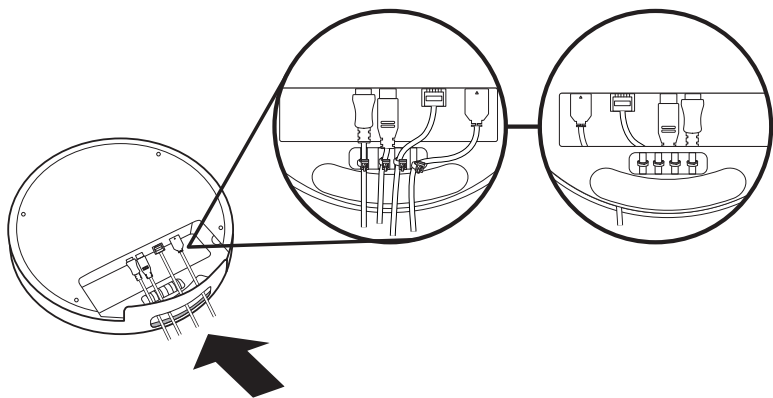


English

Once connected, secure all external cables tightly with the included cable ties. Trim off excess for tidy installation.

简体中文

连接完成后, 请使用随附的线缆捆扎带将所有外部线缆妥善固定。收紧捆扎带, 使安装更齐整。

12

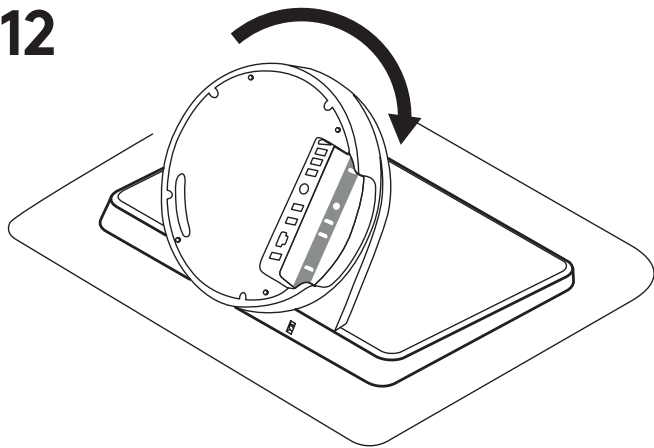


English

Rotate the SmartDock base to facilitate SmartDock Flex cable connection.

简体中文

旋转智能底座基座，以便连接智能底座集线盒线缆。

13

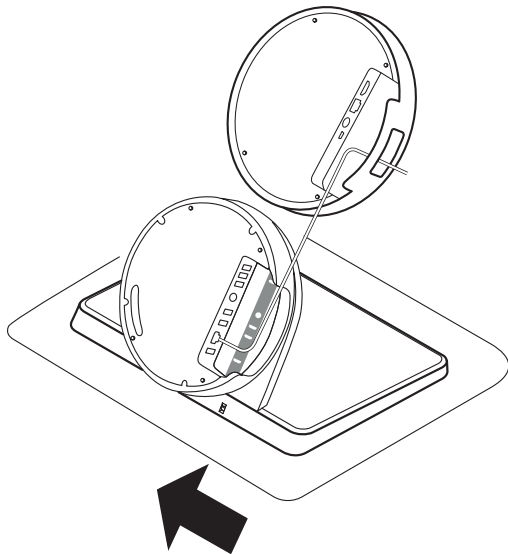


English

Connect SmartDock to your local area network (LAN) via ethernet and route the cable through SmartDock Flex cable exit.

简体中文

将智能底座通过以太网连接至局域网 (LAN)，通过智能底座集线盒线缆出口布线。

14

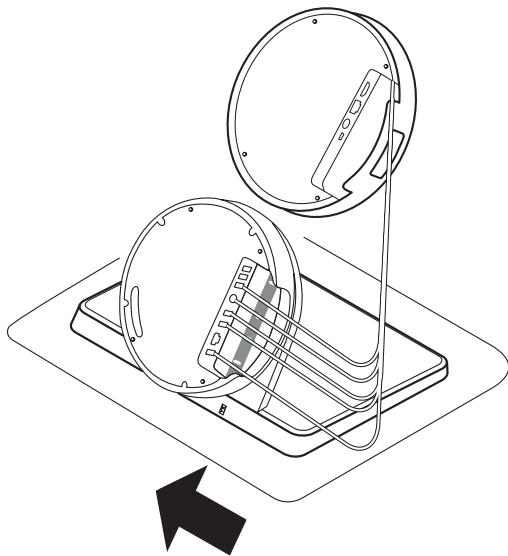


English

Connect SmartDock Base cables, matching connectors to color coded label.

简体中文

连接智能底座基座线缆，使接头与彩色标签相对应。

15

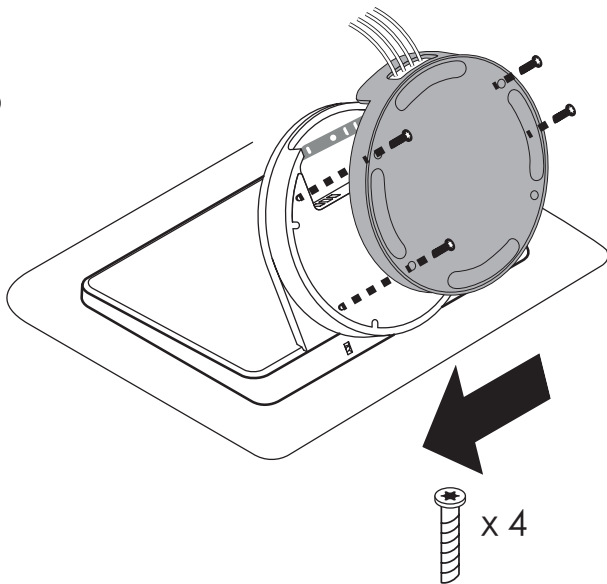


English

Attach SmartDock Flex base.

简体中文

连接智能底座集线盒底座。

16

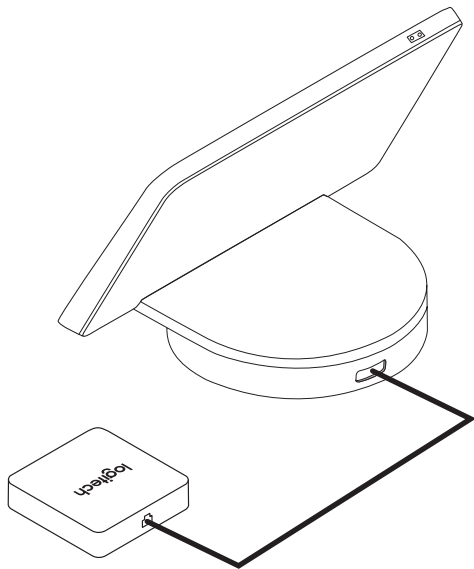

English

Connect SmartDock Flex base directly to extender box with the included CAT6 cable. Additional extenders, hubs or switches should not be used between SmartDock Flex base and extender box. Longer cables up to 15m (50ft) may be used, provided they are CAT6, SFTP and AWG number of 23 or lower.

简体中文


使用附带的 CAT6 线缆直接连接智能底座集线盒基座和延长线盒。智能底座集线盒基座和延长线盒间不应额外使用延长线、集线器或交换机。可以使用最长 15 米的线缆，只要此线缆规格为 CAT6、SFTP 和 AWG 23 号或更低。

17



DO NOT COVER VENT

请勿覆盖通风口

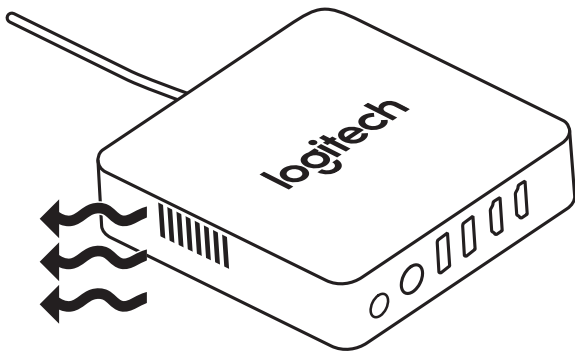


English

When placing the extender box, ensure that the side cooling vents are unobstructed and have access to open air flow.

简体中文

放置延长线盒时，请确保侧面散热孔畅通无阻，并可接触开放气流。

18

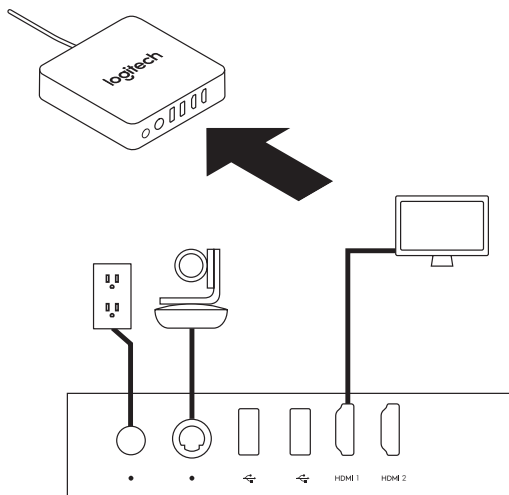


English

Connect external devices to the SmartDock Flex Extender Box. If only one external display is connected, please ensure that display is connected to HDMI 1.

简体中文

将外部设备连接至智能底座集线盒延长线盒。如果只连接一个外部显示设备, 请确保显示设备连接至 HDMI 1 端口。

19

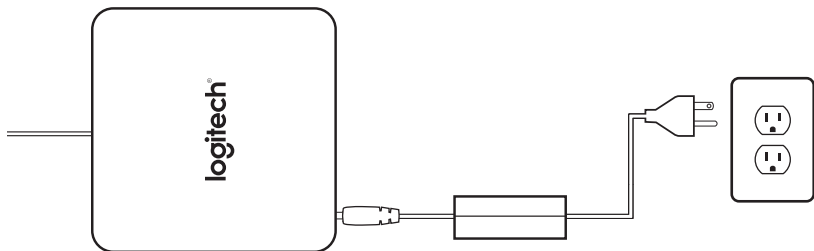

English

Connect power to the SmartDock Flex Extender Box.

简体中文

为智能底座集线盒延长线盒连接电源。

20

English


Connect AV Pass Through adapter to HDMI cable end (optional)

Normal content sharing with Skype

Room System: Connect the HDMI cable with AV Passthrough adaptor to the display output of your laptop.

Using AV Pass Through:

- Connect the HDMI Cable with AV PassThrough adaptor to the display output of your laptop.
- Connect the USB cable to your laptop.
- Press the button on the AV Passthrough Adaptor.
- Launch your meeting on your laptop, and use the Audio, Video and Display resources of the room.
- When done, simply disconnect the USB and HDMI from your laptop, and all of the devices revert back to the Skype Room System, ready for the next person.

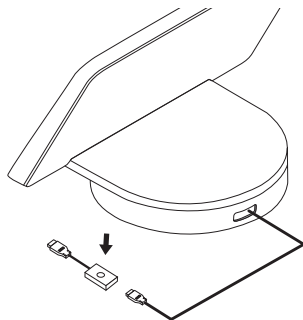

20


简体中文

将 AV 直连适配器连接至 HDMI 线缆一端 (选配)


通过 Skype Room System 进行一般内容共享: 将插有 AV 直连适配器的 HDMI 线缆连接至笔记本电脑的显示输出端口。

使用 AV 直连:

- 将插有 AV 直连适配器的 HDMI 线缆连接至笔记本电脑的显示输出端口。
- 将 USB 线缆连接至笔记本电脑。
- 按下 AV 直连适配器上的按钮。
- 在笔记本电脑上启动会议, 使用房间内的音视频和显示设备。
- 使用完毕后, 只需从笔记本电脑上拔除 USB 和 HDMI 线缆, 所有设备即回归 Skype Room System, 并可立即投入下一次使用。

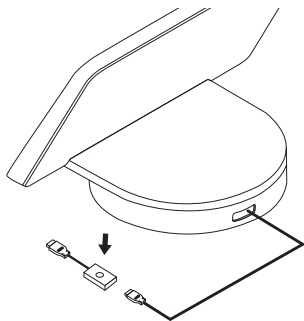


21

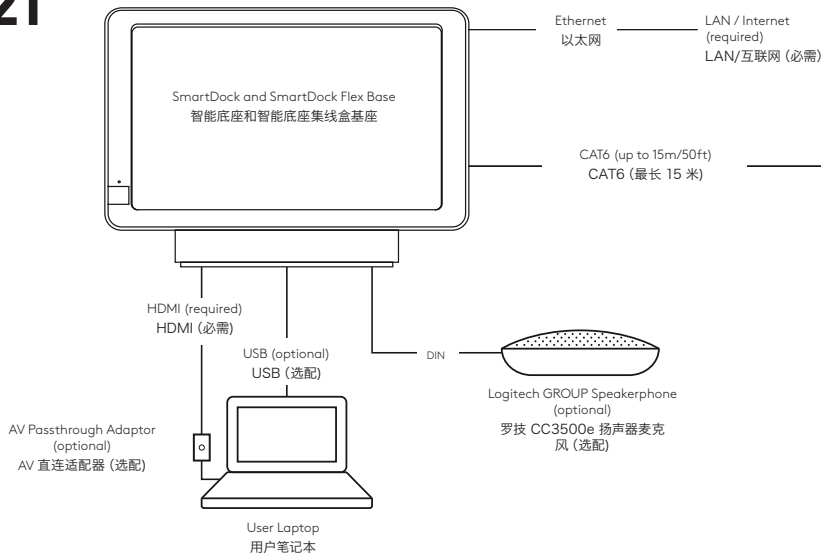

English


Verify the installation. Typical deployment as shown.

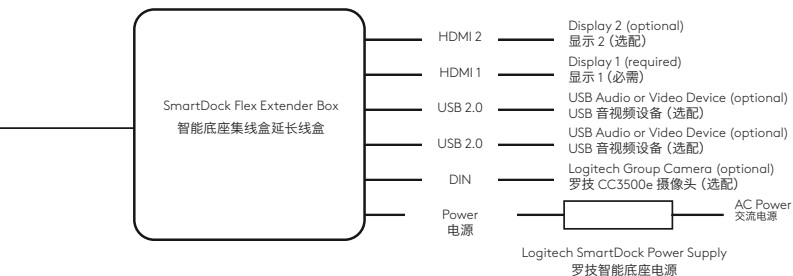

简体中文

验证安装。典型部署如图所示。

22

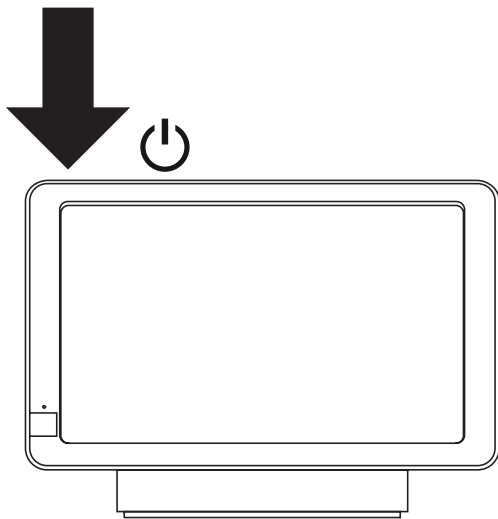

English

Power on Surface Pro.

简体中文

启动 Surface Pro。

© 2018 Logitech. Logi, 罗技 and the Logitech Logo are trademarks or registered trademarks of Logitech Europe S.A. and/or its affiliates in the U.S. and other countries. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

版权所有 ©2018 年罗技。Logi 和罗技标志为 Logitech Europe S.A. 和/或其美国及其他国家/地区附属公司的注册商标。罗技对于本手册中可能出现的任何错误不承担任何责任。本手册中包含的信息如有更改,恕不事先通知。

WEB-621-001088.005