 


CC4900e

Setup Guide | 设置指南







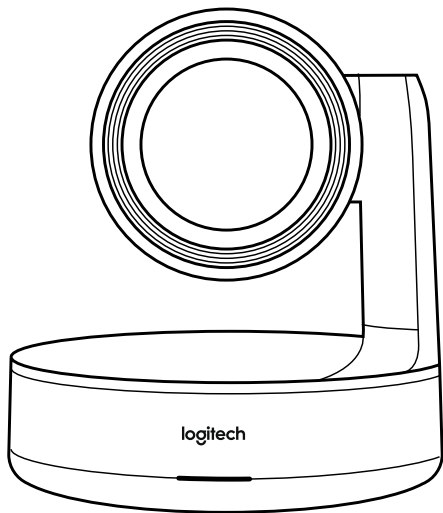


logitech 罗技™

English 3

简体中文 10

       WHAT'S IN THE BOX

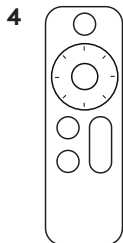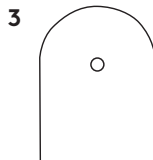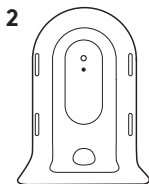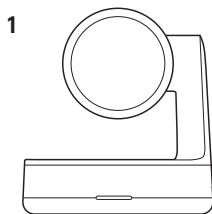


- 1. Camera
- 2. Camera Mount
- 3. Power Splitter Case
- 4. Remote

- 5. Power Splitter
- 6. Power Adapter
- 7. USB Cable
- 8. Documentation

WHAT'S WHAT

 
CAMERA

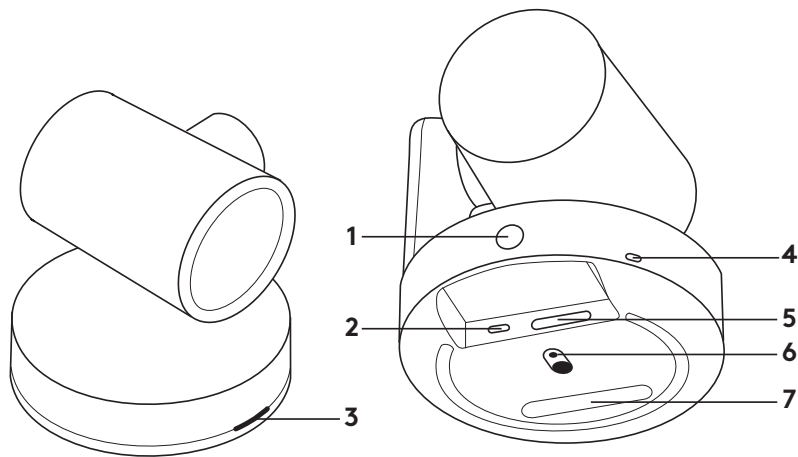

- 1. Remote Pairing Button
- 2. USB
- 3. Status LED

- 4. Security Slot
- 5. MIPI
- 6. Tripod Thread
- 7. Expansion Slot

 REMOTE

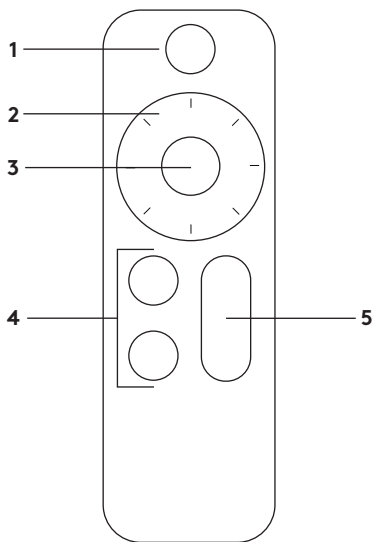

1. Video Mute

2. Pan/Tilt

3. Camera Home

 
4. Camera Presets

5. Zoom In/Out


CONNECT YOUR CAMERA

Connecting Rally Camera is the same whether you plan on using a dedicated computer in the room, or your team members bring a laptop to the room to run the meeting.

1. Plug the power splitter USB pigtail into the USB port of the camera.

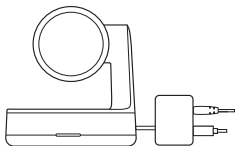


 2. Connect the power adapter from the power splitter to a wall outlet.

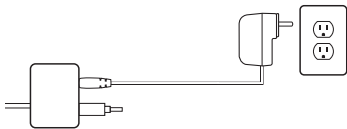


3. Connect the USB cable from the power splitter to your computer.

 4. The status LED will flash when the camera is connecting. Once complete, the camera head will rotate.

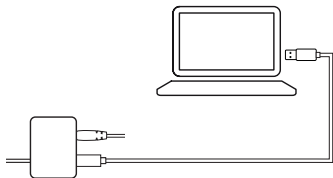

 
5. If issues persist, consult www.logitech.com/support/rallycamera or call technical support.

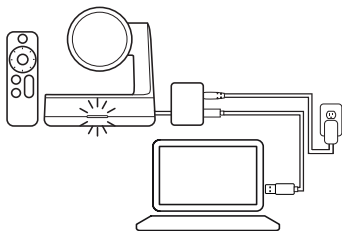


MOUNT YOUR CAMERA

We offer a number of options to mount your Rally Camera. For video calls, we recommend placing the camera as close to eye level as possible. Best results typically come from mounting below the TV.

 
1. Place on a table or shelf near the TV.
2. Mount on the wall:
 - a. Attach wall mount to the wall. Please use the appropriate screw type for your wall type.



 - b. Insert the power splitter into the power splitter case and route cables as shown.

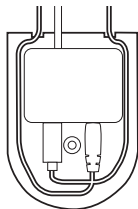

 - c. Thread the USB pigtail through the hole in the bottom of the mount and connect to the camera.

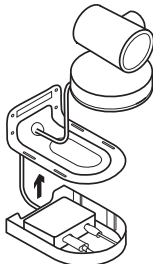

- d. Latch the power splitter case to the mount.



- e. Secure the camera to the mount via the tripod screw.
3. Mount to the TV: An optional TV mount bracket is available at www.logitech.com.

STARTING THE VIDEO CALL

To start a video call/capture session, start your application of choice and select the Rally Camera. The status LED will illuminate when video is streamed.

PAN AND TILT

Press once for incremental movement or press and hold for continuous pan and tilt.

Caution: Manually rotating camera head may damage the device.

CAMERA PRESETS

Set up to 2 preset positions. Once in the desired position, save a preset by pressing and holding the button for 3 seconds. Return to the desired position at any time by pressing the button once

HOME

Home will be the position the camera moves to when the camera is started. Save a new Home position by holding the button for 10 seconds.

CAMERA SETTINGS APPLICATION

Use this program to control the camera pan, tilt, zoom, focus, and image quality (like brightness and contrast). The software can be downloaded from www.logitech.com/support/rallycamera

RIGHTSIGHT

RightSight automatically moves the camera and adjusts the zoom to comfortably frame meeting participants. RightSight is available on Windows 10 and macOS 10.14+. To enable or disable RightSight, download the Logitech Sync application. Pressing the pan, tilt or zoom buttons on the remote will disable RightSight. Pressing the home button will restart RightSight.

PAIRING THE REMOTE

Your camera and remote control are paired at the factory. However, if you need to pair a remote to the camera (such as when replacing a lost remote) do the following:

 
 
 
 
 
 
1. Press and hold button on the back of the camera until LED flashes blue.
2. Press and hold the Video Mute button on the remote for 10 seconds to place it in pairing mode.
3. Once the remote and camera are paired the LED will stop flashing
4. If the pairing fails, the LED will keep flashing. Start from step 2 and repeat.

FOR MORE INFORMATION

You can find additional information on Rally including:

- FAQs
- Firmware Upgrades
- Software Downloads
- Support Community
- Warranty Information
- Replacement Parts
- And more at
www.logitech.com/support/rallycamera

包装内容

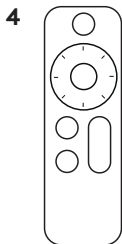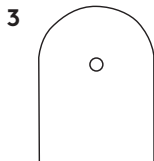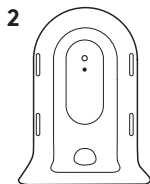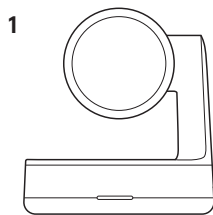


- 1. 摄像头
- 2. 摄像头安装底座
- 3. 电源分线器盒
- 4. 遥控器

- 5. 电源分线器
- 6. 电源适配器
- 7. USB 线缆
- 8. 文档

硬件说明

 
摄像头

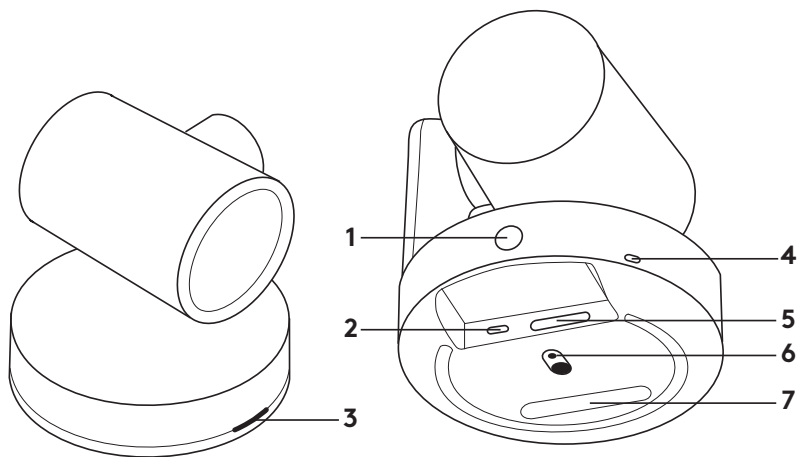

- 1. 遥控器配对按钮
- 2. USB 端口
- 3. LED 状态指示灯

- 4. 防盗锁插孔
- 5. MIPI 端口
- 6. 三脚架安装螺纹
- 7. 扩展插孔

 遥控器

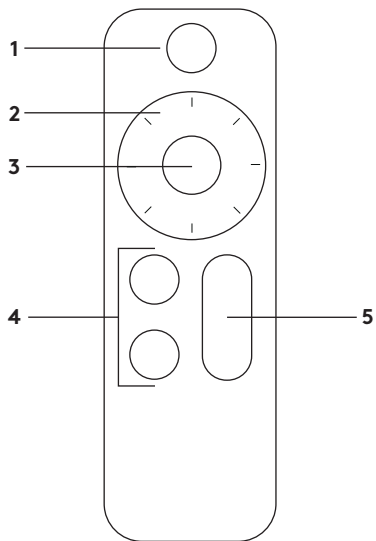

1. 视频静音

2. 平移/俯仰

3. 摄像头复位

 
4. 摄像头预设位

5. 变焦放大/缩小


连接摄像头

无论您打算在会议室使用专用电脑，还是使用自带的笔记本召开会议，CC4900e 的连接方式都是一样的。

1. 将电源分线器的 USB 端插入摄像头的 USB 端口。

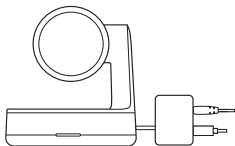


 2. 使用电源适配器将电源分线器与电源插座相连接。

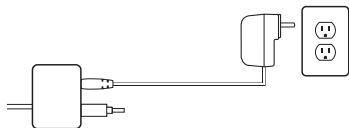


3. 使用 USB 线缆将电源分线器与计算机相连接。

 4. 摄像头正在连接时，LED 指示灯会闪烁。连接成功后，摄像头会旋转。

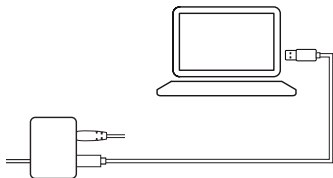

 5. 若仍存在问题，请咨询 www.logitech.com/support/rallycamera 或致电技术支持。

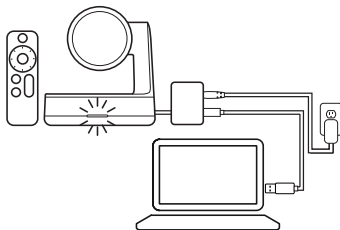


安装摄像头

我们为 CC4900e 提供了多种安装方式。对于视频通话，建议将摄像头尽量置于与视线平齐的高度。通常来说，安装于电视下方效果更佳。


1. 放置于桌面或电视附近的架子上。
2. 安装于墙面上：
 - a. 将壁装底座固定在墙面上。请根据墙壁类型选用适合的螺丝类型。



 - b. 将电源分线器放入电源分线器盒内，走线方式如图所示。

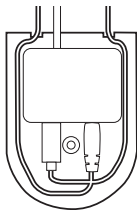

 - c. 将 USB 端口穿过安装底座底部孔洞，连接至摄像头。

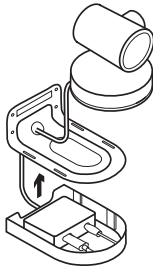

- d. 将电源分线器盒嵌扣入安装底座。



- e. 使用三脚架螺丝将摄像头固定于安装底座上。
3. 安装于电视上：选购适配电视安装支架，请访问 www.logitech.com。

进行视频通话

要进行视频通话，请打开您选择的应用程序，并选择 CC4900e。视频流传输时，LED 状态指示灯会亮起。

平移与俯仰

点按按钮可进行位置微调, 按住按钮可控制摄像头持续平移或俯仰运动。

注意: 手动旋转摄像头可能会造成设备损坏。

摄像头预设位

可设置 2 个预设位置。摄像头位于要保存的位置时, 按住按钮 3 秒钟以保存预设位。按下预设位按钮, 摄像头即可回到预设位置。

复位

复位即让摄像头恢复至开机位置。按住此按钮 10 秒, 可保存新的复位位置。

摄像头设置应用程序

使用此程序可控制摄像头的平移、俯仰、变焦、对焦和画面质量 (如亮度和对比度)。下载软件请访问 www.logitech.com/support/rallycamera

RIGHTSIGHT

RightSight 自动移动摄像头并调节变焦以舒适地取景拍摄会议参与者。RightSight 支持 Windows 10 和 macOS 10.14+。要启用或禁用 RightSight, 请下载罗技 Sync 应用程序。按下遥控器上的平移、俯仰或变焦按钮将禁用 RightSight。按下“Home”按钮将重新启动 RightSight。

配对遥控器

摄像头和遥控器在出厂时已经配对。如需将遥控器与摄像头配对 (如原遥控器丢失, 另配新遥控器), 请按以下步骤操作:

4. 按住摄像头后侧按钮, 直至 LED 闪烁蓝色。
5. 按住遥控器上的视频静音按钮 10 秒, 使遥控器进入配对模式。
6. 遥控器和摄像头配对成功后, LED 会停止闪烁。
7. 若配对失败, LED 则保持闪烁。从第 2 步开始重新执行。

获取更多信息

有关 CC4900e 的其他信息, 例如:

- 常见问题解答
- 固件升级
- 软件下载
- 支持社区
- 保修信息
- 替换配件
- 以及更多信息, 请访问

www.logitech.com/support/rallycamera

© 2020 Logitech. Logi, Logitech, 罗技 and the Logitech Logo are trademarks or registered trademarks of Logitech Europe S.A. and/or its affiliates in the U.S. and other countries. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

版权所有 © 2020 年罗技。Logi、罗技、Logitech和罗技标志为 Logitech Europe S.A. 和/或其美国及其他国家/地区附属公司的商标，并或已注册。所有其它商标均是其各自所有者的财产。罗技对于本手册中可能出现的任何错误不承担任何责任。本手册中包含的信息如有更改，恕不事先通知。

WEB-621-001772.002