 


Z623 SPEAKER SYSTEM WITH SUBWOOFER

Complete Setup Guide
完整设置指南

完整設定指南
설치 가이드

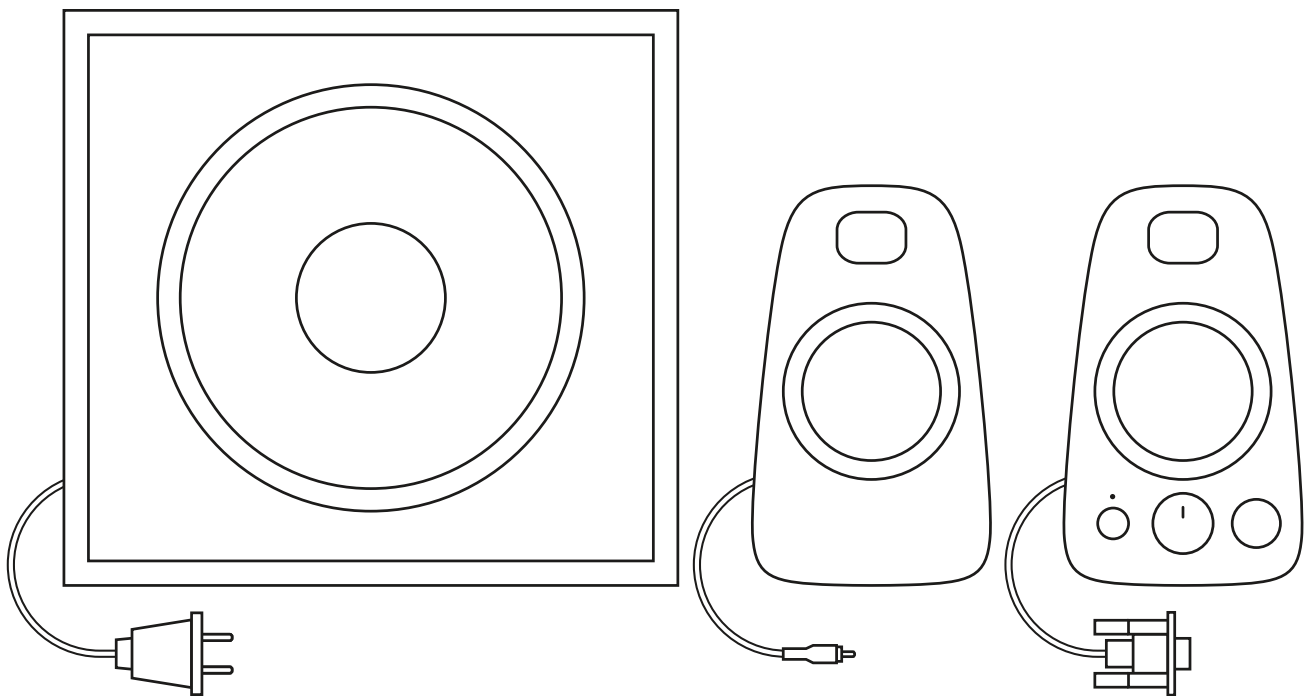


logitech®

CONTENTS

English	3	繁體中文	11
简体中文	7	한국어	15

 
KNOW YOUR PRODUCT

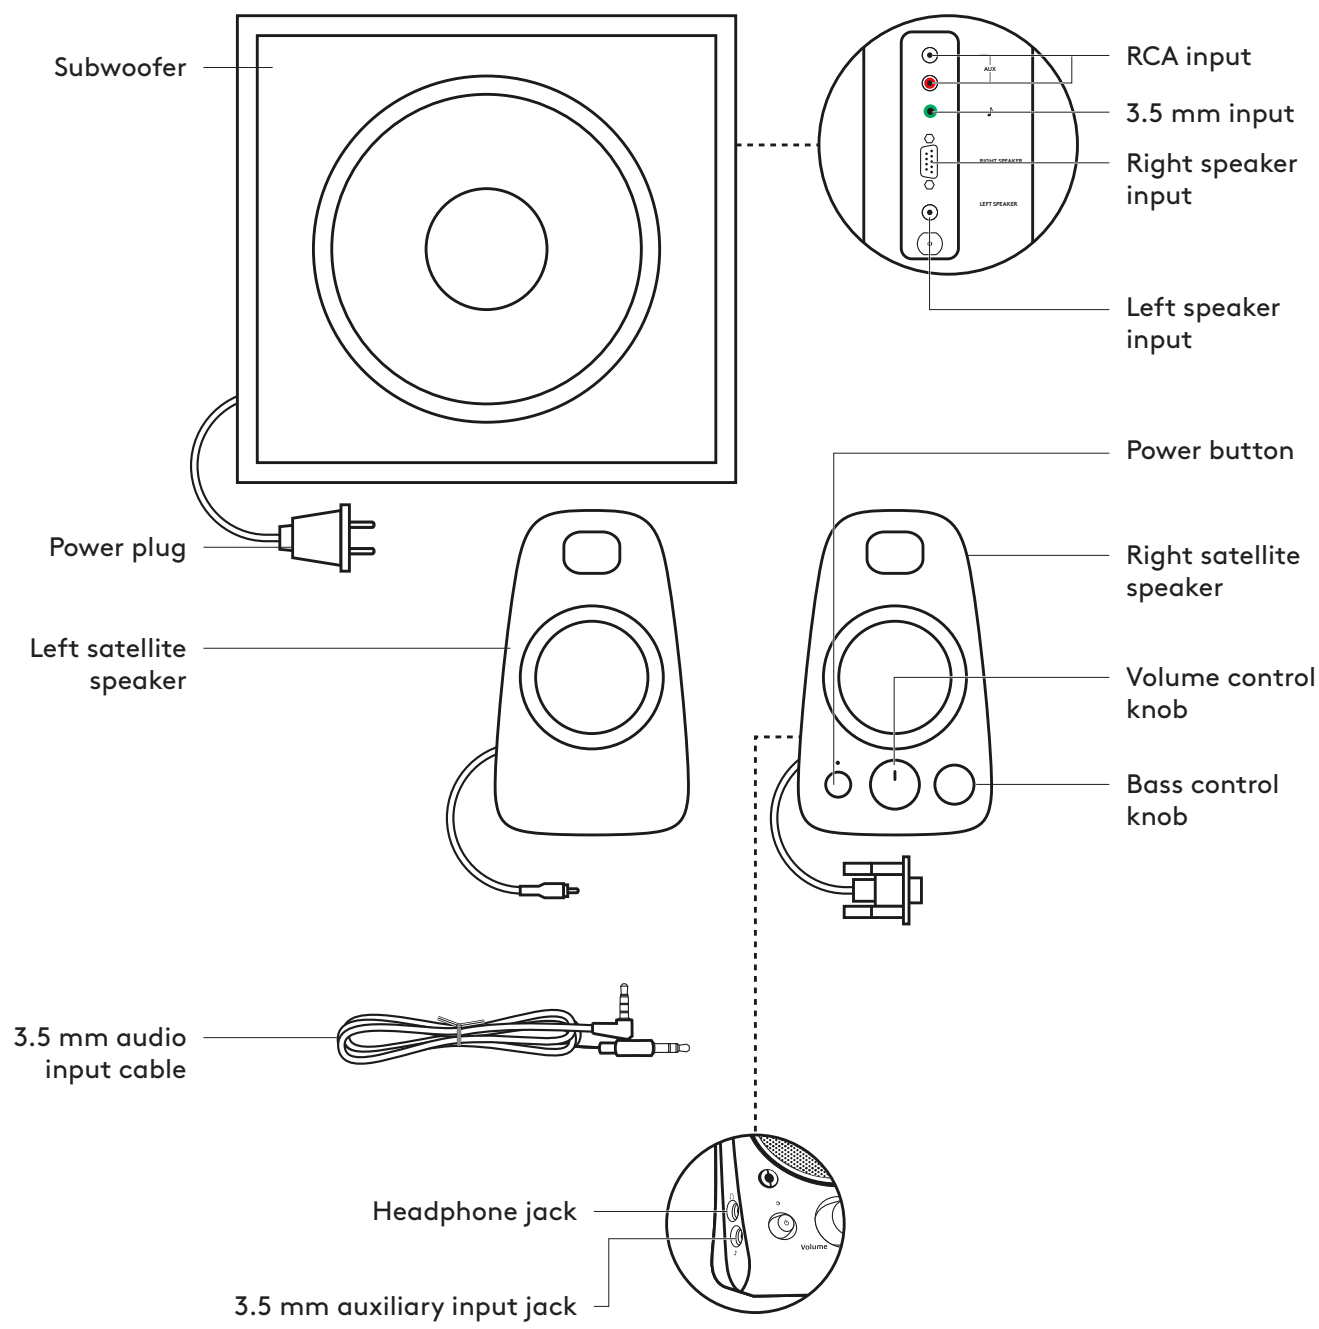


CONNECT THE SPEAKERS

1. Plug the VGA connector on the right satellite into the VGA subwoofer port. Then plug the RCA connector on the left speaker into the corresponding jack on the back of the subwoofer.
2. Plug the power plug into an electrical outlet.
3. Press power button on the right satellite speaker to turn on the Z623 speaker system.

 
1

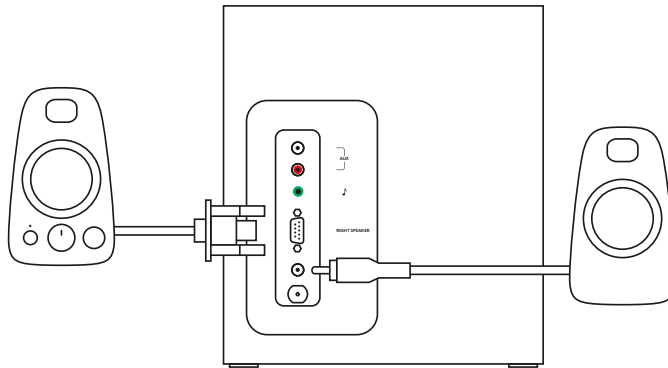

2

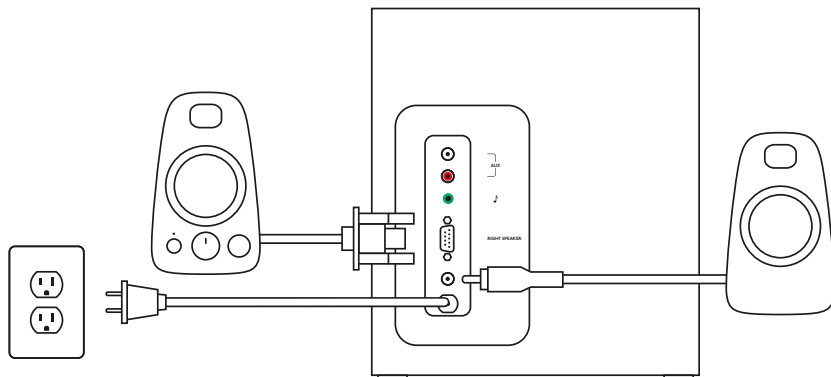 

3

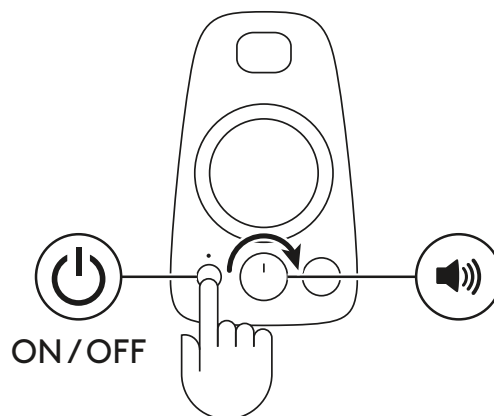 

CONNECT TO AUDIO SOURCE

1A. Using a 3.5 mm cable:

Connect one end of the provided 3.5 mm cable to the auxiliary input jack on the back of the subwoofer and the other end to the 3.5 mm jack on your device.

1B. Connect one end of the provided 3.5 mm cable to the auxiliary input jack on the right satellite and the other end to the 3.5 mm jack on your device. To adjust the volume on the speakers, use the volume control knob on the front of the right speaker. If you are using the headphone output on your device, make sure the volume level on your device is set to 80% or higher.

 
2. Using a RCA cable:

Connect one end of the RCA cable to the corresponding RCA jack on the back of the subwoofer and the other end to the RCA jack your device.


NOTE: The RCA cable is not included in the box and must be purchased separately.

3. Plug your headphones into the 3.5 mm headphone jack on the right speaker. To adjust the volume of your headphones, use the volume control knob on the front of the right speaker.


1A

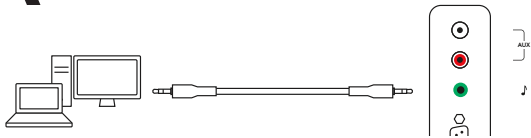

1B

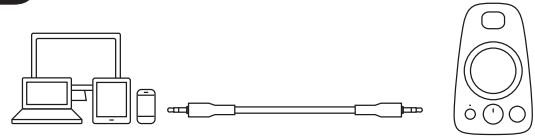 

2

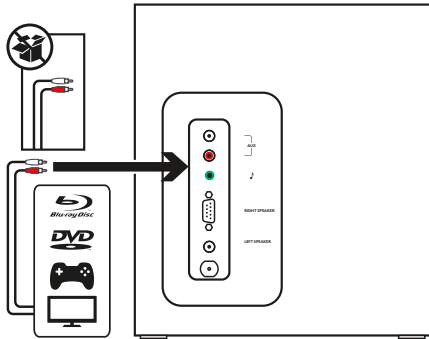 

3



 
ADJUST THE VOLUME

1. To adjust the volume on the speakers, use the middle knob on the front of the right speaker. Turn clockwise (counterclockwise) to increase (decrease) the volume.


ADJUST THE BASS

2. Adjust the bass level by turning the bass control knob on the right speaker. Turn bass knob to the right for deeper bass or to the left for less bass.

1

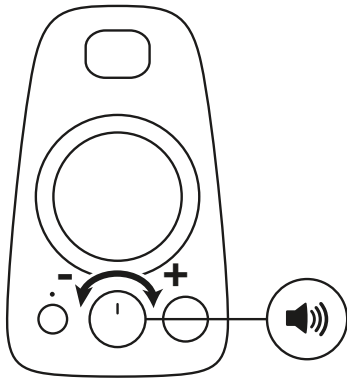


2

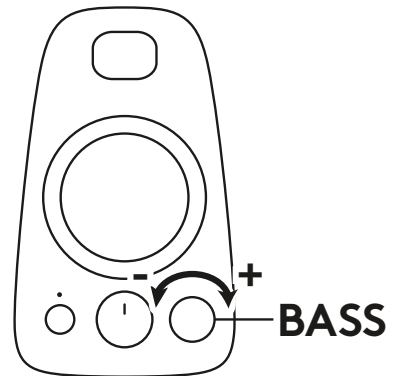 

www.logitech.com/support/Z623

 
了解您的产品

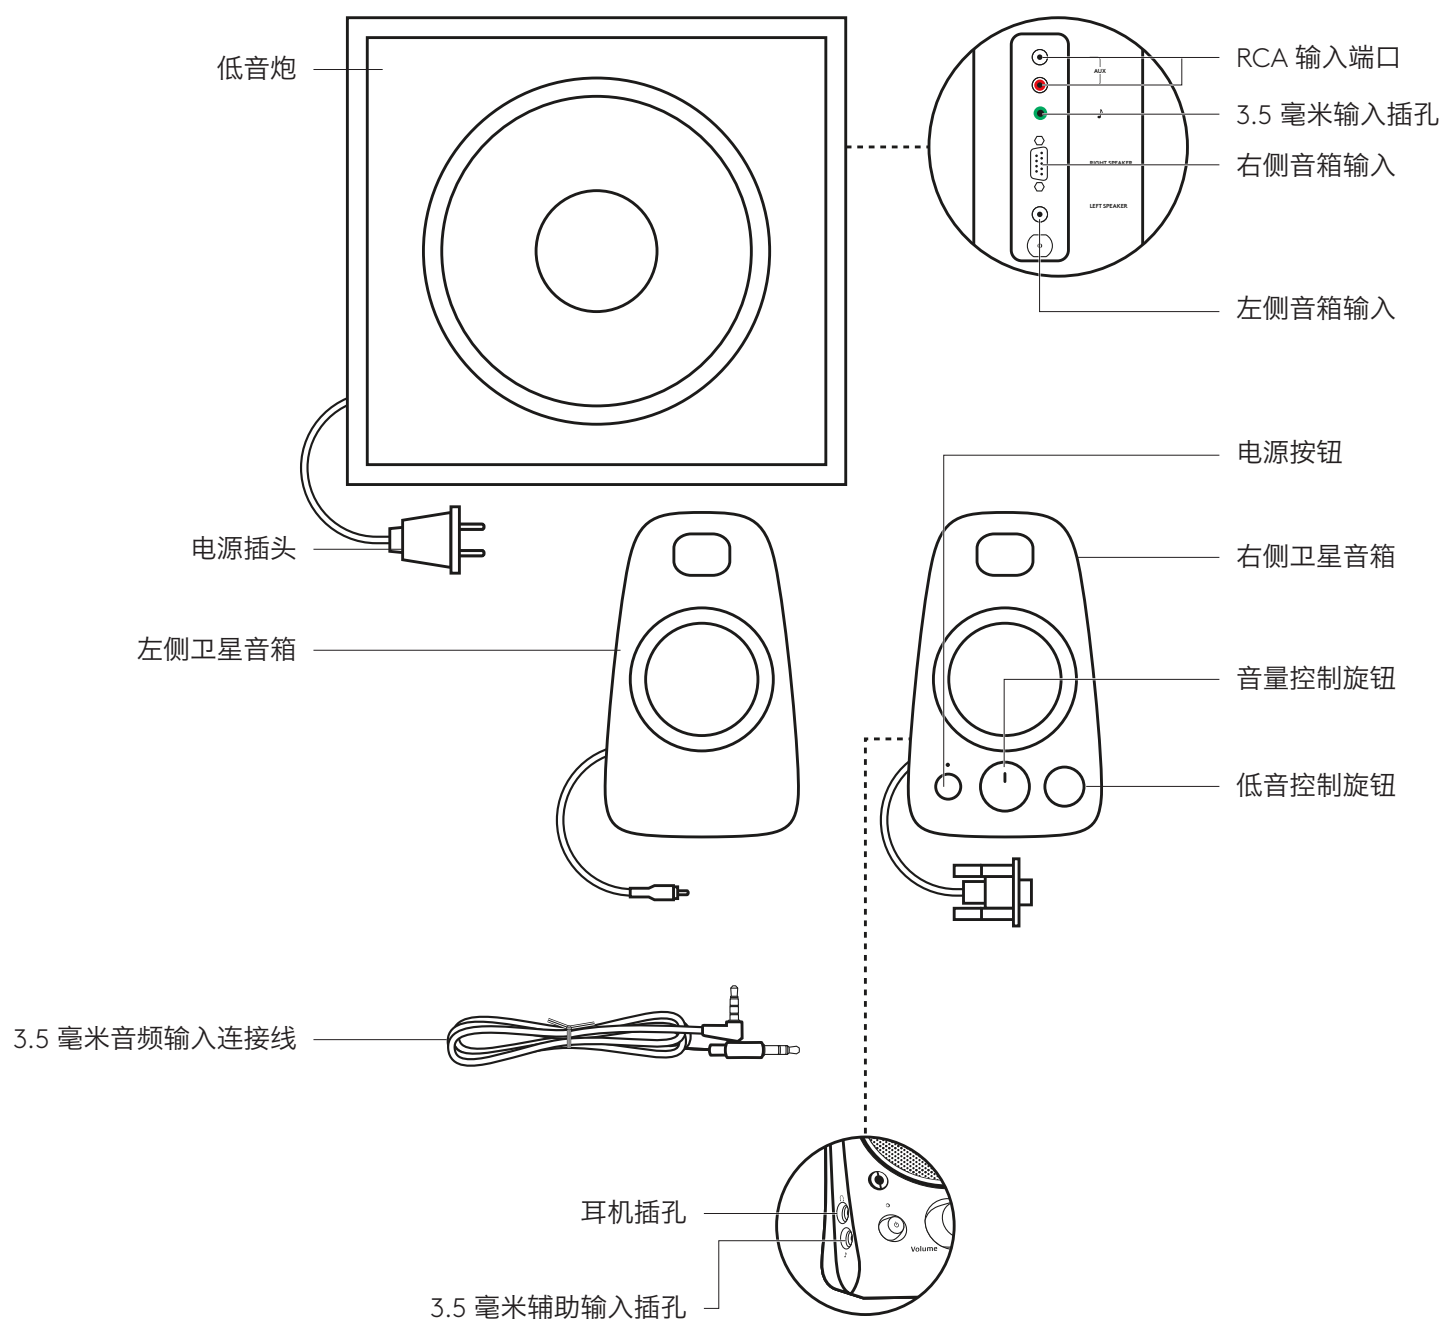


连接音箱

1. 将右侧卫星音箱上的 VGA 插头插入 VGA 低音炮端口。然后将左侧音箱上的 RCA 插头插入低音炮背面的对应插孔。
2. 将电源线插入电源插座。
3. 按下右侧卫星音箱上的电源按钮, 开启 Z623 音箱系统。

 
1

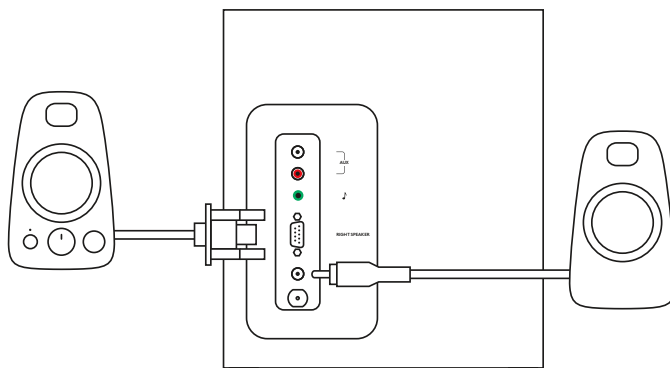

2

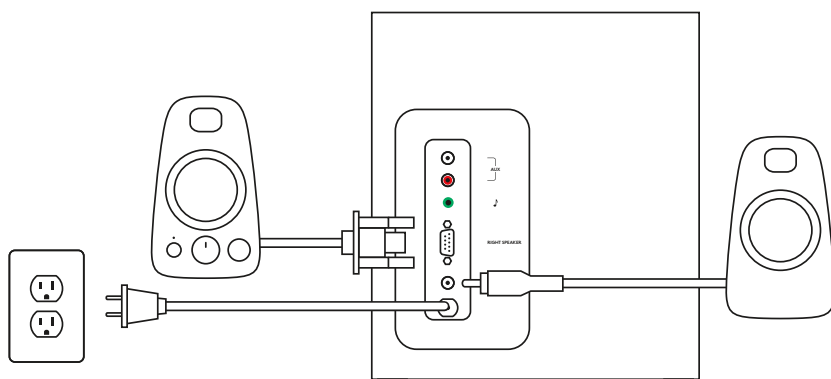 

3

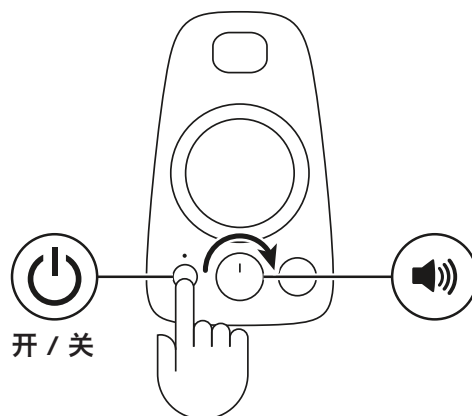 

连接音源

1A.使用 3.5 毫米线缆:

将随附的 3.5 毫米线缆的一端连接至低音炮背面的辅助输入插孔, 另一端连接至设备的 3.5 毫米插孔。

 
1B.将随附的 3.5 毫米线缆的一端连接至右侧卫星音箱的辅助输入插孔, 另一端连接至设备的 3.5 毫米插孔。要调节音箱的音量, 请使用位于右侧音箱前部的音量控制旋钮。如果您在设备上使用耳机输出, 请确保将设备的音量设为最大音量的 80% 或更高。

2. 使用 RCA 线缆: 将 RCA 线缆的一端连接至低音炮背面的对应 RCA 插孔, 另一端连接至设备的 RCA 插孔。


注: RCA 线缆未随附, 需另购。

3. 将耳机插入右侧音箱的 3.5 毫米耳机插孔。要调节耳机音量, 请使用位于右侧音箱前部的音量控制旋钮。


1A

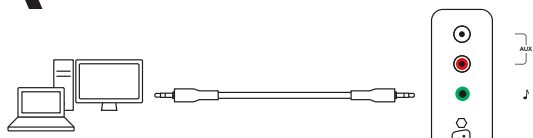

1B

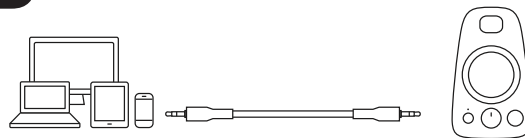 

2

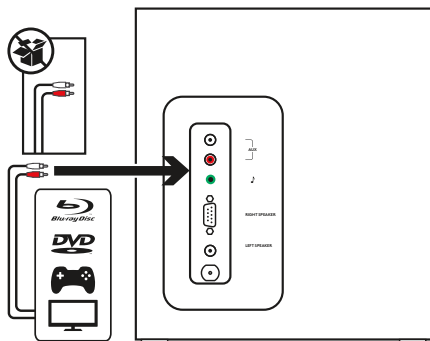 

3



 
调节音量

1. 要调节音箱的音量, 请使用位于右侧音箱前部的中央旋钮。顺时针 (逆时针) 转动以提高 (降低) 音量。


调节低音

2. 使用右侧音箱的低音控制旋钮可调节低音级别。将低音旋钮向右旋转可获得更低沉的低音, 向左旋转可获得较少的低音。

1

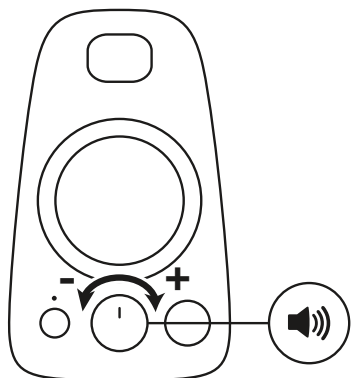


2

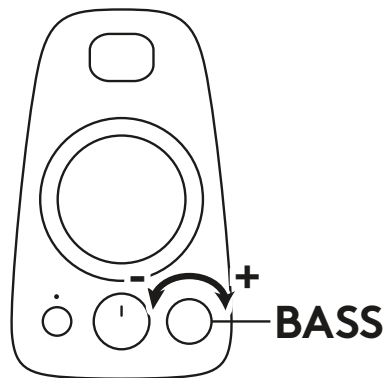 

www.logitech.com/support/Z623

 
瞭解您的產品

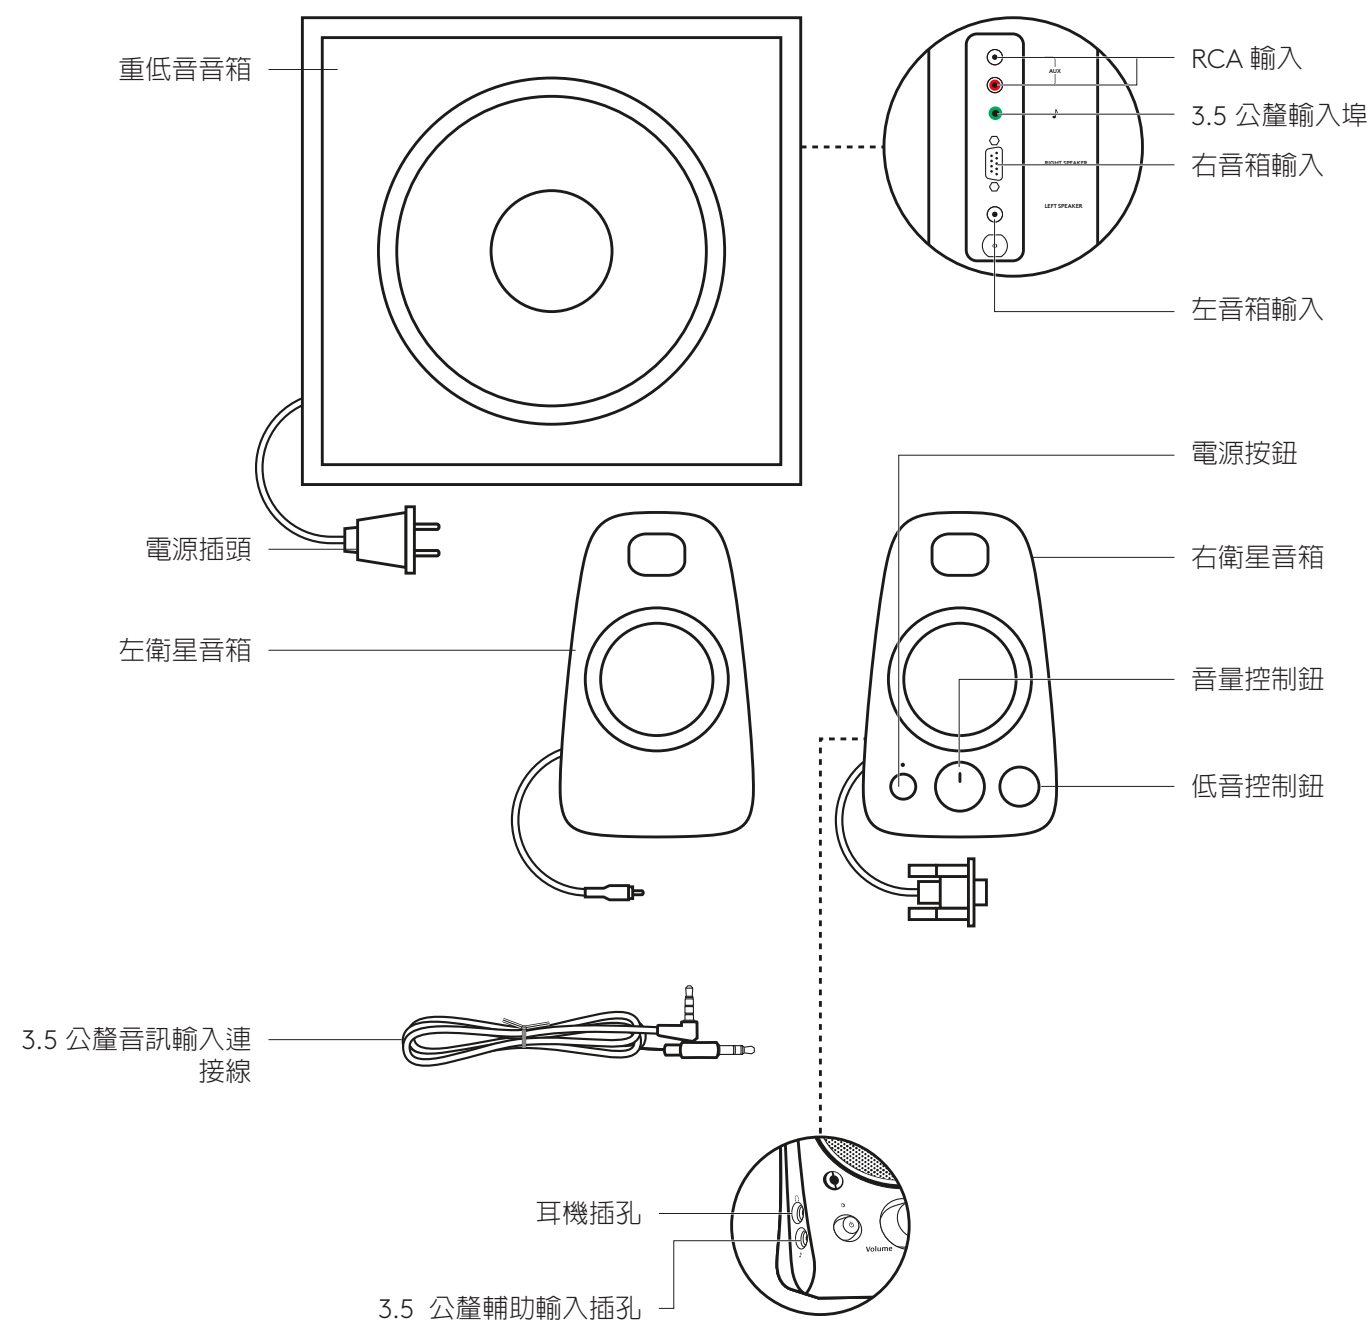


連接音箱

1. 將右衛星音箱的 VGA 接頭插入重低音音箱的 VGA 連接埠。然後將左衛星音箱的 RCA 接頭插入到重低音音箱背面的對應插孔。
2. 將電源插頭插入到電氣插座。
3. 按下右衛星音箱的電源按鈕，開啓 Z623 音箱系統電源。

 
1

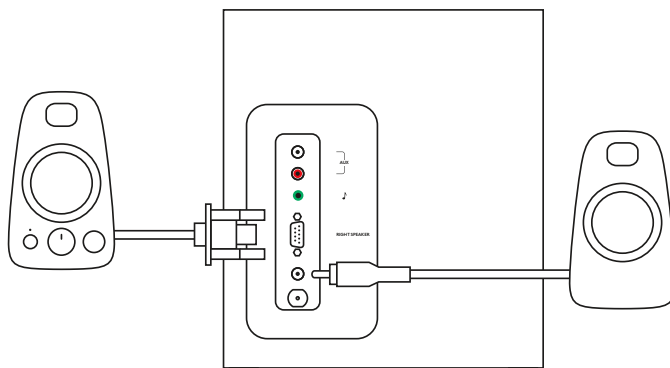

2

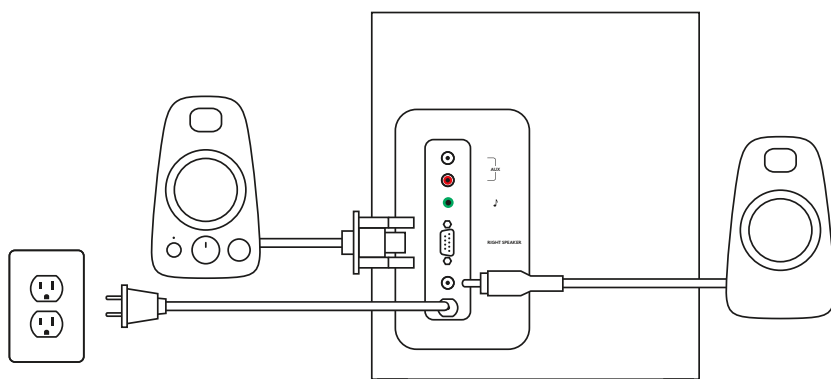 

3

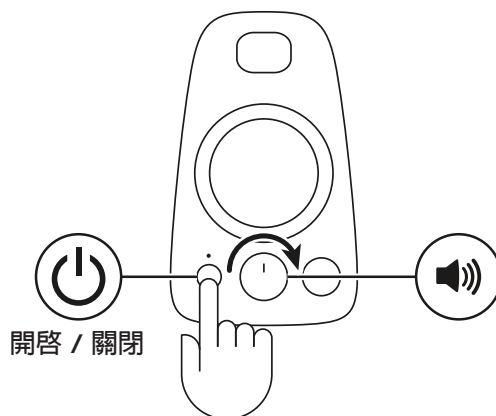 

連接到音訊來源

1A. 使用 3.5 公釐連接線：

將隨附之 3.5 公釐連接線的一端插入到重低音音箱背面的輔助輸入插孔，另一端插入到裝置上的 3.5 公釐插孔。

1B. 將隨附之 3.5 公釐連接線的一端插入到右衛星音箱上的輔助輸入插孔，另一端插入到裝置上的 3.5 公釐插孔。若要調整音箱的音量，請使用右音箱前方的音量控制鈕。如果您在裝置上是使用耳機輸出，請確認裝置上的音量是設定為 80% 或更高。

 
2. 使用 RCA 連接線：

將 RCA 連接線的一端插入到重低音音箱背面的對應 RCA 插孔，另一端插入到裝置上的 RCA 插孔。


注意：包裝盒內未隨附 RCA 連接線，需另購。

3. 將耳機插入到右音箱上的 3.5 公釐耳機插孔。若要調整耳機的音量，請使用右音箱前方的音量控制鈕。


1A

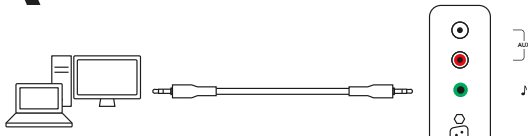

1B

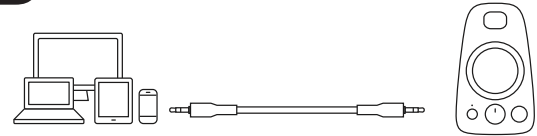 

2

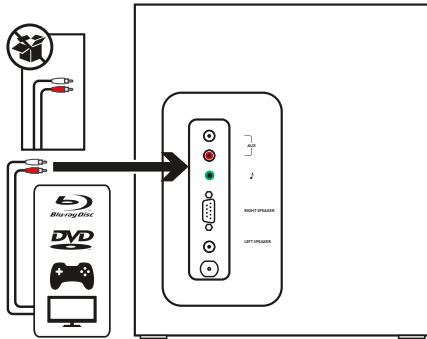 

3



 
調整音量

1. 若要調整音箱的音量，請使用右音箱前方的中間控制鈕。順時針 (逆時針) 轉動可增加 (減少) 音量。


調整低音

2. 轉動右音箱上的低音控制鈕可調整低音音量。向右轉動控制鈕可加強低音，向左轉動可減少低音。

1

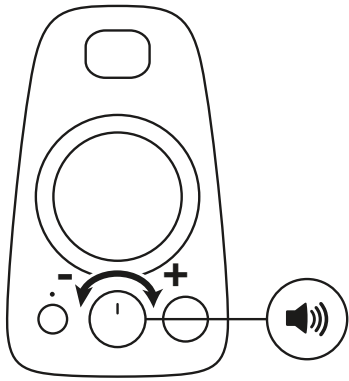


2

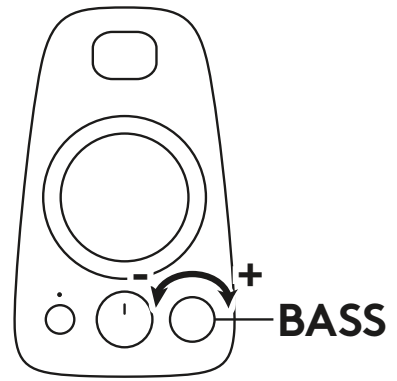 

www.logitech.com/support/Z623

 
제품 설명

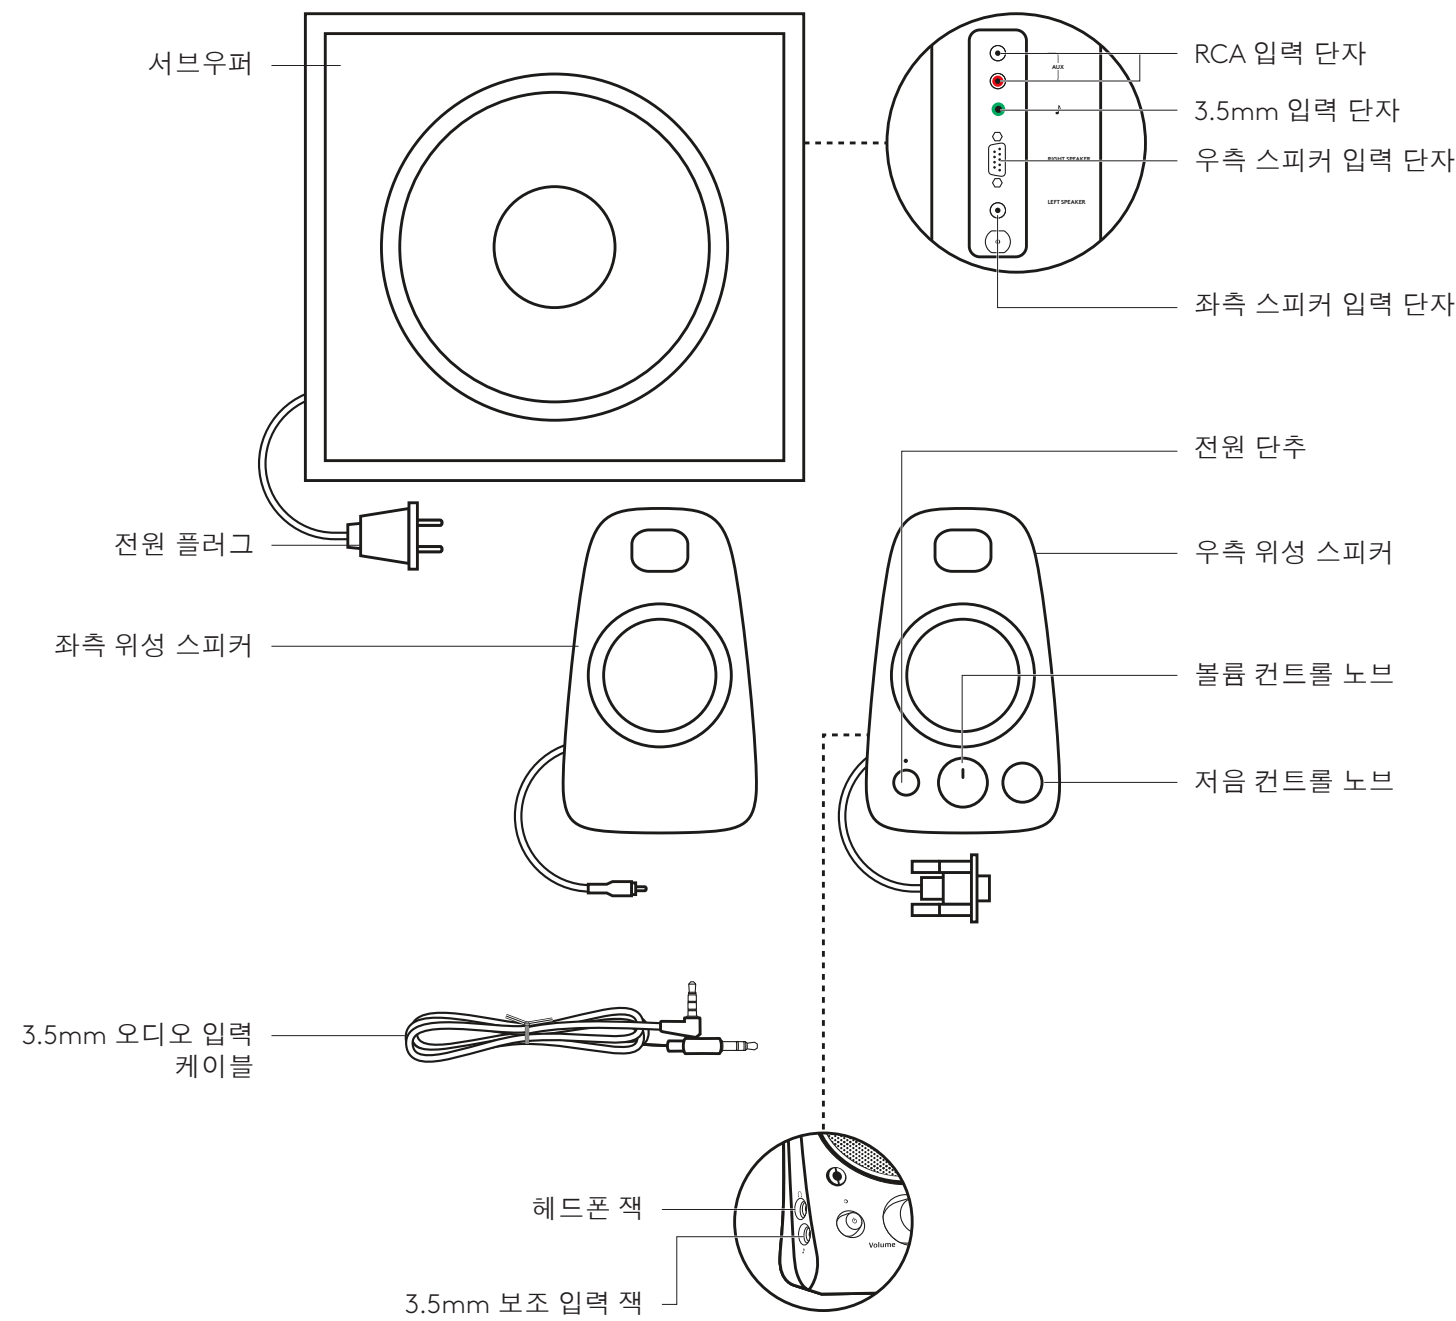


스피커 연결

1. VGA 서브우퍼 포트 우측 스피커에 VGA 커넥터를 연결합니다. 그다음 서브우퍼 뒤편의 잭에 좌측 스피커의 RCA 커넥터를 연결합니다.
2. 전원 플러그를 전기 콘센트에 연결합니다.
3. 우측 스피커에 있는 전원 버튼을 눌러 Z623 스피커 시스템의 전원을 켭니다.

 
1

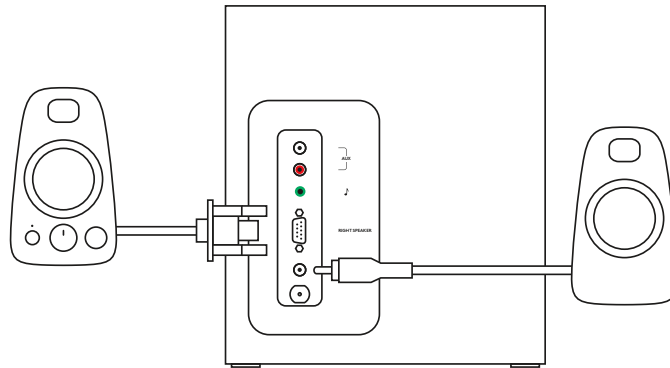

2

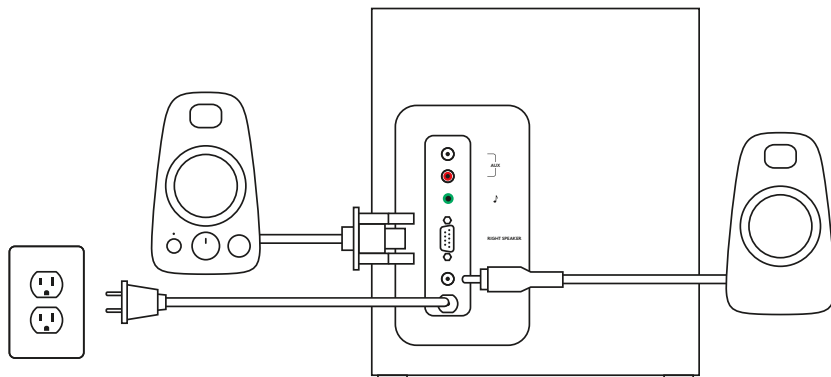 

3

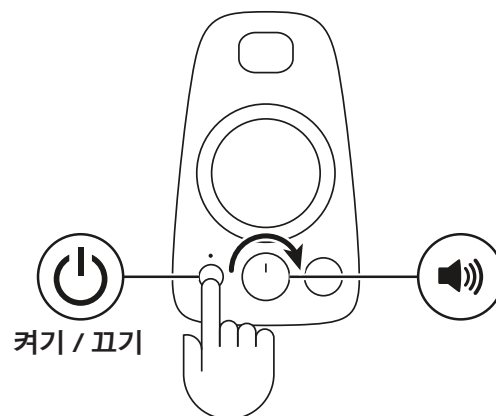 

오디오 소스 연결

1A. 3.5mm 케이블 사용:

동봉된 3.5mm 케이블의 한쪽 끝을 서브우퍼 후면의 보조 입력 잭에 연결하고 3.5mm 잭의 반대편 끝을 장치에 연결합니다.

1B. 동봉된 3.5mm 케이블의 한쪽 끝을 우측 스피커의 보조 입력 잭에 연결하고 3.5mm 잭의 반대편 끝을 장치에 연결합니다. 스피커에서 볼륨을 조절하려면 우측 스피커 전면에 있는 볼륨 컨트롤 노브를 사용합니다. 장치의 헤드폰 출력을 사용하는 경우 장치의 볼륨 레벨이 80% 이상으로 설정되어 있는지 확인합니다.

 
2. RCA 케이블 사용:

RCA 케이블의 한쪽 끝을 서브우퍼 후면의 RCA 잭에 연결하고 RCA의 반대편 끝을 장치에 연결합니다.


참고: RCA는 박스에 포함되지 않으며 따로 구매하셔야 합니다.

3. 우측 스피커의 3.5 mm 헤드폰 잭에 헤드폰을 연결합니다. 헤드폰에서 볼륨을 조절하려면 우측 스피커 전면에 있는 볼륨 컨트롤 노브를 사용합니다.


1A

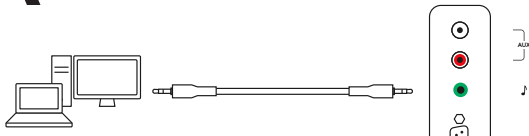

1B

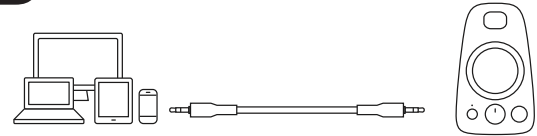 

2

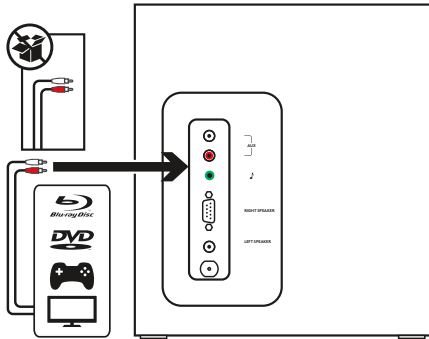 

3



 
볼륨 조정

1. 스피커에서 볼륨을 조절하려면 우측 스피커 전면에 있는 중앙 노브를 사용합니다. 시계 방향으로 돌리면 볼륨이 높아집니다(낮추려면 시계 반대 방향).


저음 조절

2. 저음을 조절하려면 우측 스피커의 저음 조절 노브를 돌립니다. 저음 노브를 오른쪽으로 돌리면 저음이 커지며 왼쪽으로 돌리면 작아집니다.

1

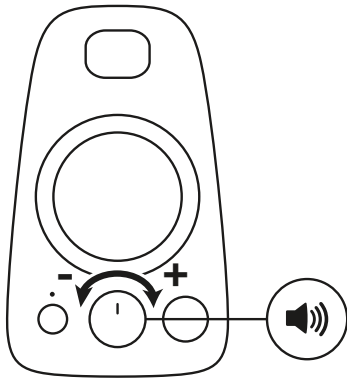

2

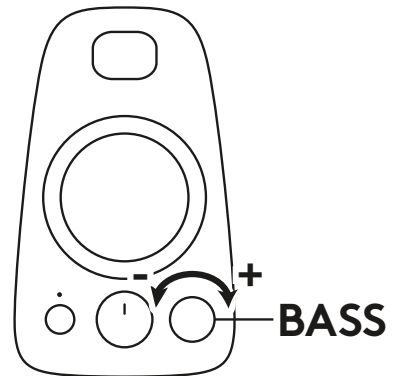 

www.logitech.com/support/Z623

www.logitech.com/support/Z623

© 2019 Logitech. Logitech, Logi and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

WEB-621-001240.002

