 


C1000s


Complete Setup Guide 设置指南

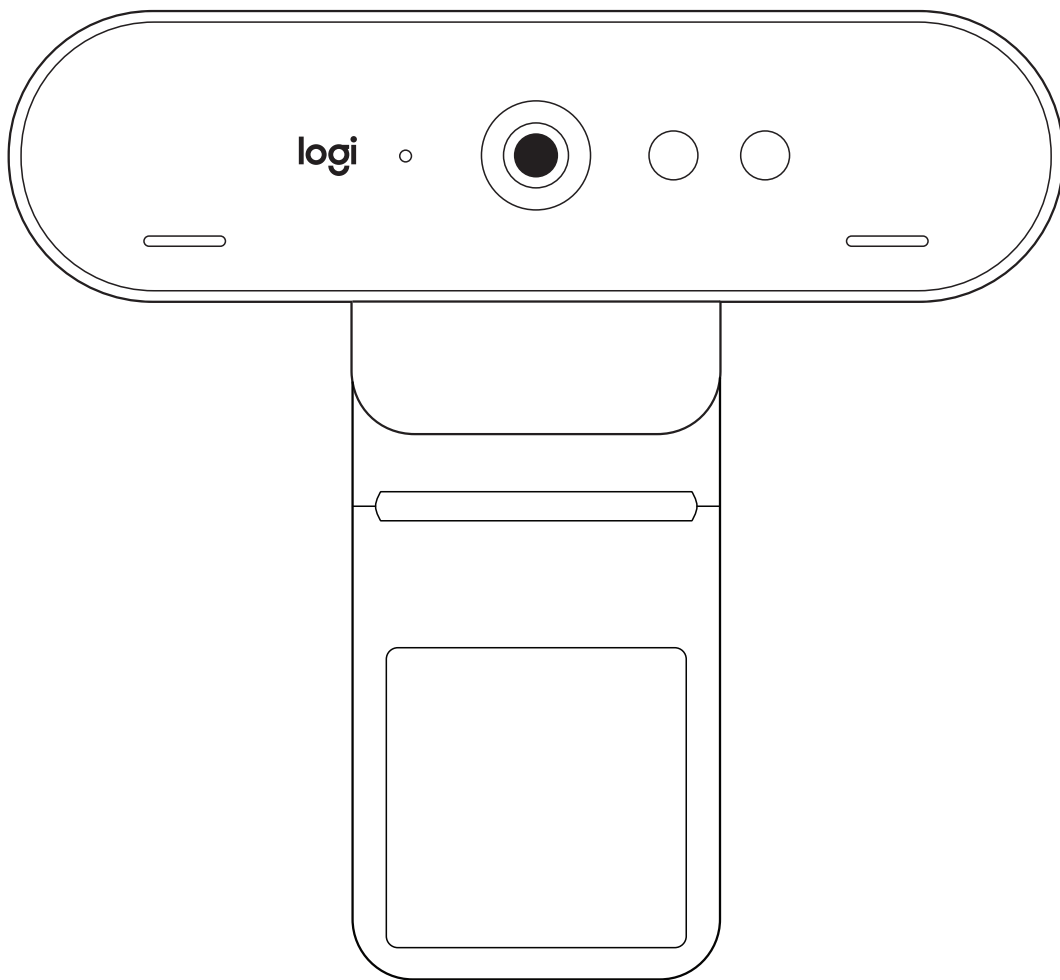


CONTENTS



English	3	简体中文	9
-------------------	---	----------------	---

  KNOW YOUR PRODUCT

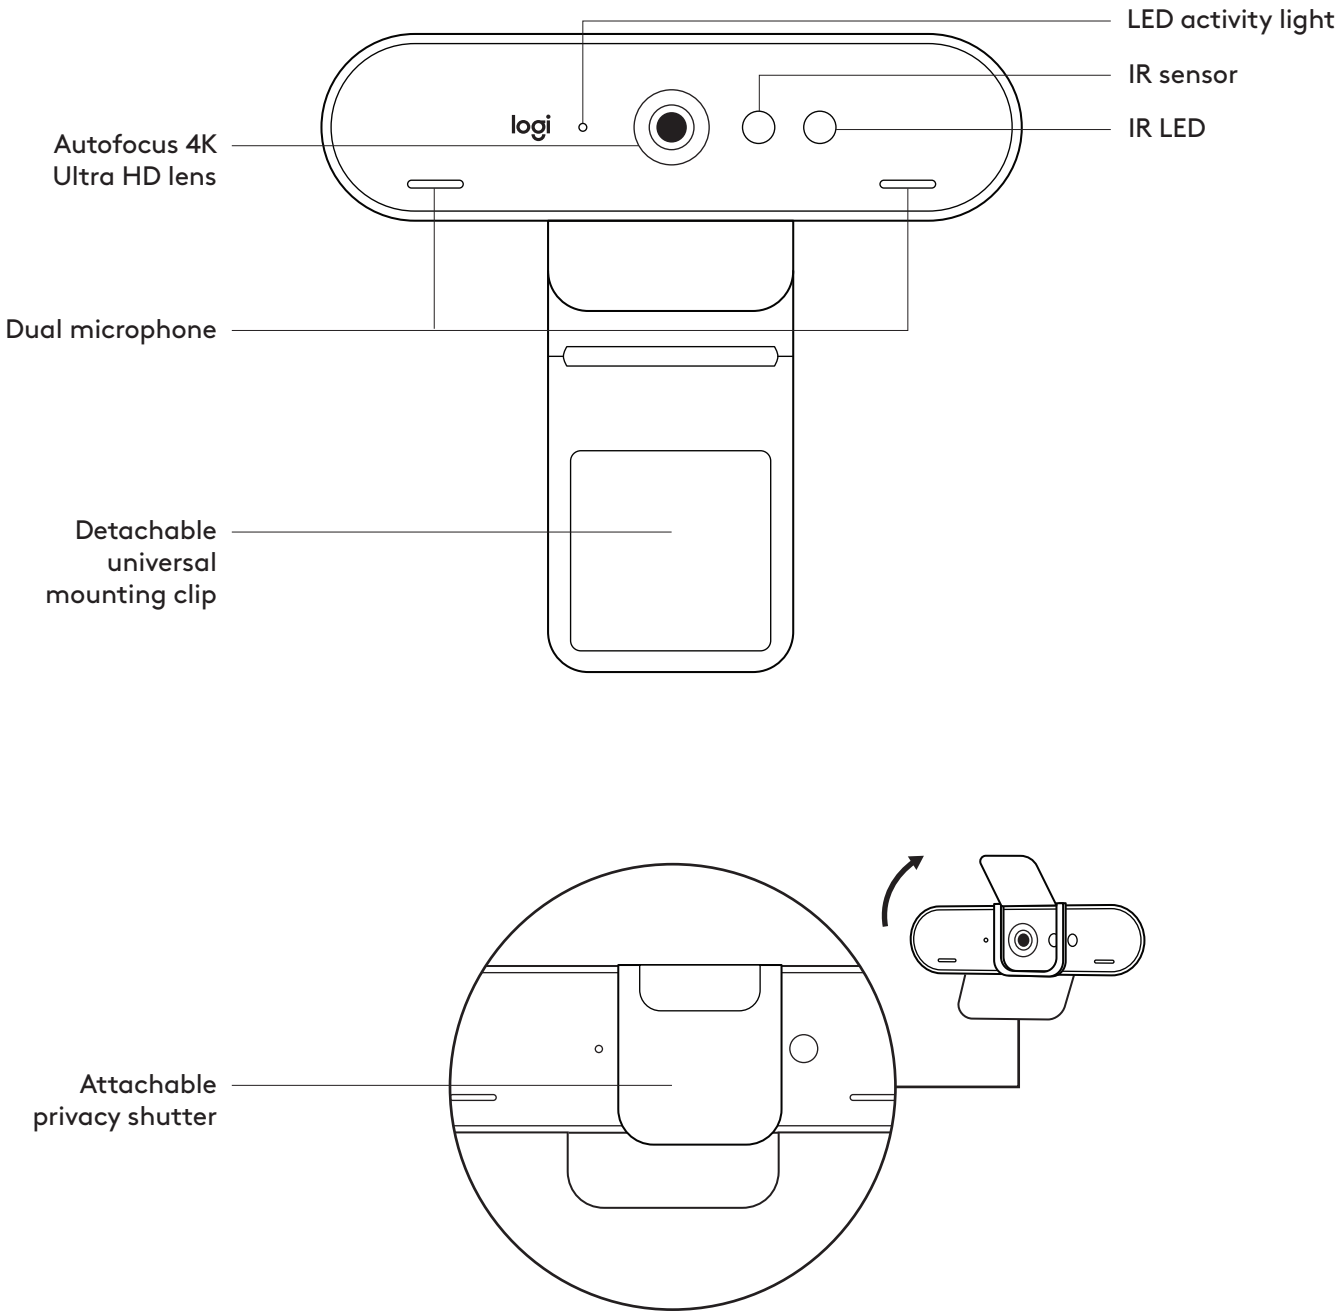

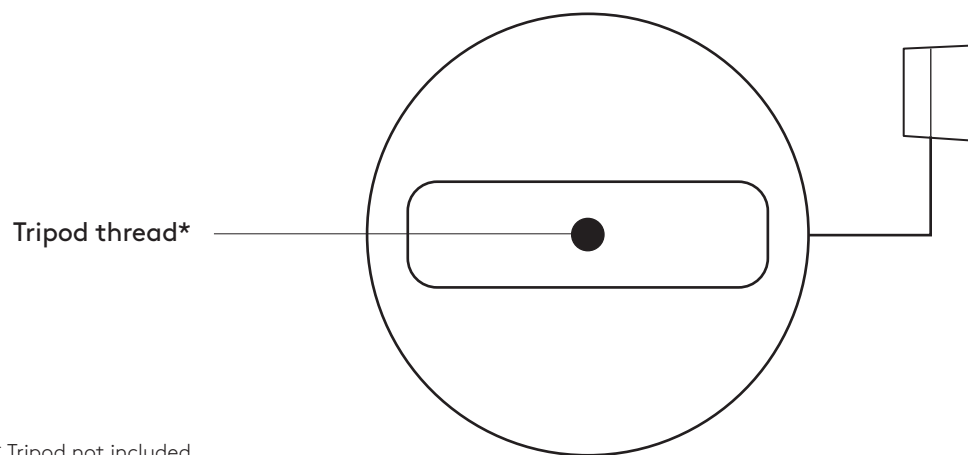

* Tripod not included

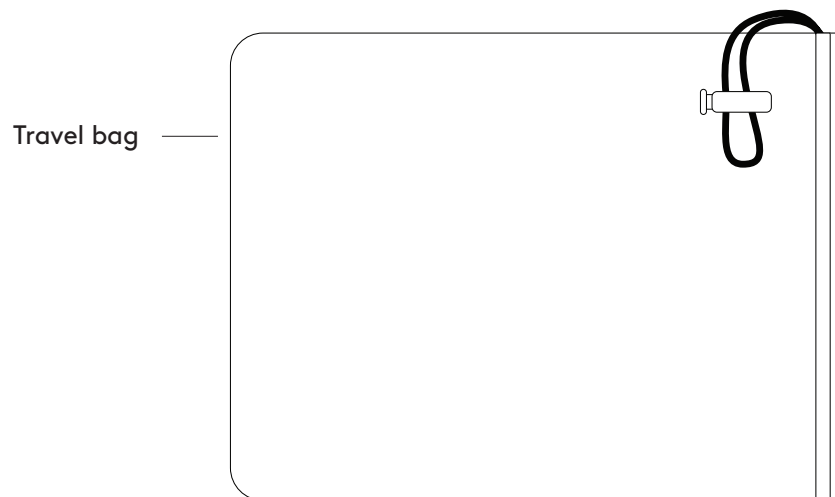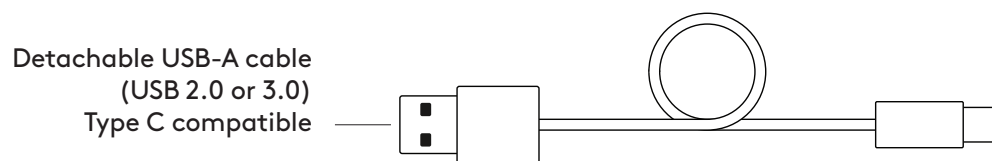  


WHAT'S IN THE BOX

- 1 Webcam
- 2 External privacy shutter
- 3 Travel bag
- 4 Detachable universal mounting clip (on webcam)
- 5 7.2 ft (2.2m) USB-A to USB-C cable (USB 2.0 or 3.0)
- 6 User documentation




ATTACH THE PRIVACY SHUTTER

 
- 1 Attach the privacy shutter over the lens on the webcam as shown.

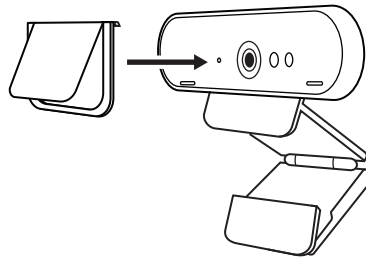

 - 2 Snap it onto the front of the webcam, directly over the center.

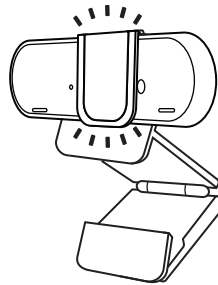

 
- 3 Manually adjust the privacy shutter to open or close as desired.

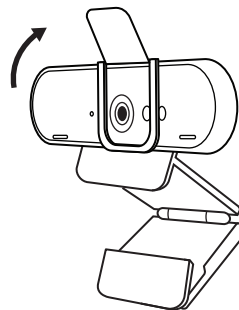


SETTING UP THE WEBCAM

For placement on a monitor

 
- 1 Place your webcam on a computer, laptop or monitor at a position or angle you desire.

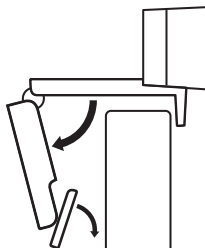

 - 2 Adjust the webcam to make sure the foot on the universal mounting clip is flush with the back of your device.

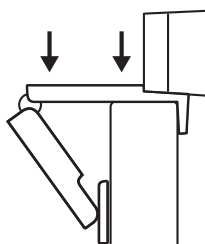


 - 3 Manually adjust the webcam up/down to the best position to frame yourself.

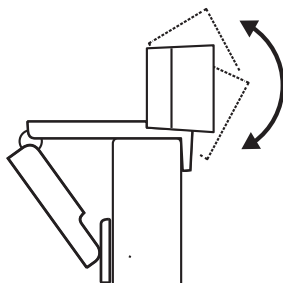


For placement on a tripod*

 
- 1 Remove the detachable universal mounting clip from the webcam.

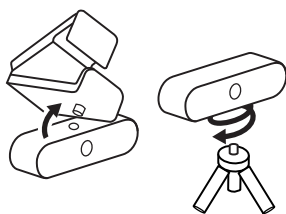

 
- 2 Locate the 1/4 inch tripod thread on the bottom of the webcam.

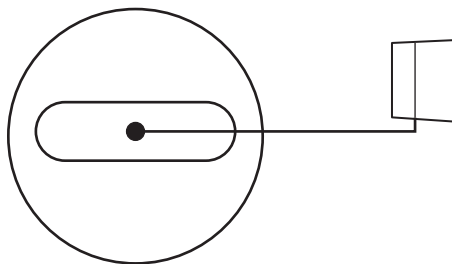

 - 3 Secure the webcam on your tripod by twisting it into the 1/4 inch thread.

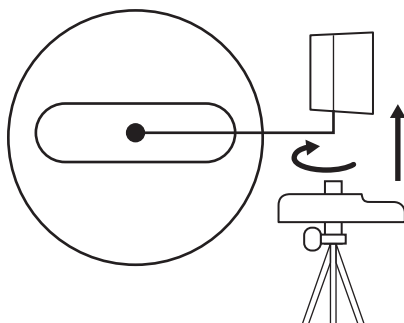

 - 4 Place your webcam with the tripod anywhere you desire to the best position to frame yourself.

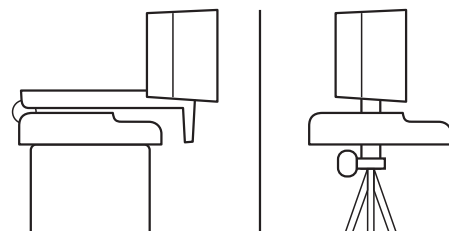

* Tripod not included

 
CONNECTING THE WEBCAM VIA USB-A

Plug the USB-C end into the webcam and the USB-A connector into the USB-A port on your computer.



SUCCESSFUL CONNECTION

LED activity light will light up when the webcam is in use by an application.

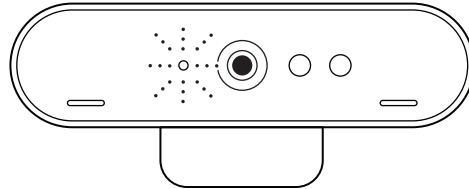

DIMENSIONS

WEBCAM:

Height x Width x Depth:
1.06 in (27 mm) x 4.02 in (102 mm) x 1.04 in (27 mm)

Cable Length: 7.2 ft (2.2 m)

Weight: 2.22 oz (63 g)

 
ATTACHABLE MOUNTING CLIP:

Height x Width x Depth:
0.75 in (19 mm) x 1.42 in (36 mm) x 2.48 in (63 mm)


Weight: 1.55 oz (44 g)

www.logitech.com/support/c1000s

了解您的产品

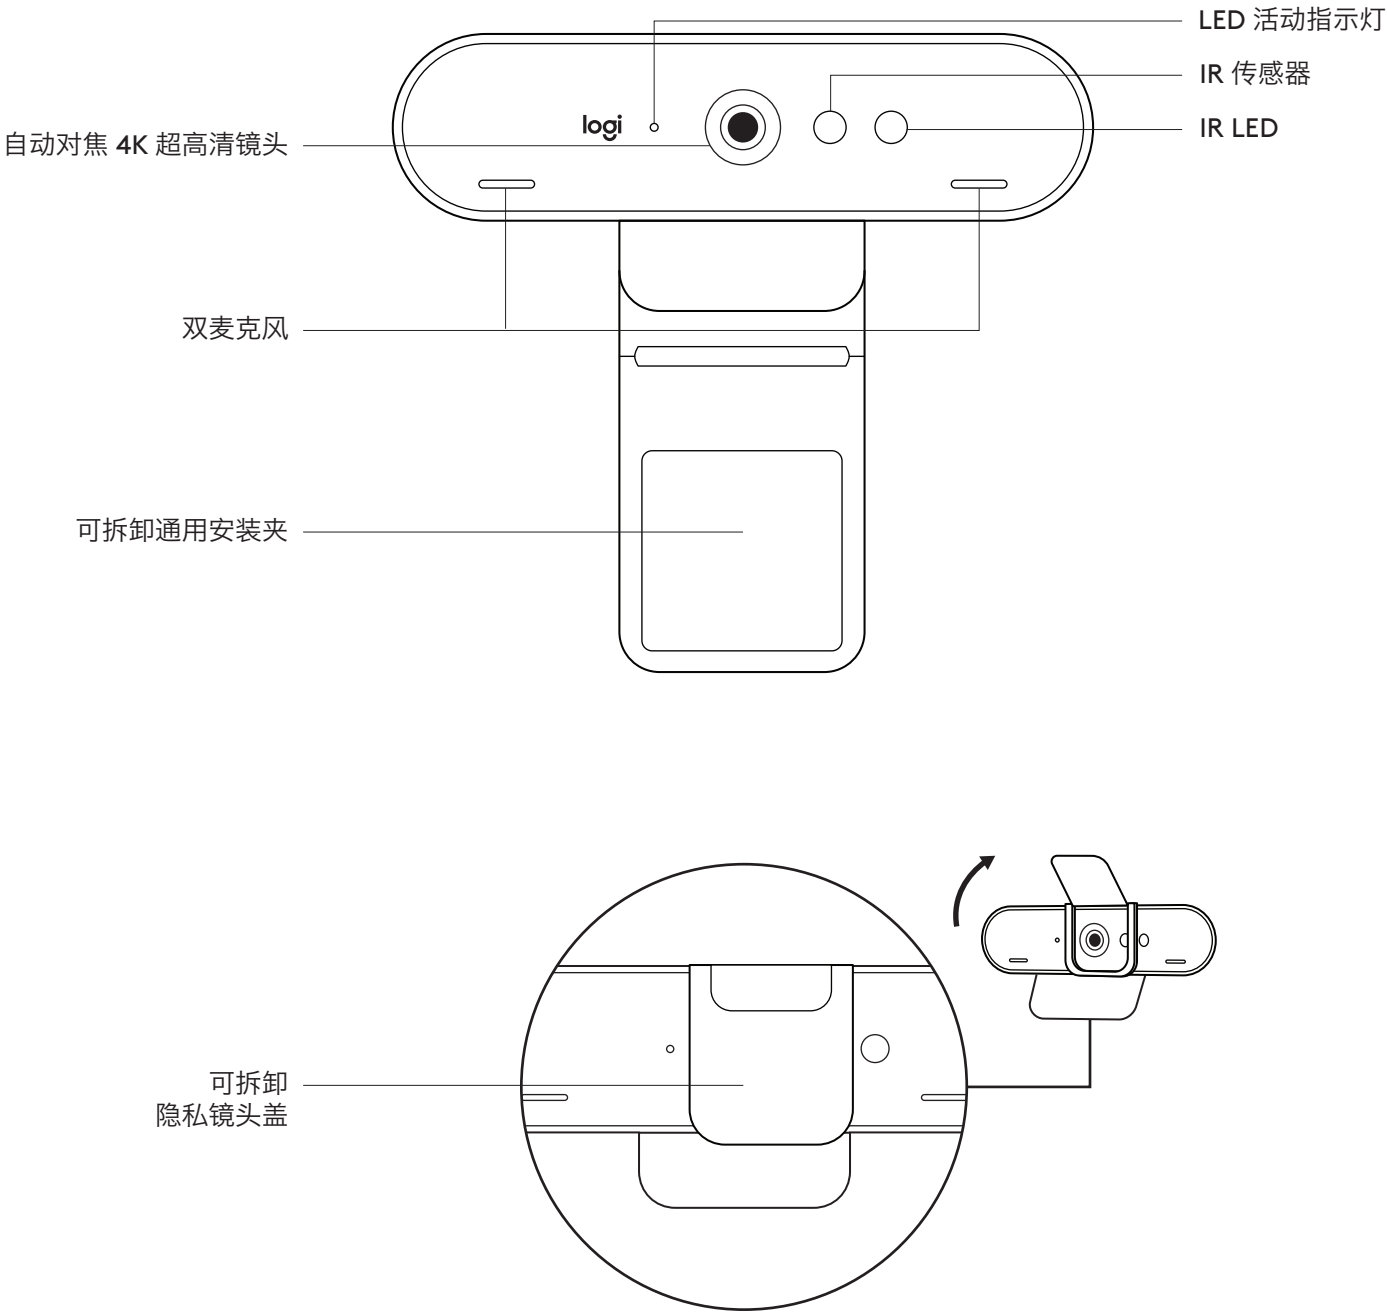


三脚架安装螺纹*

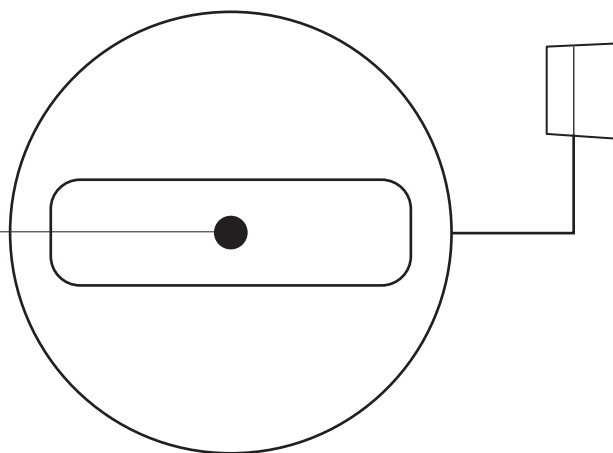 


*三脚架需另购

 可拆卸 USB-A 线缆
(USB 2.0 或 3.0) 兼容
Type C

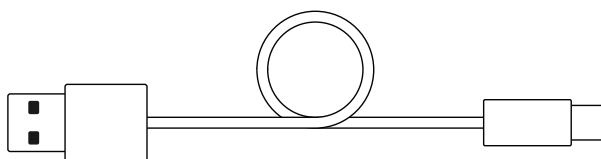

便携包

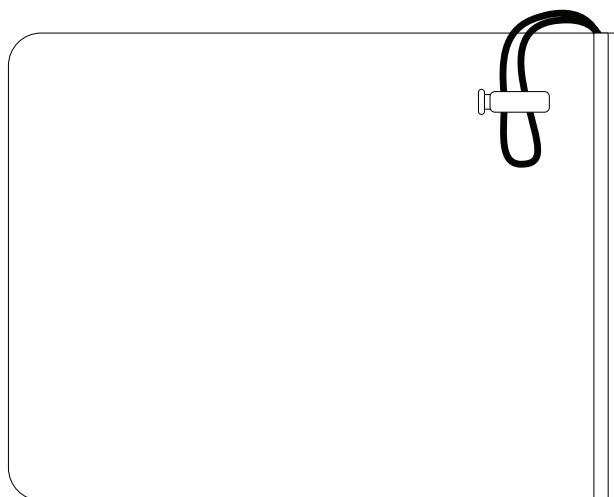 


包装内容

- 1 网络摄像头
- 2 外置隐私镜头盖
- 3 便携包
- 4 可拆卸通用安装夹（随附于网络摄像头上）
- 5 约 2.2 米 USB-A 至 USB-C 线缆（USB 2.0 或 3.0）
- 6 用户文档




安装隐私镜头盖

 
- 1 如下所示，将隐私镜头盖安装于网络摄像头镜头上。

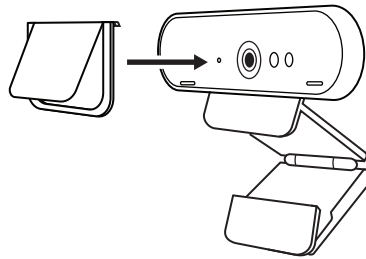

- 2 将其卡在网络摄像头的中央正上方。

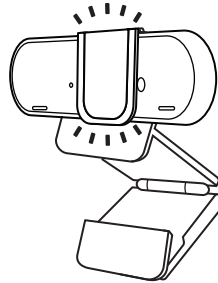 


- 3 手动调整隐私镜头盖，根据需要打开或关闭。

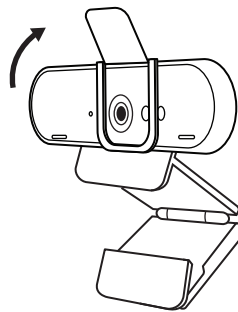 


设置网络摄像头

放置于显示器上

 
- 1 将网络摄像头以所需的位置或角度放置在电脑、笔记本电脑或显示器上。

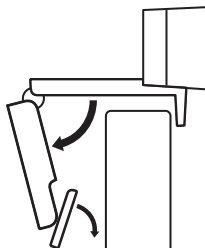

- 2 调节网络摄像头，确保通用安装夹支脚与显示器背面齐平。

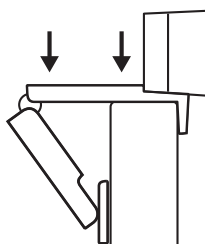 


- 3 手动将网络摄像头上/下调节至合适的构图位置。

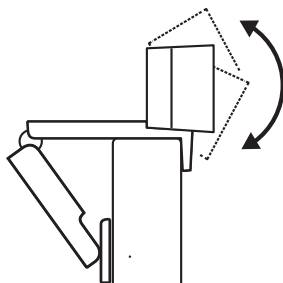 


放置于三脚架上*

 
1 从网络摄像头上卸下可拆卸的通用安装夹。

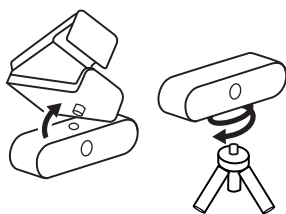


2 找到 网络摄像头底部的 1/4 英寸三脚架安装螺纹。

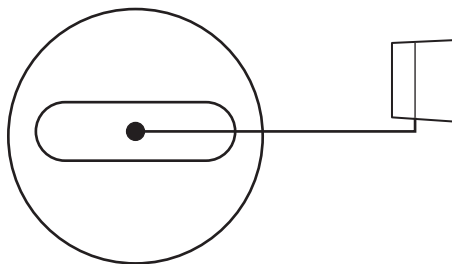 

3 将三脚架拧入 1/4 英寸安装螺纹，将网络摄像头固定于三脚架上。

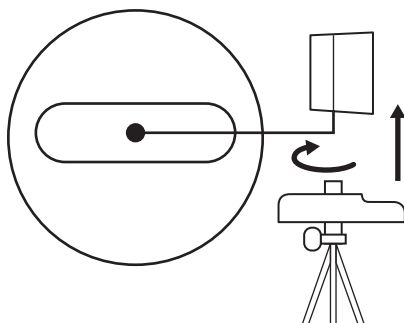 


4 将网络摄像头和三脚架放置于您想要的合适位置以构图。

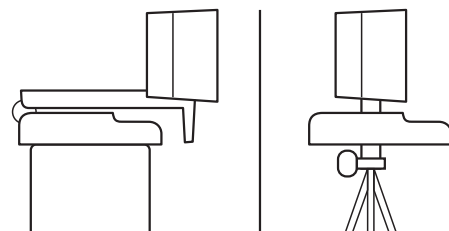 

*三脚架需另购


通过 USB-A 连接网络摄像头

 将 USB-C 端插入网络摄像头，并将 USB-A 接头插入电脑的 USB-A 端口。

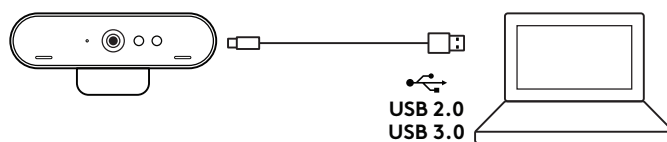

成功连接

 当应用程序使用网络摄像头时，LED 活动指示灯将点亮。

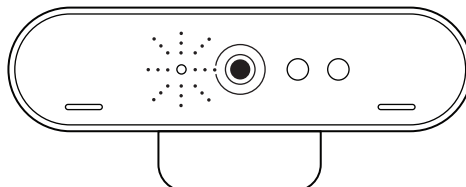

规格

网络摄像头：

高 x 宽 x 深：

约 27 毫米 x 约 102 毫米 x 约 27 毫米

线缆长度：约 2.2 米

重量：约 63 克

可拆卸通用安装夹：

高 x 宽 x 深：

约 19 毫米 x 约 36 毫米 x 约 63 毫米

重量：约 44 克

www.logitech.com/support/c1000s