 



G303 SHROUD EDITION

SETUP GUIDE | 设置指南

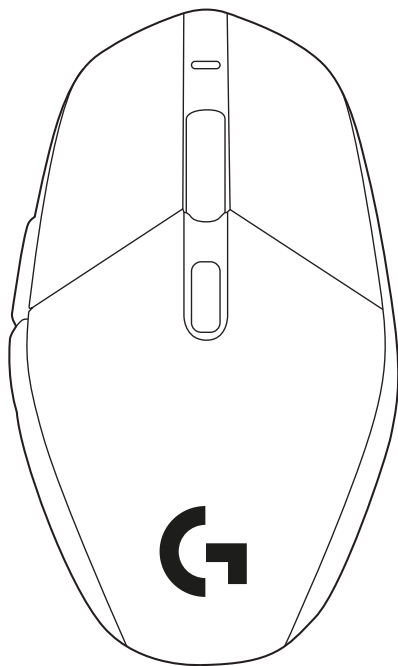





ENGLISH	3
简体中文	9
繁體中文	15
한국어	21

 



PACKAGE CONTENTS

  - 1 Mouse
- 2 Receiver (installed in extension adapter)
- 3 USB charging and data cable

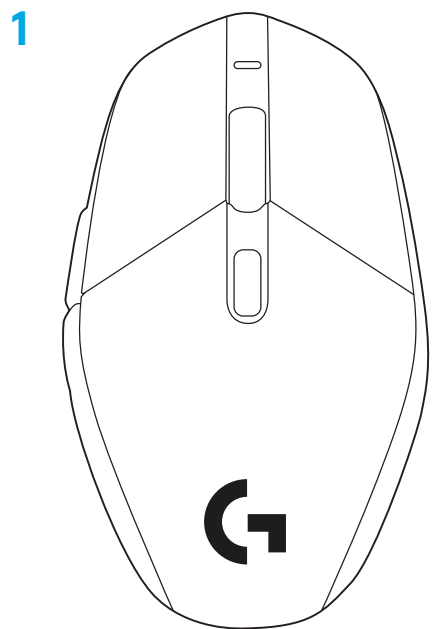


MOUSE FEATURES

  - 1 Power LED
- 2 Left Click
- 3 Right Click
- 4 Middle Click/Scroll
- 5 Browser Forward
- 6 Browser Back
- 7 DPI Cycle
- 8 USB charging/data port
- 9 Power on/off
- 10 Receiver Storage Door

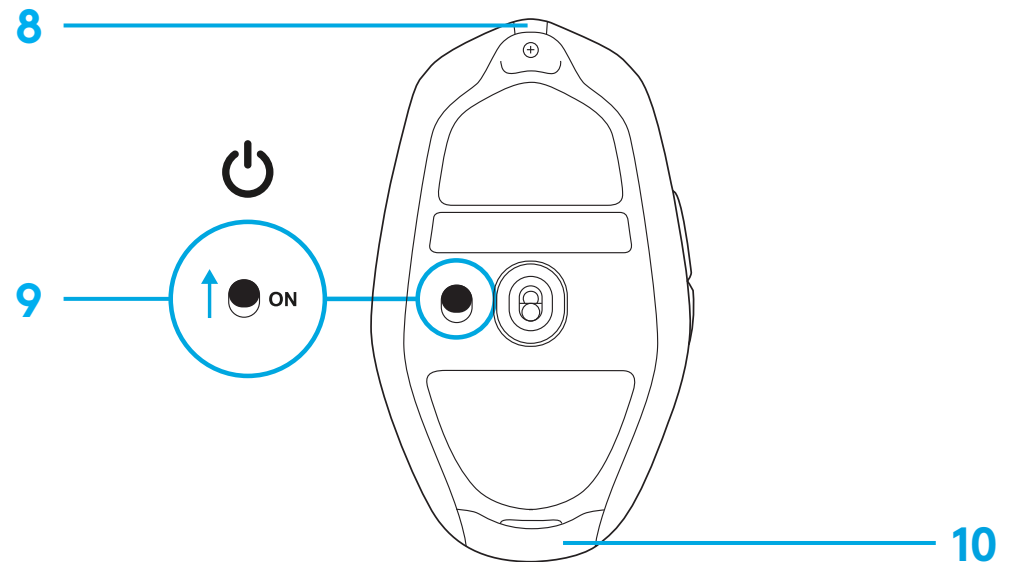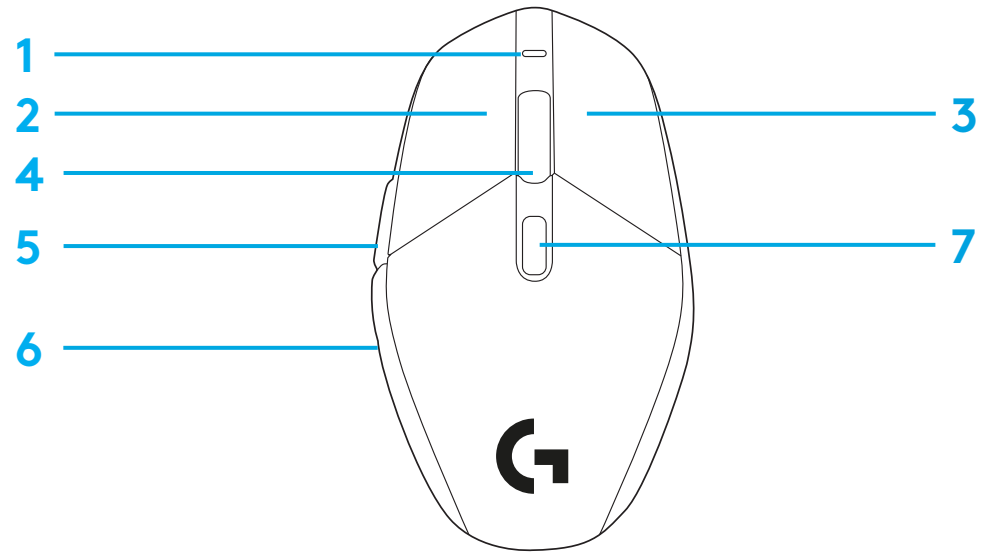


SETUP

 - 1 Plug charging/data cable into PC, then plug extension adapter and receiver into charging/data cable

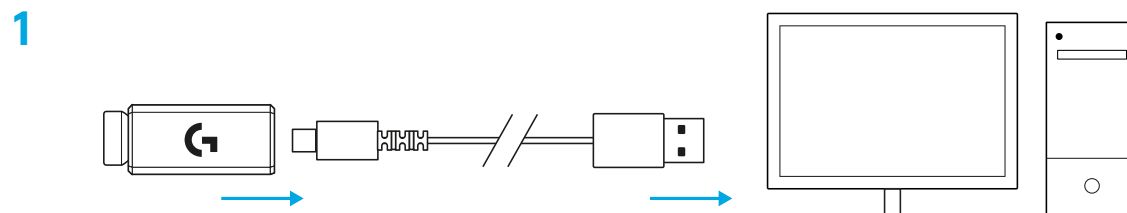


- 2 Turn on mouse

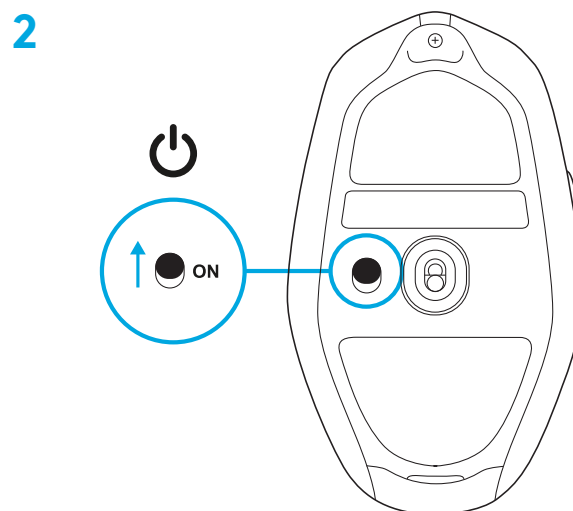 


3 To configure mouse settings like DPI, download G HUB software from logitechG.com/GHUB

 
3

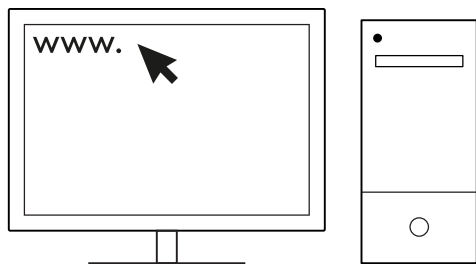


logitechG.com/ghub

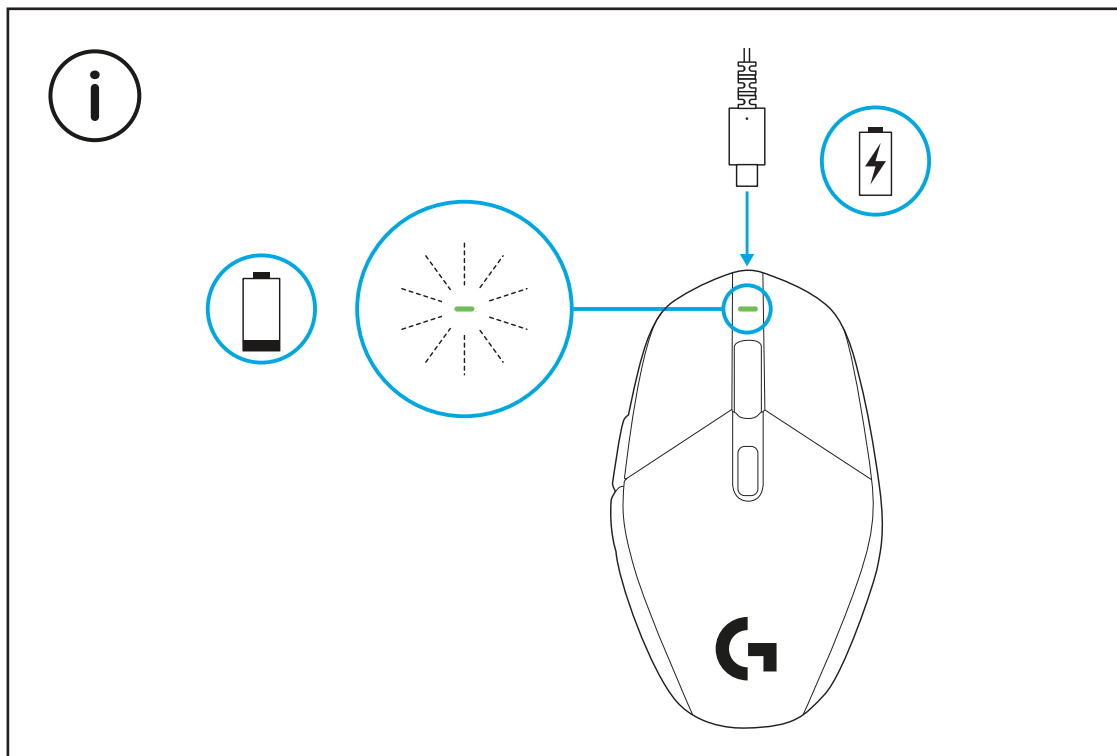 

 For optimal wireless performance, use mouse within 20cm of receiver and greater than 2m from sources of 2.4GHz interference (such as wifi routers).


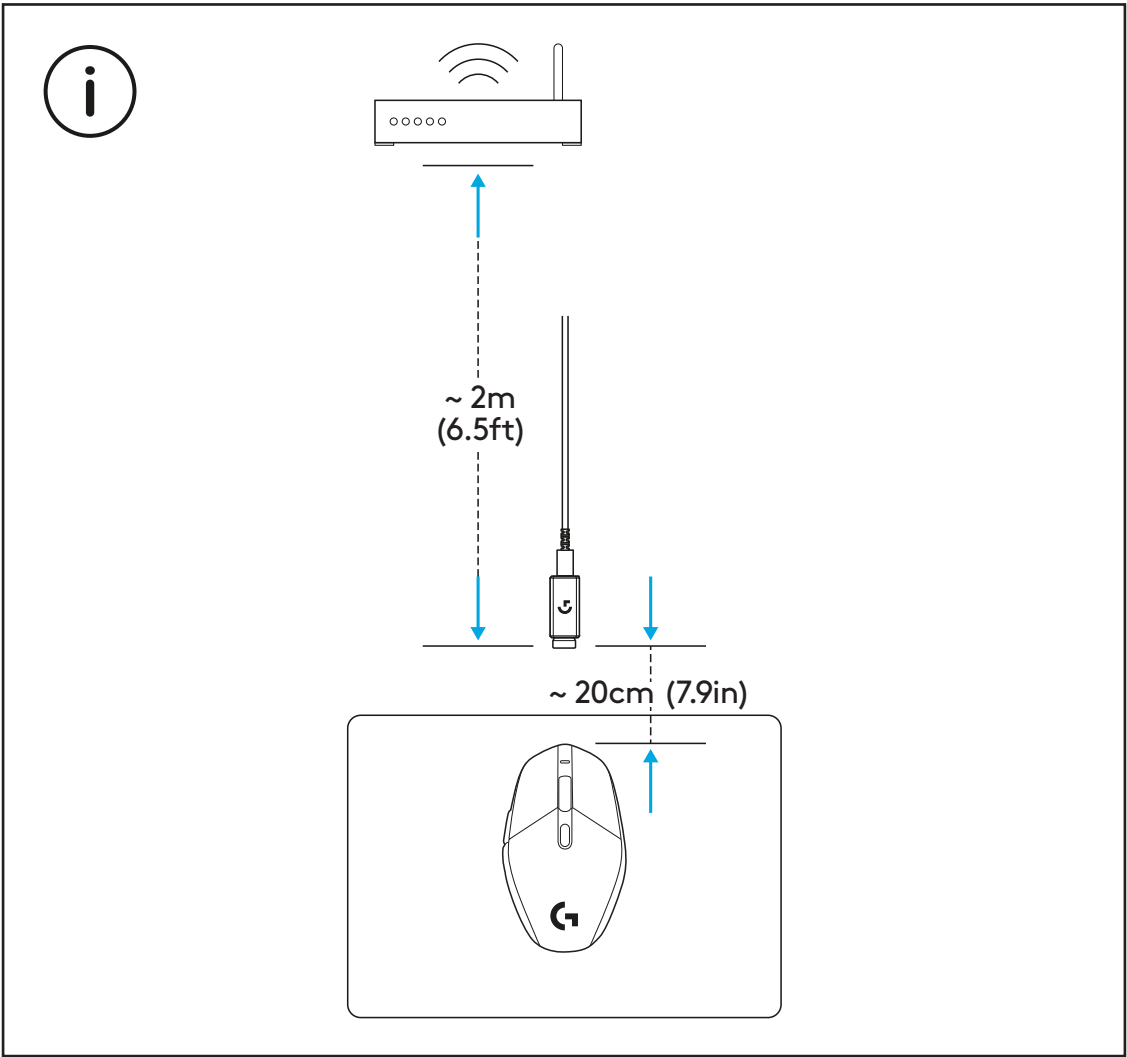


 The USB receiver can be stored inside the mouse by opening the storage door.
This can prevent the receiver from being lost.

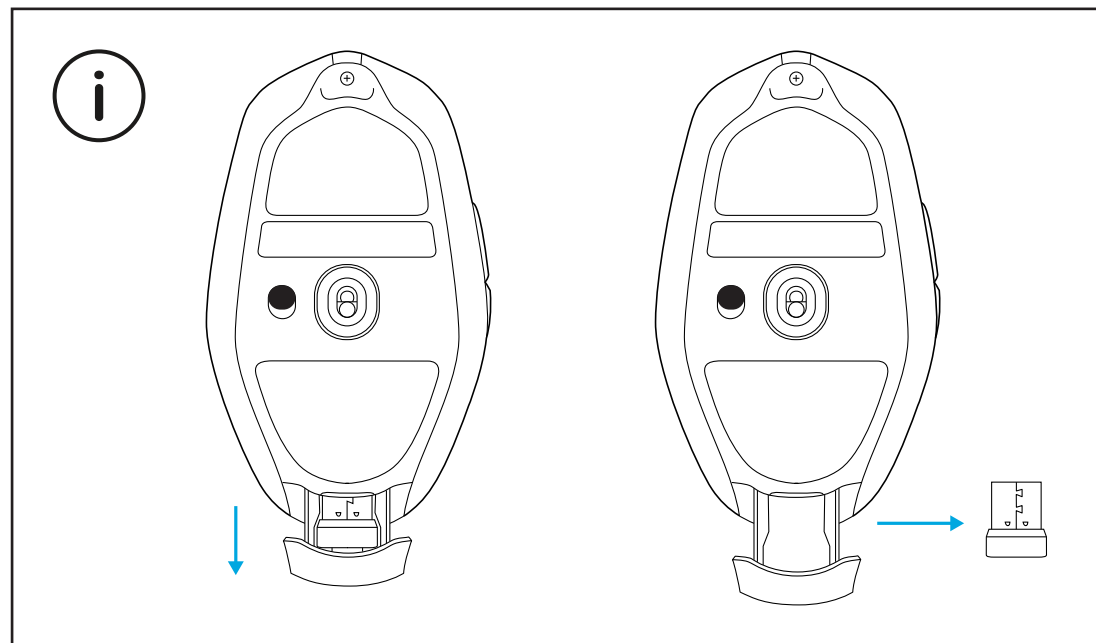



包装内容

  - 1 鼠标
- 2 接收器 (预装于扩展适配器中)
- 3 USB 充电/数据线

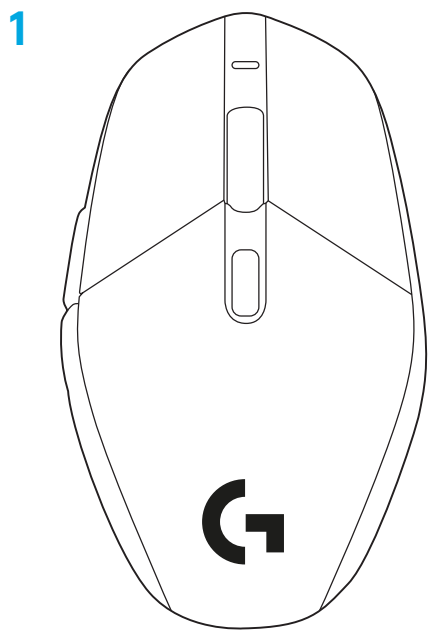

鼠标特性

  
- 1 LED 电量指示灯
- 2 左键单击
- 3 右键单击
- 4 中键单击/滚轮
- 5 浏览器前进
- 6 浏览器后退
- 7 DPI 循环
- 8 USB 充电/数据端口
- 9 电源开关
- 10 接收器收纳仓盖

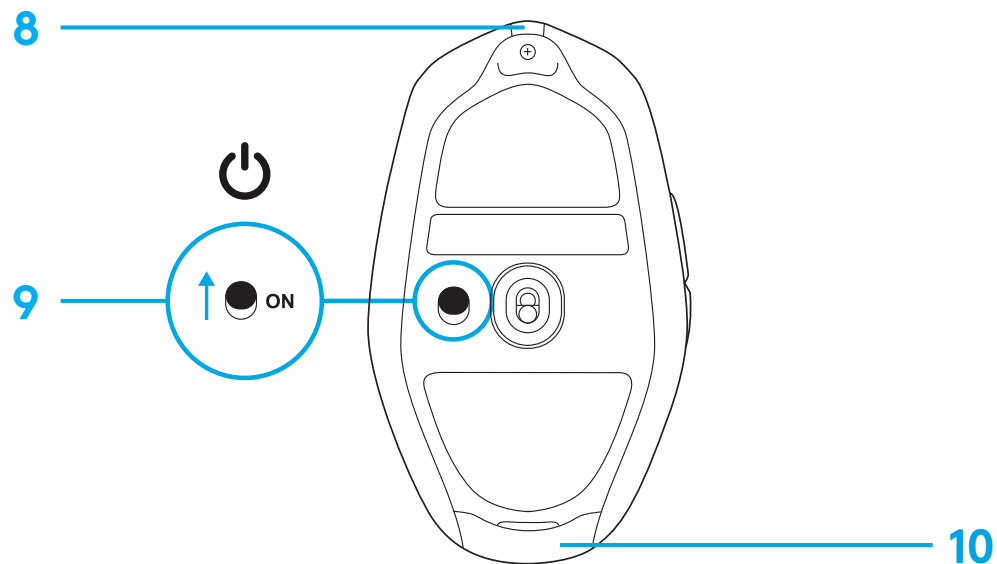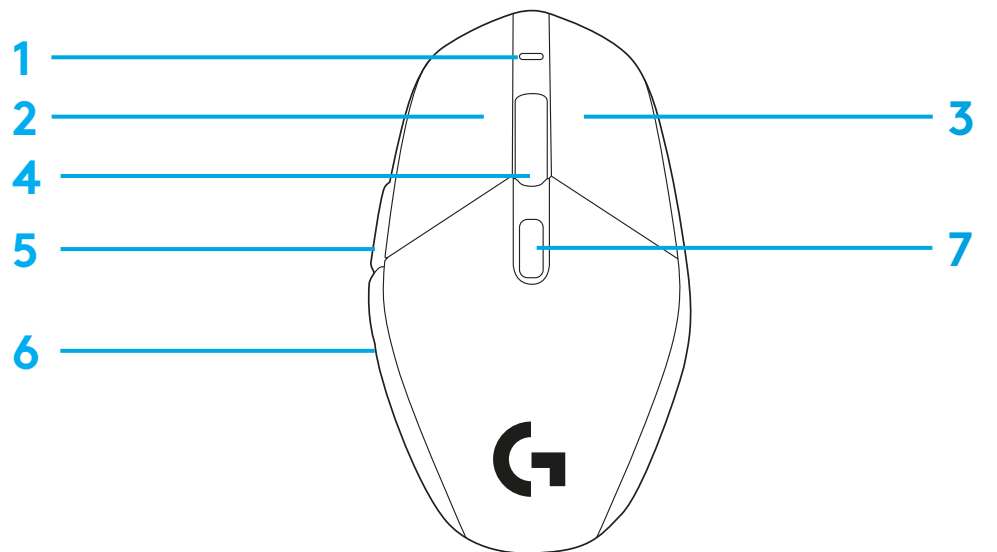

设置


- 1 将充电/数据线插入 PC, 然后将扩展适配器和接收器插入充电/数据线

 1

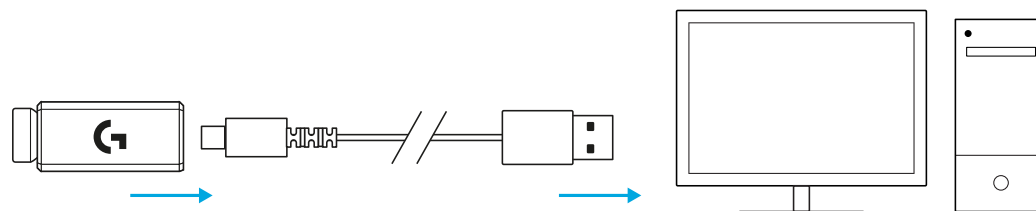


- 2 打开鼠标

 2

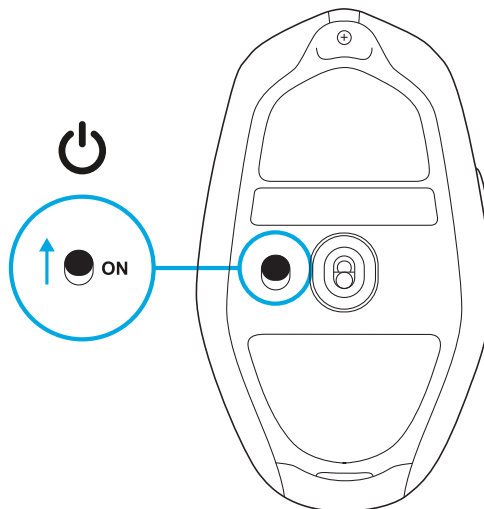


3 要配置 DPI 等鼠标设置, 请访问 logitechG.com/GHUB 下载 G HUB 软件

 
3

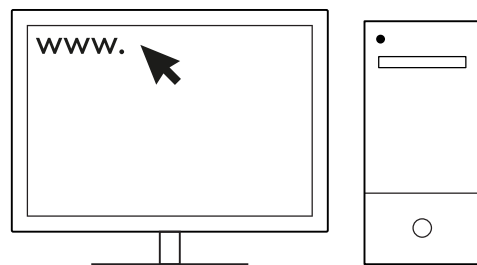


logitechG.com/ghub

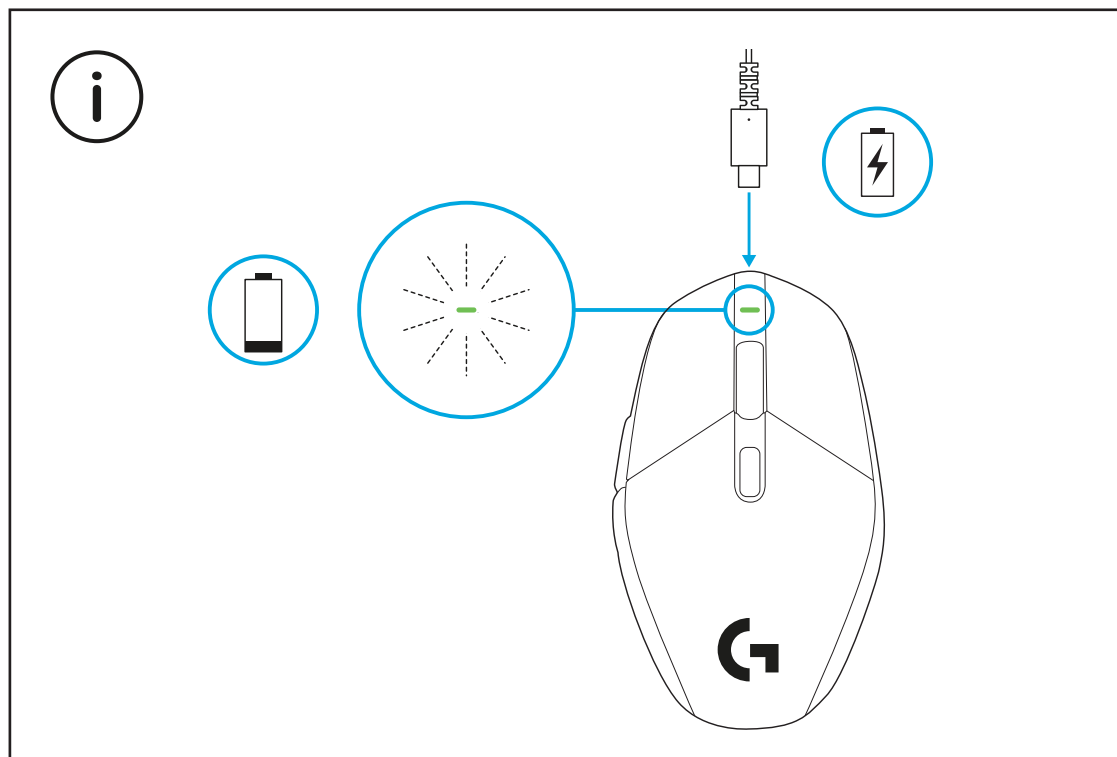 

 为获得更佳无线性能, 请在距接收器不超过 20 厘米处且距 2.4GHz 干扰源 (如 wifi 路由器) 超过 2 米的位置使用鼠标。

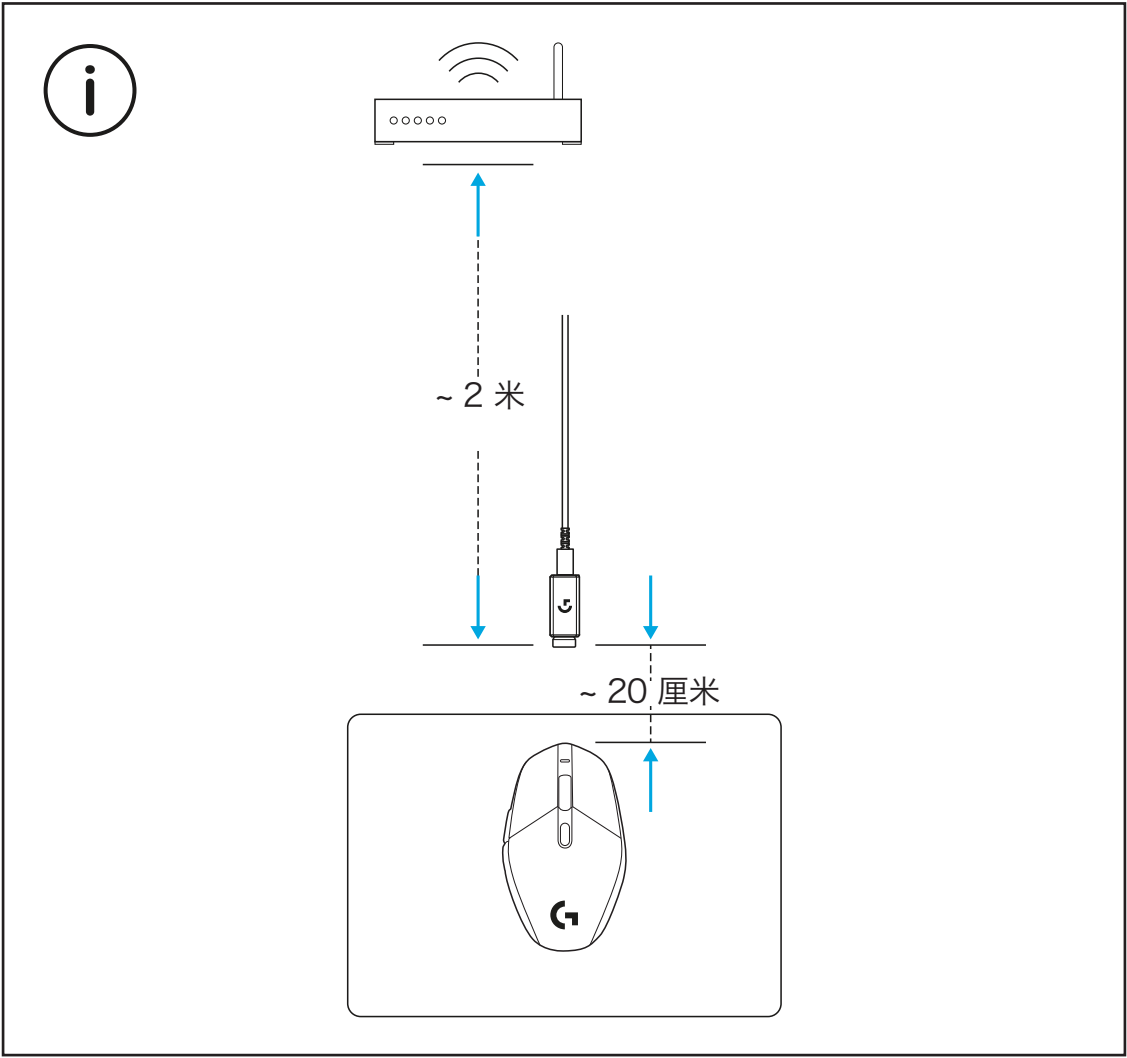


打开收纳仓盖即可将 USB 接收器收纳在鼠标内部。可避免遗失接收器。

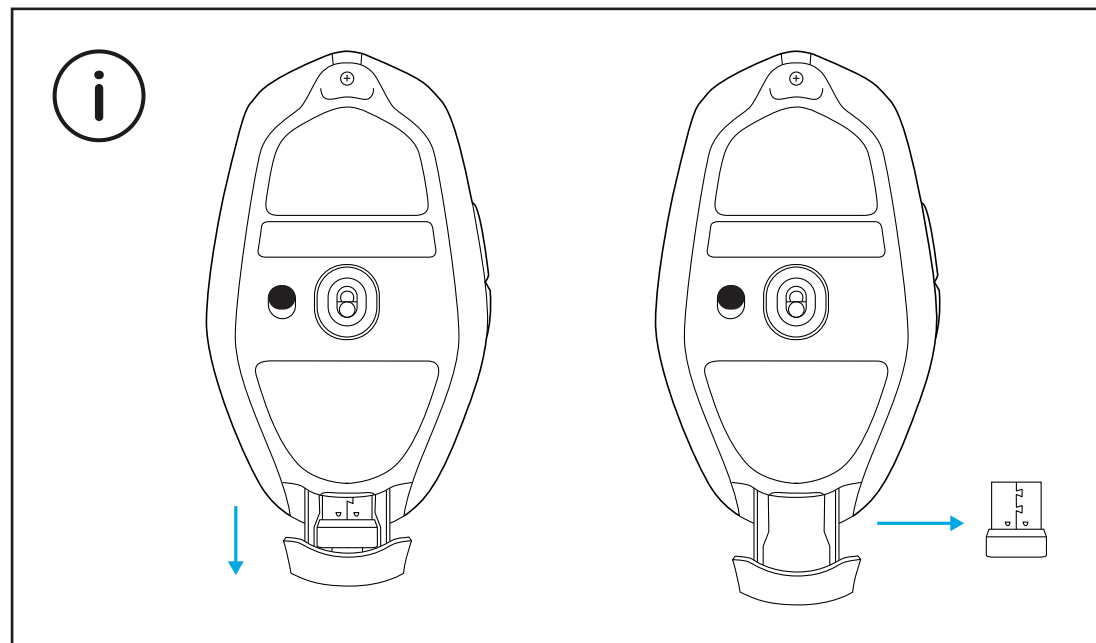 



包裝內容

 - 1 滑鼠
- 2 接收器 (已安裝在延長轉接器中)
- 3 USB 充電與資料連接線

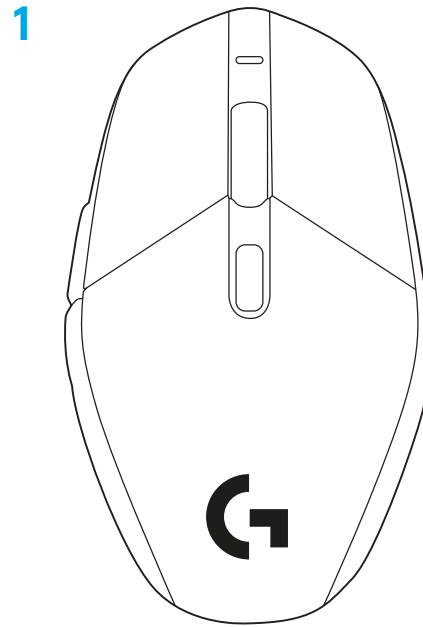

滑鼠功能

  
- 1 電源 LED 指示燈
- 2 按下左鍵
- 3 按下右鍵
- 4 按下中鍵 / 捲動
- 5 瀏覽器下一頁
- 6 瀏覽器前一頁
- 7 DPI 循環
- 8 USB 充電/資料連接埠
- 9 電源開啓/關閉
- 10 接收器收納槽外蓋

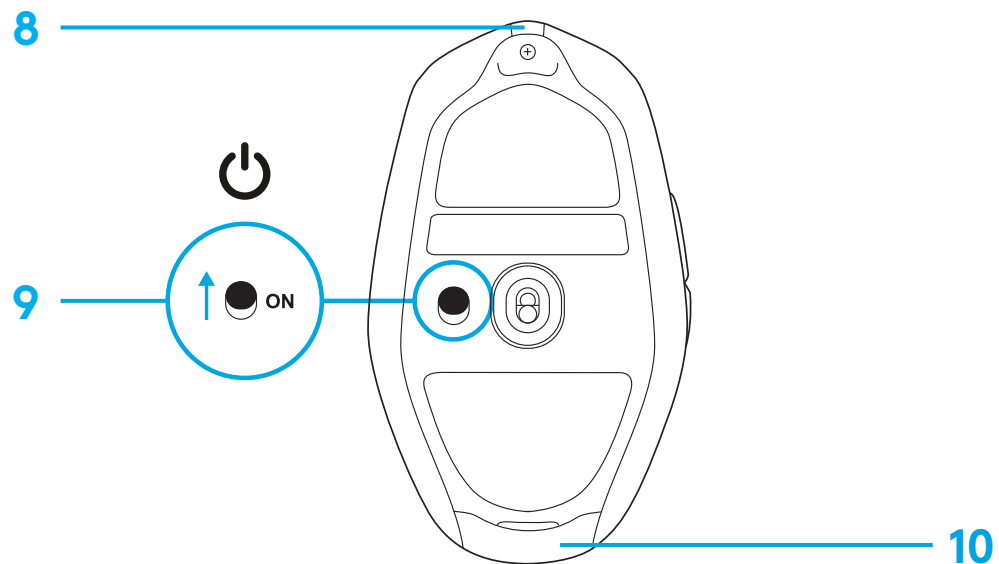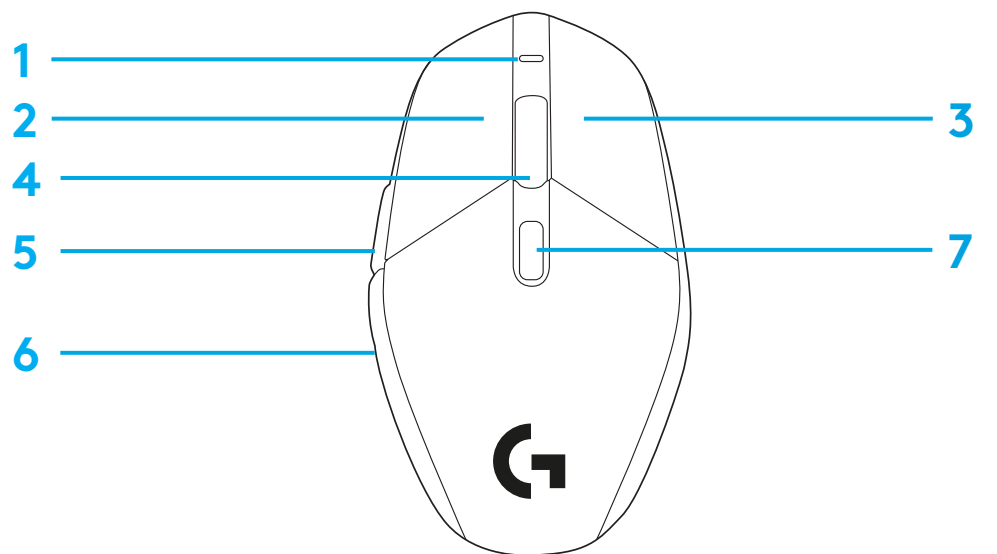

設定


- 1 將充電/資料連接線插入到 PC，然後將延長轉接器和接收器插入到充電/資料連接線

 1

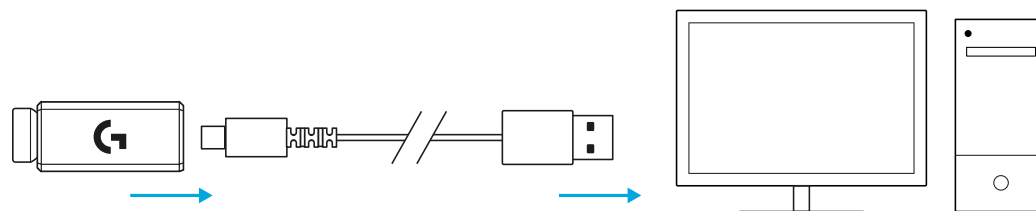


- 2 開啓滑鼠電源

 2

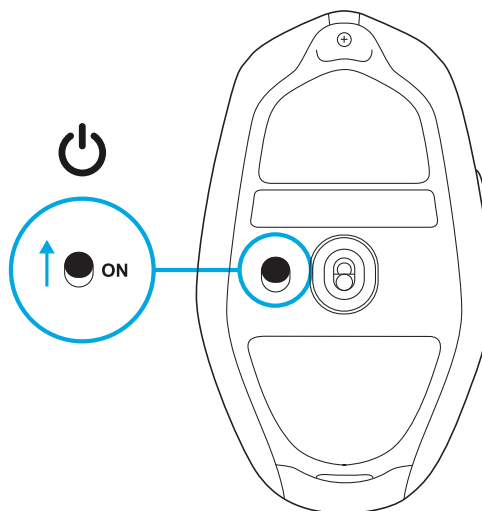


3 若要指定滑鼠的 DPI 等設定，請到 logitechG.com/GHUB 下載 G HUB 軟體

 
3

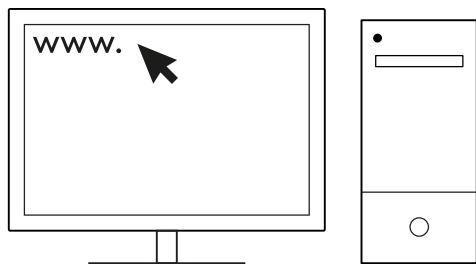


logitechG.com/ghub

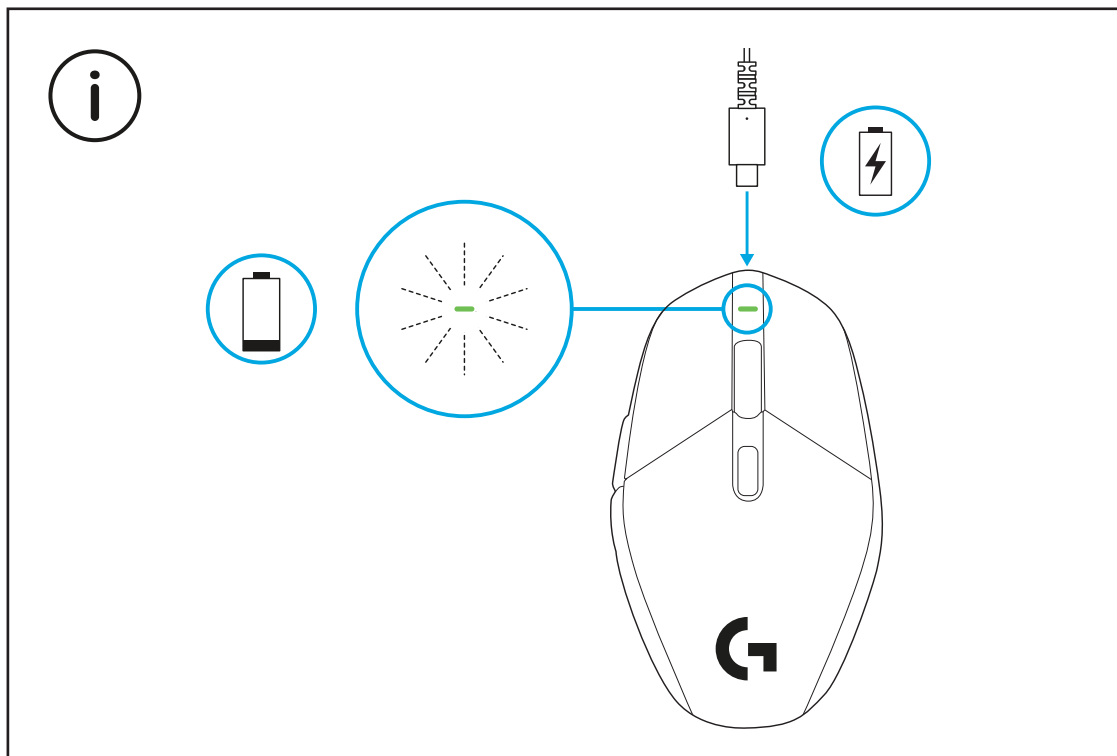 

 為獲得最佳無線效能，請在接收器 20 公分範圍內與距離 2.4GHz 干擾來源 (例如 wifi 路由器) 2 公尺以上的地方使用滑鼠。

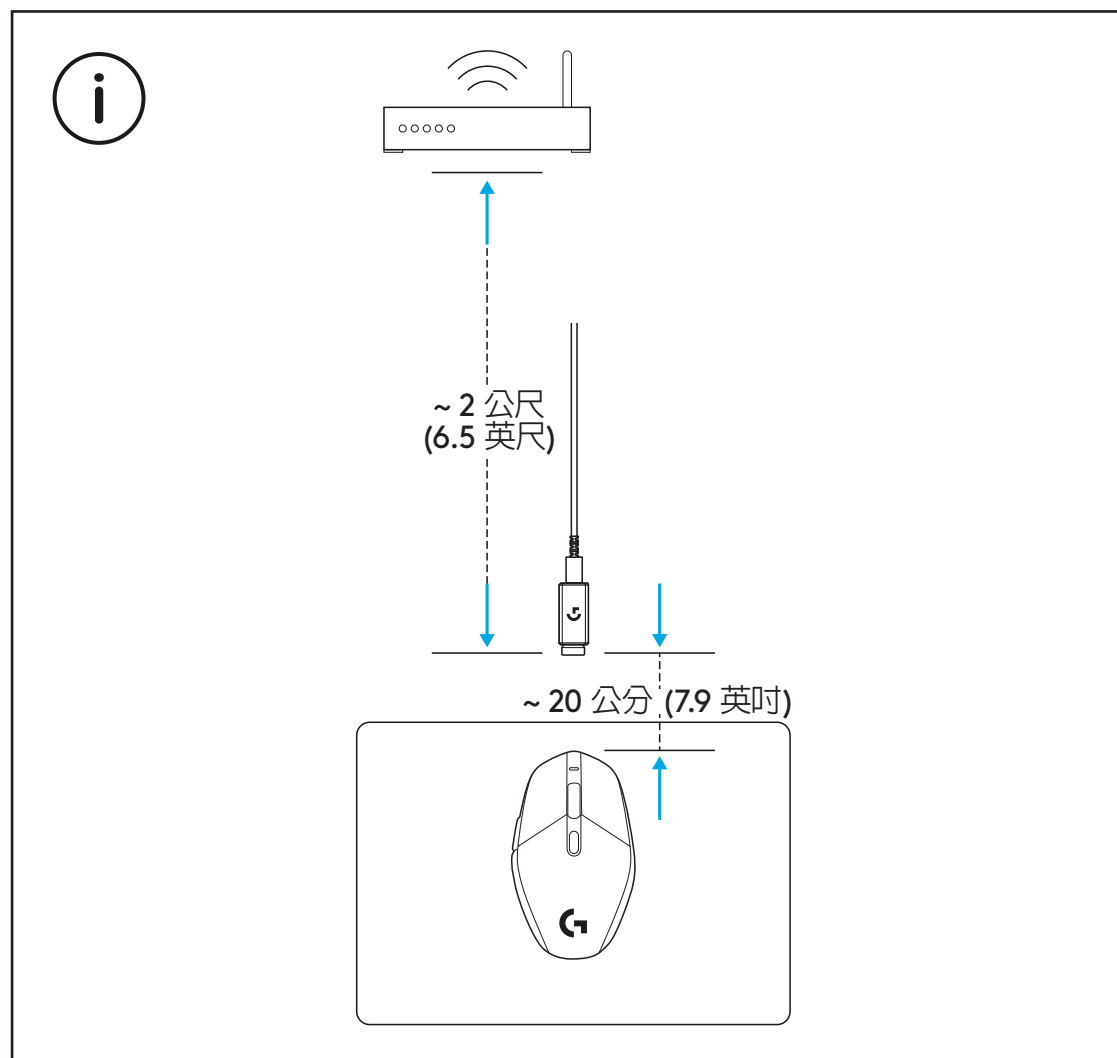

可以開啓收納槽外蓋來將 USB 接收器存放在滑鼠內部。這可防止接收器遺失。


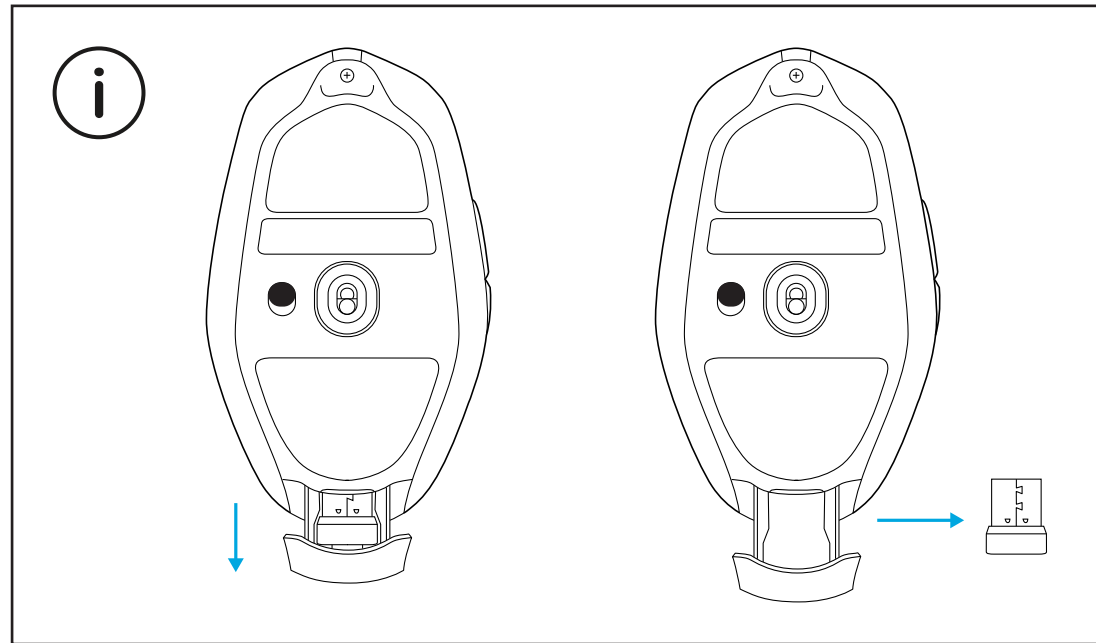 


패키지 내용물

1 마우스



2 수신기(확장 어댑터에 설치됨)

  3 USB 충전 및 데이터 케이블

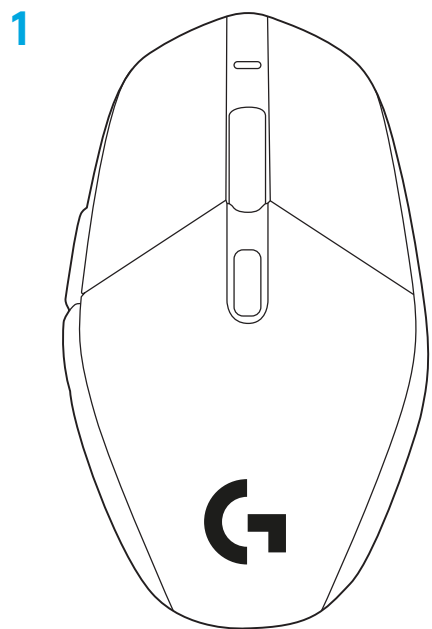

마우스 특징

  
- 1 전원 LED
- 2 왼쪽 클릭
- 3 오른쪽 클릭
- 4 가운데 클릭/스크롤
- 5 앞으로 브라우즈
- 6 뒤로 브라우즈
- 7 DPI 사이클
- 8 USB 충전/데이터 케이블
- 9 전원 켜기/끄기
- 10 수신기 보관함 덮개

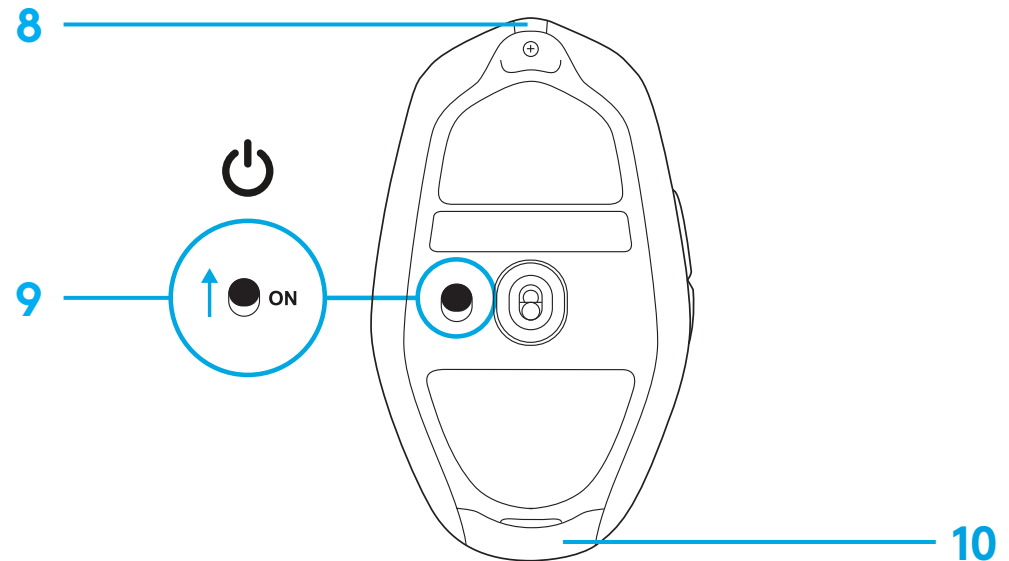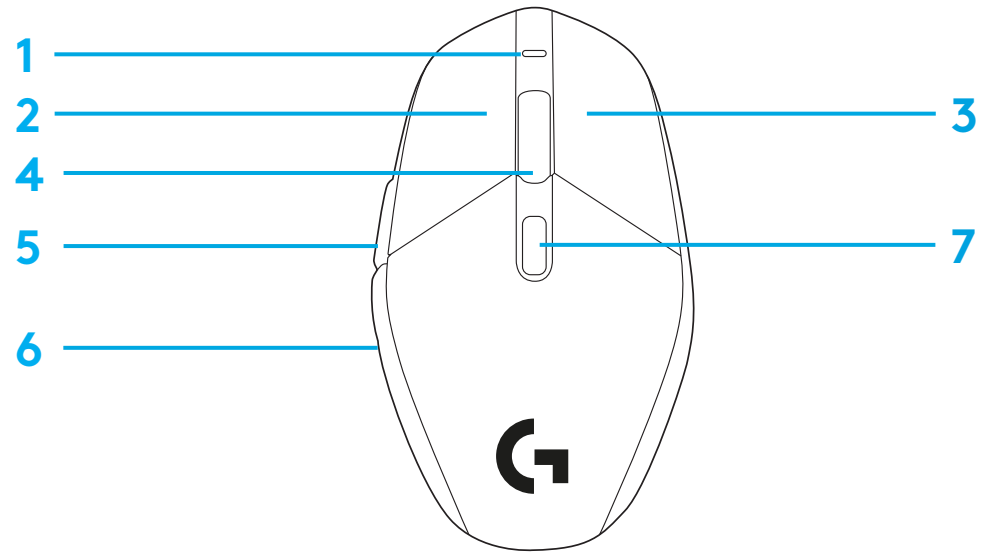

설치


- 1 충전/데이터 케이블을 PC에 연결한 다음,
확장 어댑터 및 수신기를 충전/데이터 케이블에
연결합니다.

 1

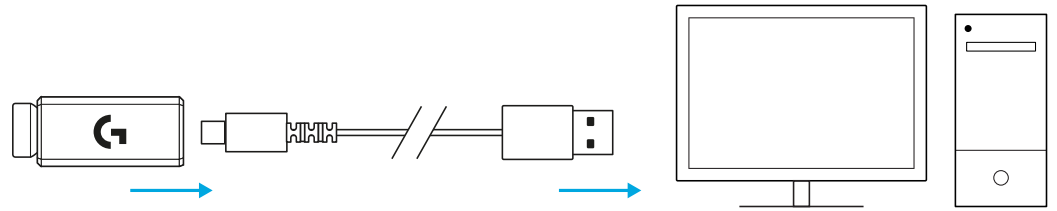



- 2 마우스를 켭니다.

 2

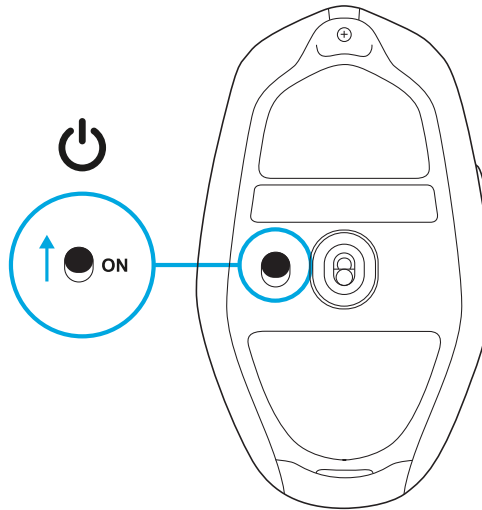


3 DPI 등 마우스 설정을 구성하려면 logitechG.com/GHUB에서 G HUB 소프트웨어를 다운로드합니다.

  
3

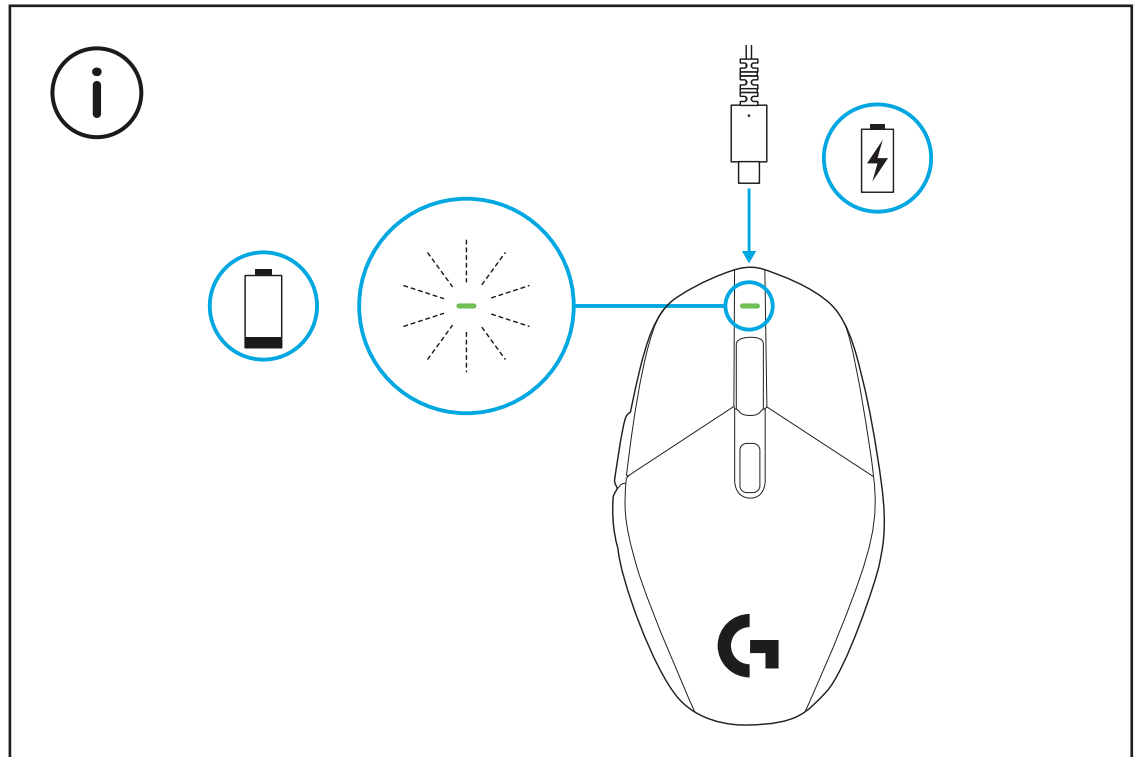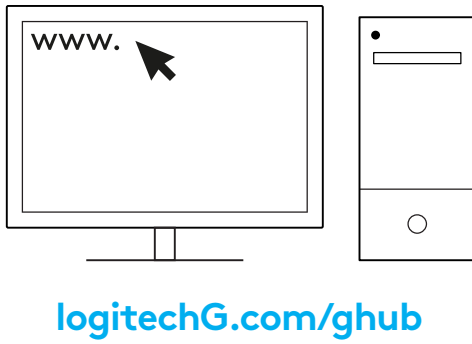

 최적의 무선 성능을 원한다면, 수신기로부터 20cm 이내 거리 및 2.4GHz 간섭(라우터 등)으로부터 2m 이상의 거리에서 마우스를 사용하십시오.

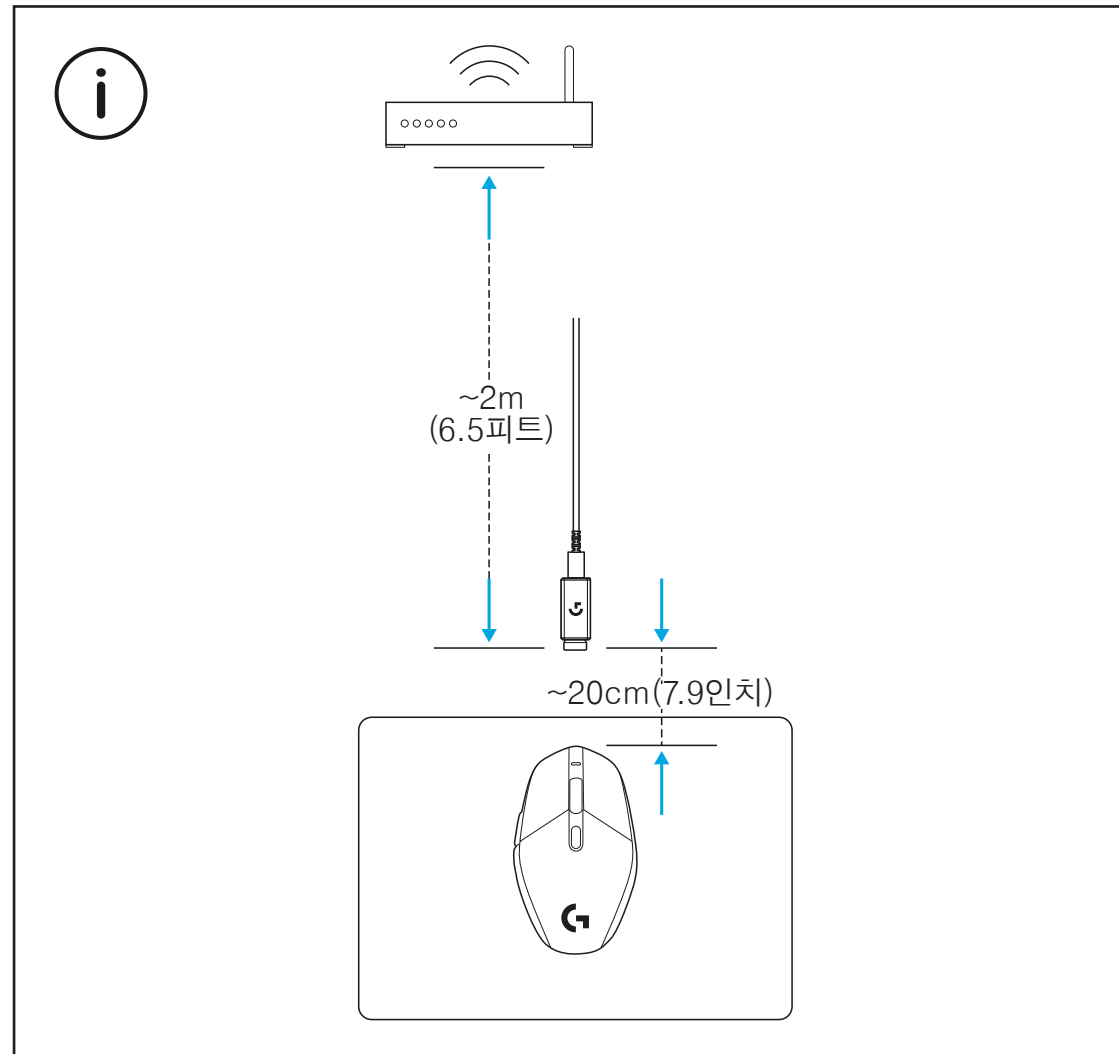

 보관함 덮개를 열면 USB 수신기를 마우스 내부에 보관할 수 있습니다. 수신기를 잃어버리지 않게 막아줍니다.

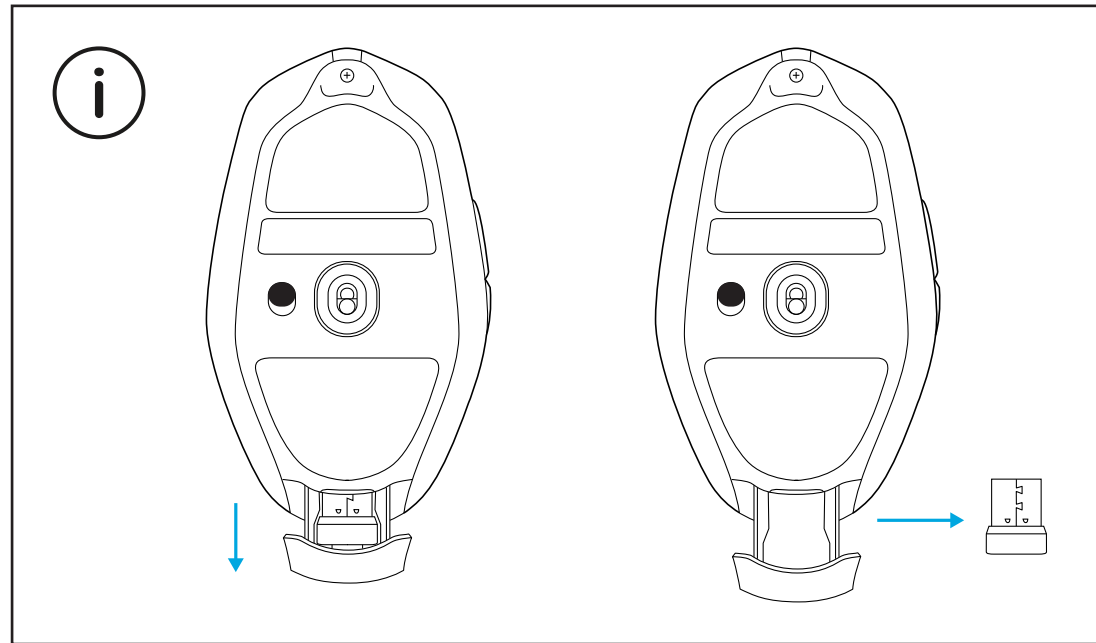



©2021 Logitech. Logitech, Logitech G, Logi, 罗技, 罗技G and their respective logos are trademarks or registered trademarks of Logitech Europe S.A. and/or its affiliates in the U.S. and other countries. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

版权所有 © 2021 罗技。罗技、罗技 G、Logi、Logitech、Logitech G 及其各自标志为 罗技欧洲公司 和/或其在美国及其他国家/地区附属公司的商标, 并或已注册。所有其它商标均是其各自所有者的财产。罗技对于本手册中可能出现的任何错误不承担任何责任。本手册中包含的信息如有更改, 恕不事先通知。

WEB-621-001856 002