

G304 SE

 
LIGHTSPEED Wireless Gaming Mouse

LIGHTSPEED 无线游戏鼠标

SETUP GUIDE | 设置指南



logitech 




ENGLISH	3
简体中文	6
繁體中文	9
한국어	12

logitech 

Important Safety, Compliance and
Warranty Information
重要安全性、合规性和质保信息


SETUP INSTRUCTIONS

- 1 Remove the battery cover by pressing the top of the cover and pulling it downwards
- 2 Remove the receiver
- 3 Insert the battery
- 4 Close the battery cover
- 5 Make sure the mouse is turned on via the switch on the bottom of the mouse
- 6 Download the G HUB software

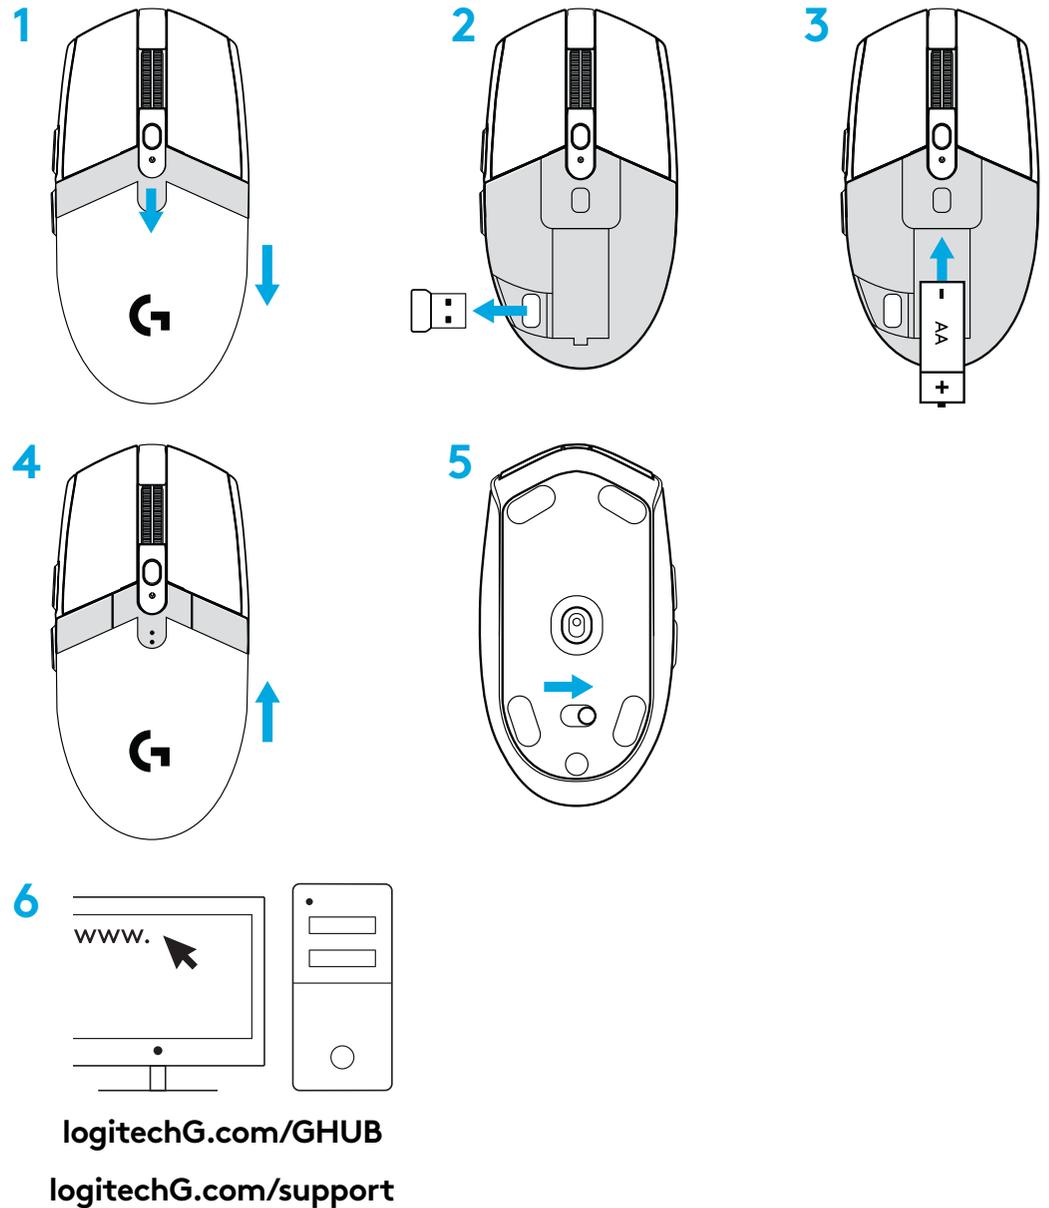

6 FULLY PROGRAMMABLE BUTTONS

- 1 Left (Button 1)
- 2 Right (Button 2)
- 3 Wheel click (Button 3)
- 4 Forward (Button 4)
- 5 Back (Button 5)
- 6 DPI cycle (Button 6)
- 7 On/Off switch (bottom of mouse, not programmable)

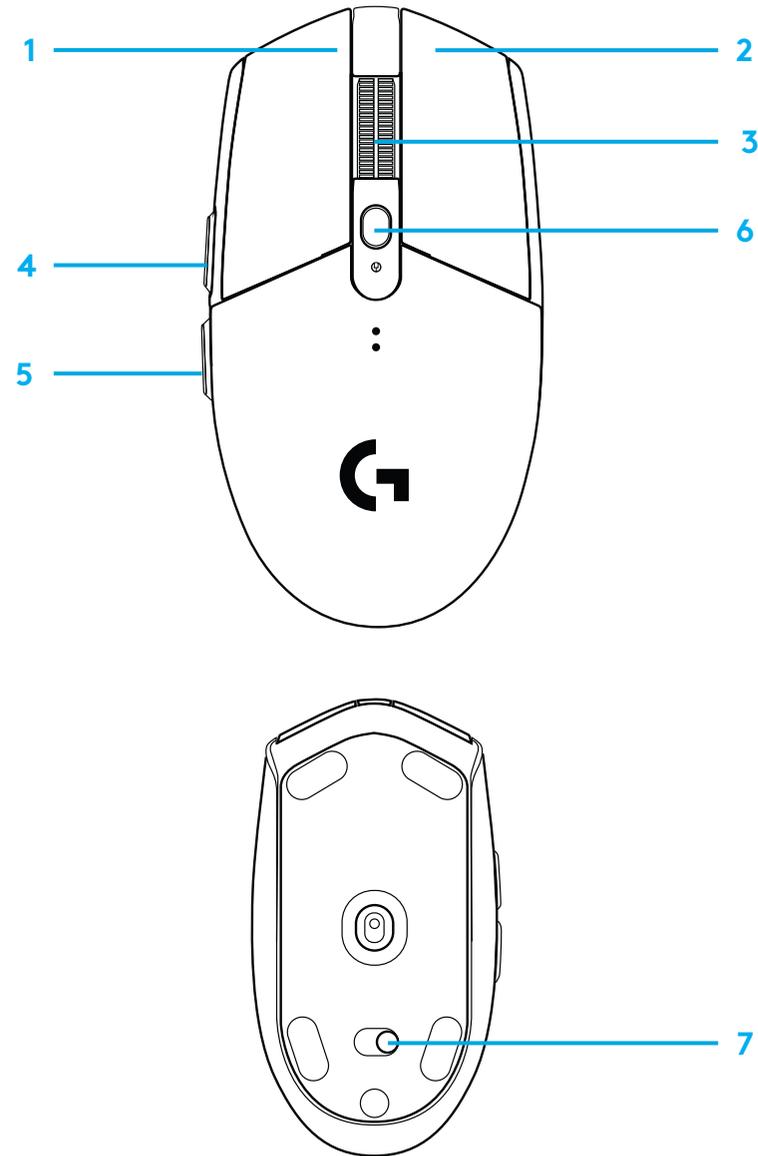

LED INDICATOR

Battery life

Flashing red: battery <15%

DPI

Yellow: step 1 - 400 DPI

White: step 2 - 800 DPI (default)

Orange: step 3 - 1600 DPI

Magenta: step 4 - 3200 DPI

Blue: step 5 - 6400 DPI (Step 5 can be activated via software only)

Mode

Cyan: performance mode (default)

Green: endurance mode (can be activated via software only).

Tips:


- Activating endurance mode will degrade tracking performance but improve battery life.

G HUB SOFTWARE

You can customize the onboard profile settings using the G HUB. These settings include button programming, report rate, performance/endurance modes and tracking behavior. G304 SE / G305 SE allows up to 5 DPI settings.







By default, G304 SE / G305 SE has the following settings:

- DPI: 400/800/1600/3200
- Report rate: 1ms
- Performance mode

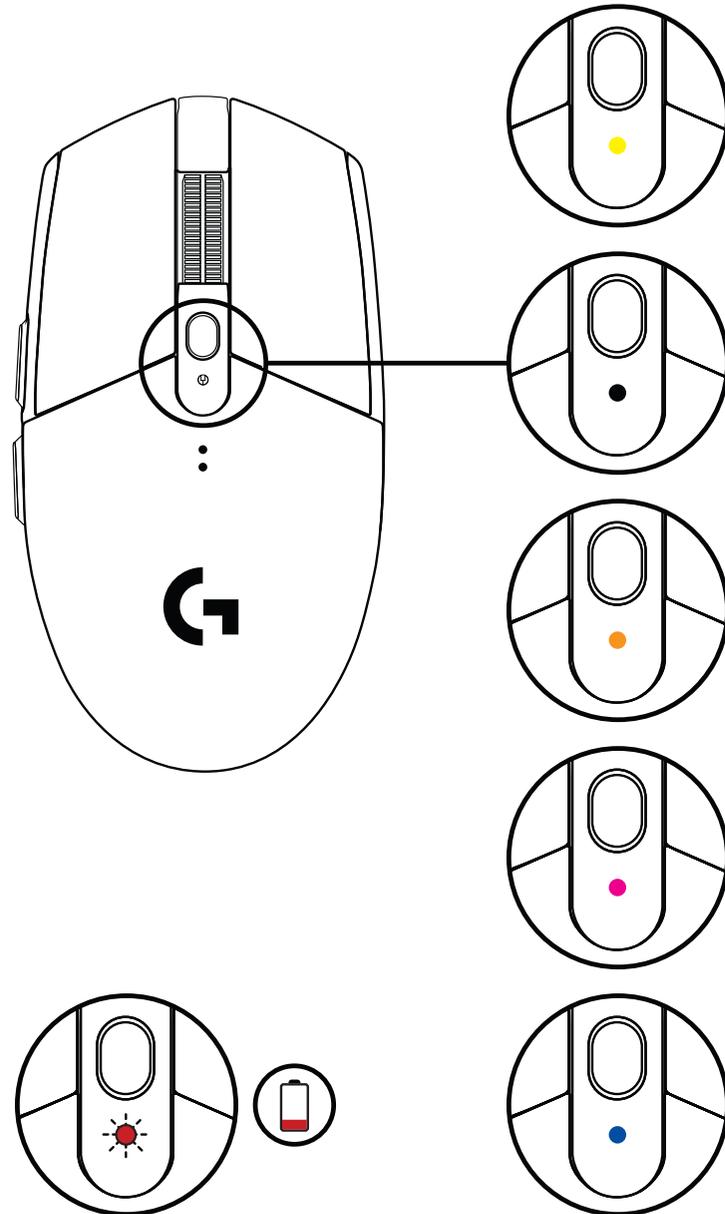

设置说明


- 1 轻按顶盖并向下拉动, 取下电池盖
- 2 取出接收器
- 3 安装电池
- 4 关闭电池盖
- 5 使用鼠标底部开关开启鼠标电源
- 6 下载 G HUB 软件

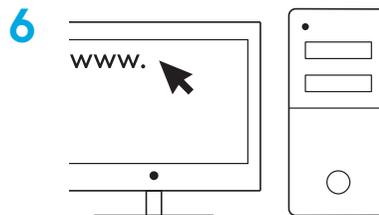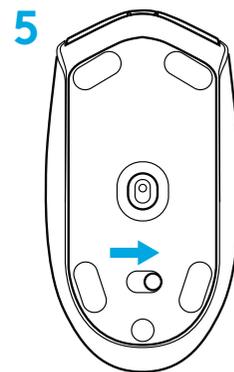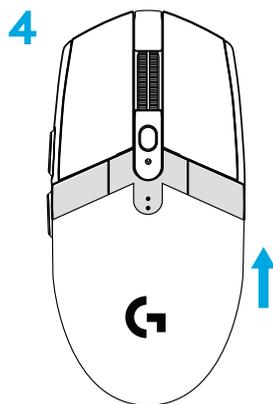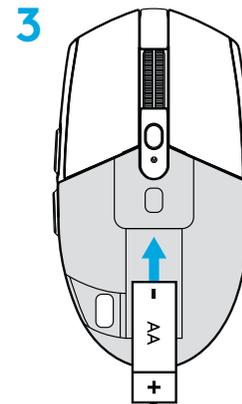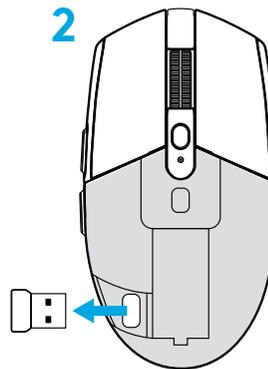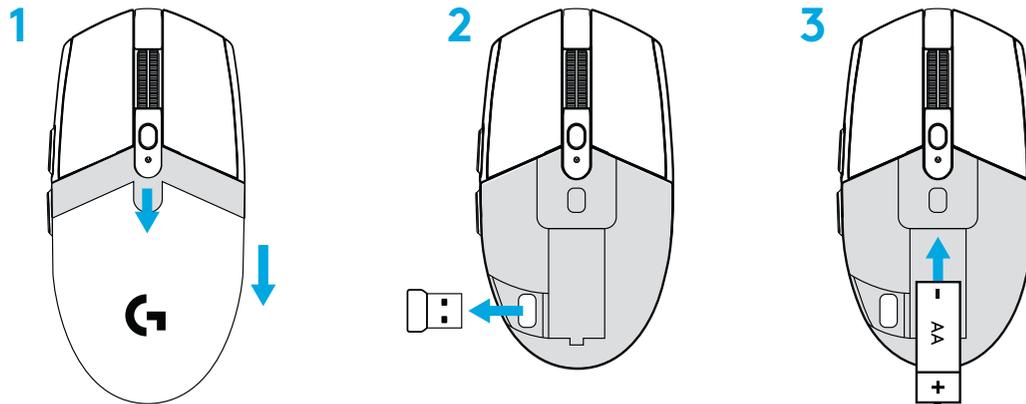

logitechG.com/GHUB
logitechG.com/support

6 个完全可编程按钮

- 1 左键 (按钮 1)
- 2 右键 (按钮 2)
- 3 滚轮点击 (按钮 3)
- 4 前进 (按钮 4)
- 5 后退 (按钮 5)
- 6 DPI 循环 (按钮 6)
- 7 开启/关闭开关 (位于鼠标底部, 不可编程)

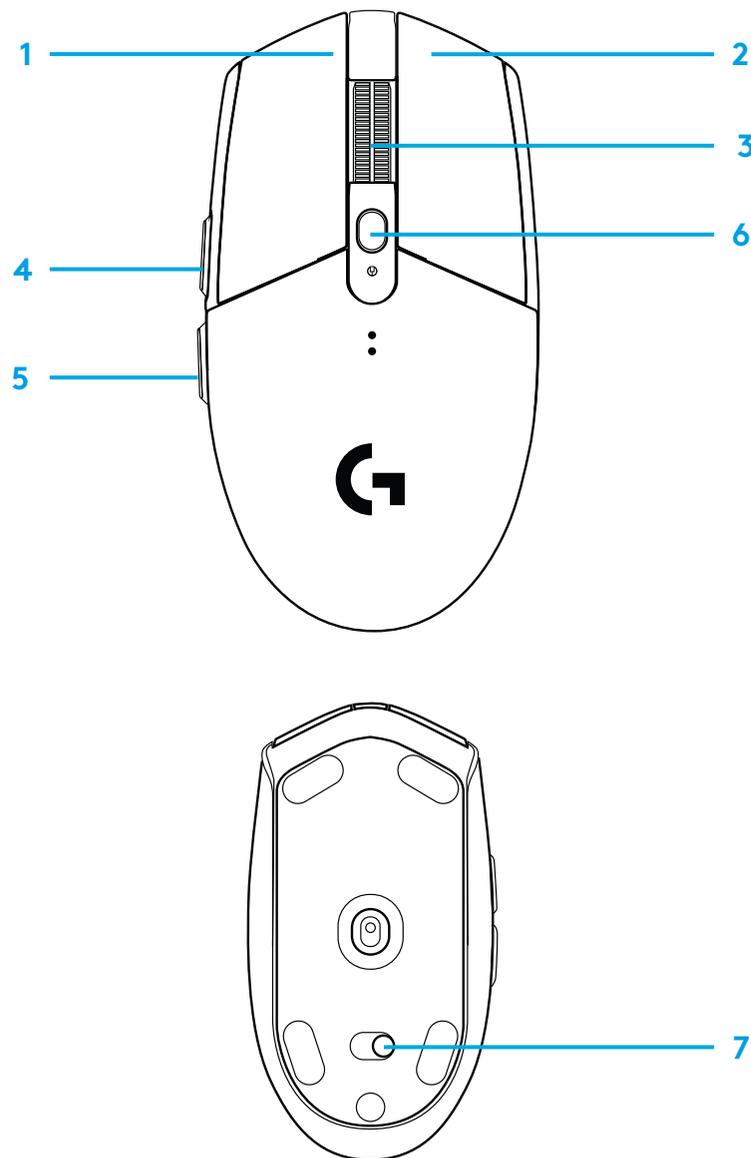

LED 指示灯

电池使用时间

闪烁红色: 电量 < 15%

DPI

黄色: 1 级 - 400 DPI

白色: 2 级 - 800 DPI (默认)

橙色: 3 级 - 1600 DPI

品红色: 4 级 - 3200 DPI

蓝色: 5 级 - 6400 DPI (5 级只能通过软件激活)

模式

青色: 性能模式 (默认)

绿色: 耐久模式 (只能通过软件激活)。

提示:


- 激活耐久模式会降低跟踪性能, 但可延长电池使用时长。

G HUB 软件

可以使用 G HUB 自定义板载配置文件。设置包括按钮编程、报告速率、性能/耐久模式和跟踪表现。G304 SE/G305 SE 可以设置多达 5 个 DPI 设置。


默认情况下, G304 SE/G305 SE 的设置为:

- DPI: 400/800/1600/3200
- 报告速率: 约 1 毫秒
- 性能模式

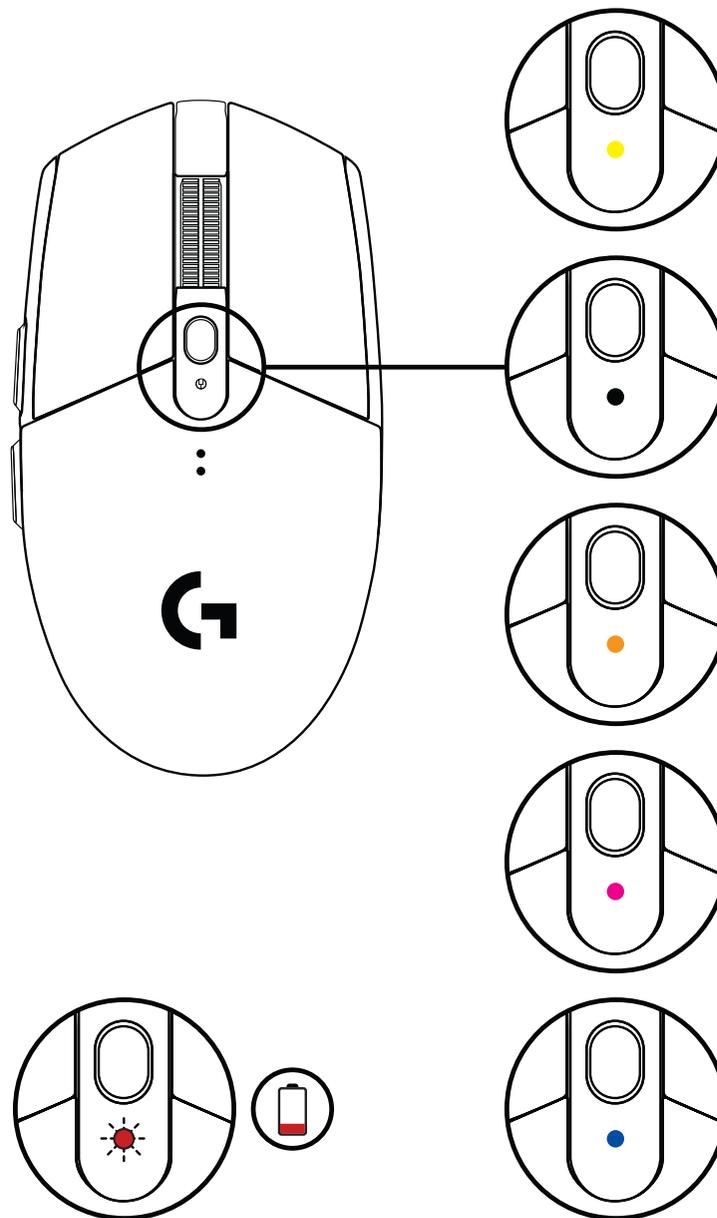


設定說明

- 1 壓按電池室外蓋並向外拉，將其取下
- 2 取下接收器
- 3 插入電池
- 4 蓋上電池室外蓋。
- 5 透過滑鼠底部的電源開關，確認開啓滑鼠電源
- 6 下載 G HUB 軟體

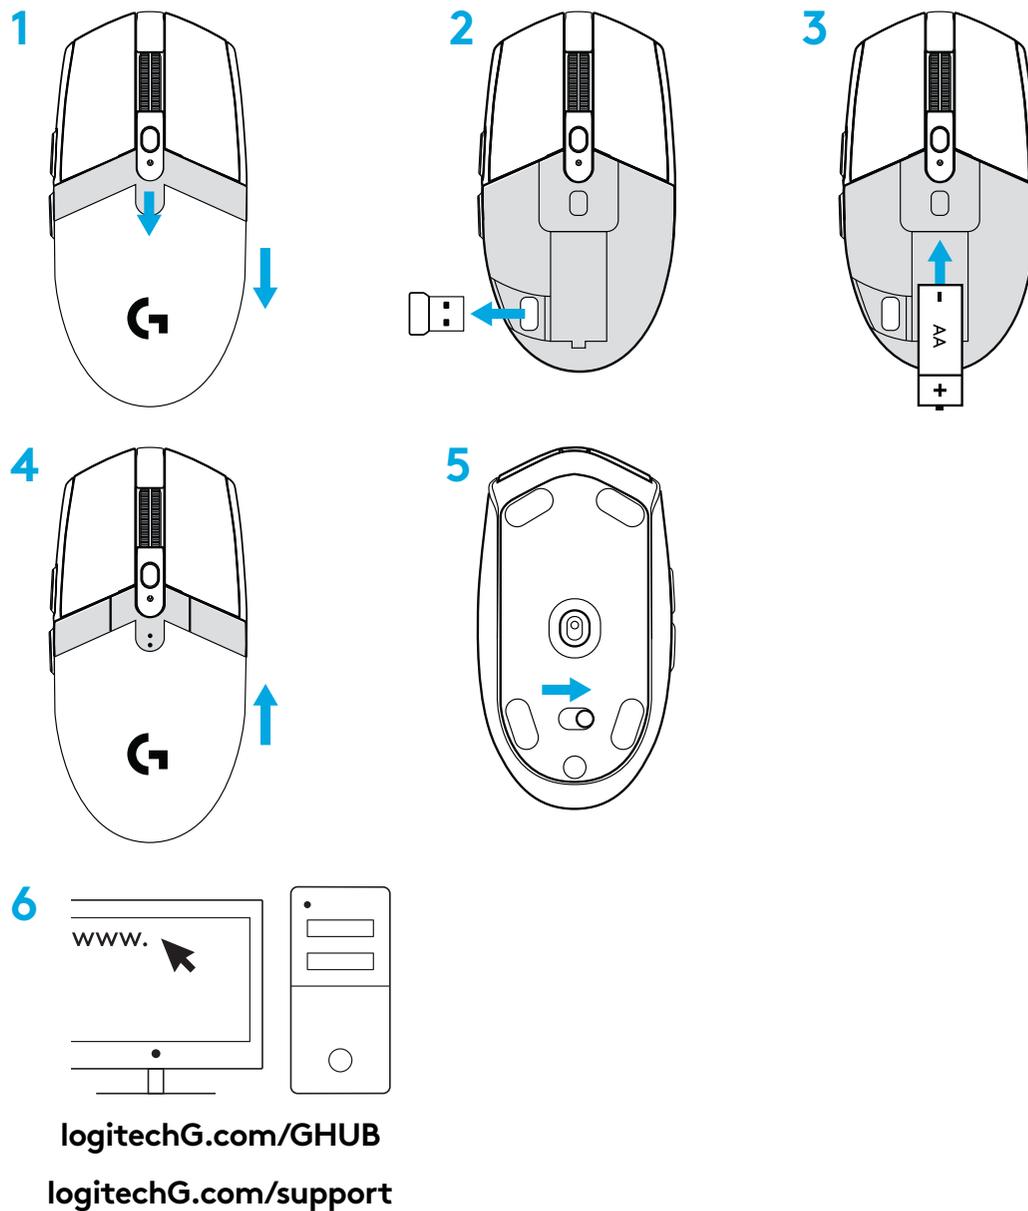

6 個可完全自訂的按鈕

- 1 左鍵 (按鈕 1)
- 2 右鍵 (按鈕 2)
- 3 滾輪按下 = (按鈕 3)
- 4 向前 (按鈕 4)
- 5 向後 (按鈕 5)
- 6 DPI 循環切換 (按鈕 6)
- 7 開啓/關閉開關 (位於滑鼠底部, 不可自訂)

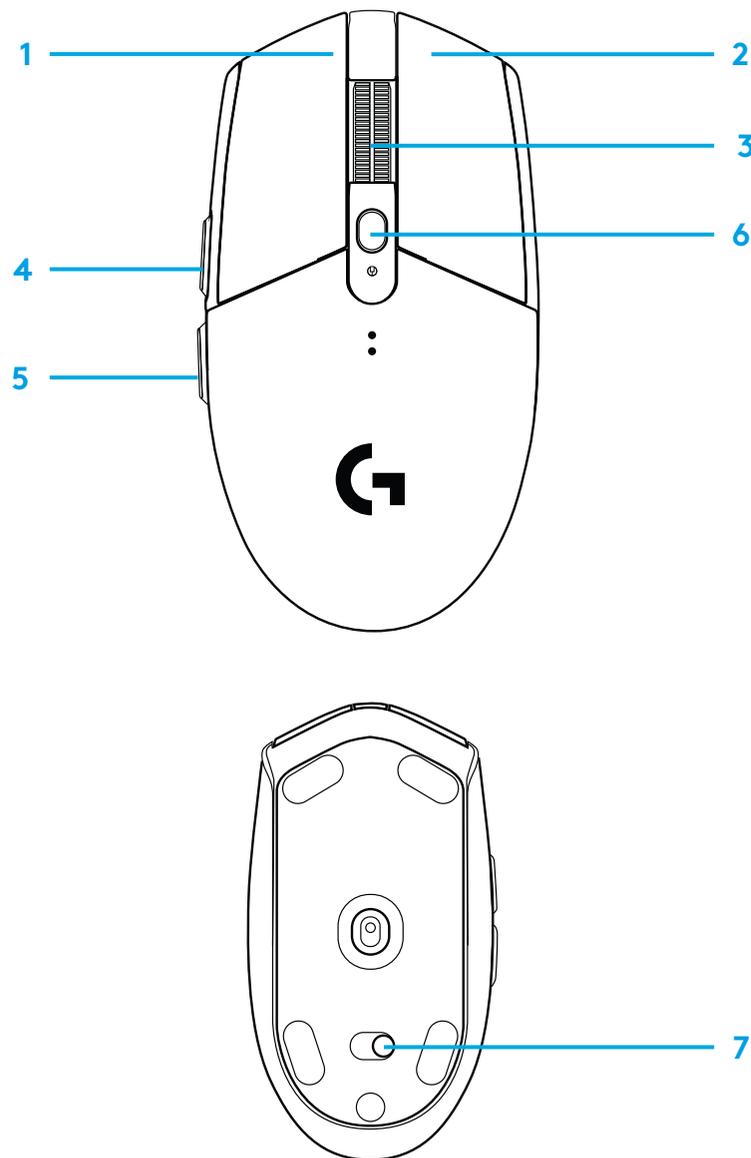

LED 指示燈

電池壽命

閃爍紅燈：電池電量 <15%

DPI

黃色：步進 1 - 400 DPI

白色：步進 2 - 800 DPI (預設)

橙色：步進 3 - 1600 DPI

洋紅色：步進 4 - 3200 DPI

藍色：步進 5 - 6400 DPI (步進 5 只能透過軟體啟用)

模式

青色：效能模式 (預設)

綠色：耐久模式 (只能透過軟體啟用)

提示：


- 啟用耐久模式會降低追蹤效能但增加電池使用壽命。

G HUB 軟體

您可以使用 G HUB 軟體來自訂內建設定檔設定。這些設定包括按鈕自訂、回報速率、效能/耐久模式和追蹤行為。G304 SE / G305 SE 最多可以有 5 個 DPI 設定。


在預設情況下，G304 SE / G305 SE 使用下列設定：

- DPI：400/800/1600/3200
- 回報速率：1 毫秒
- 效能模式

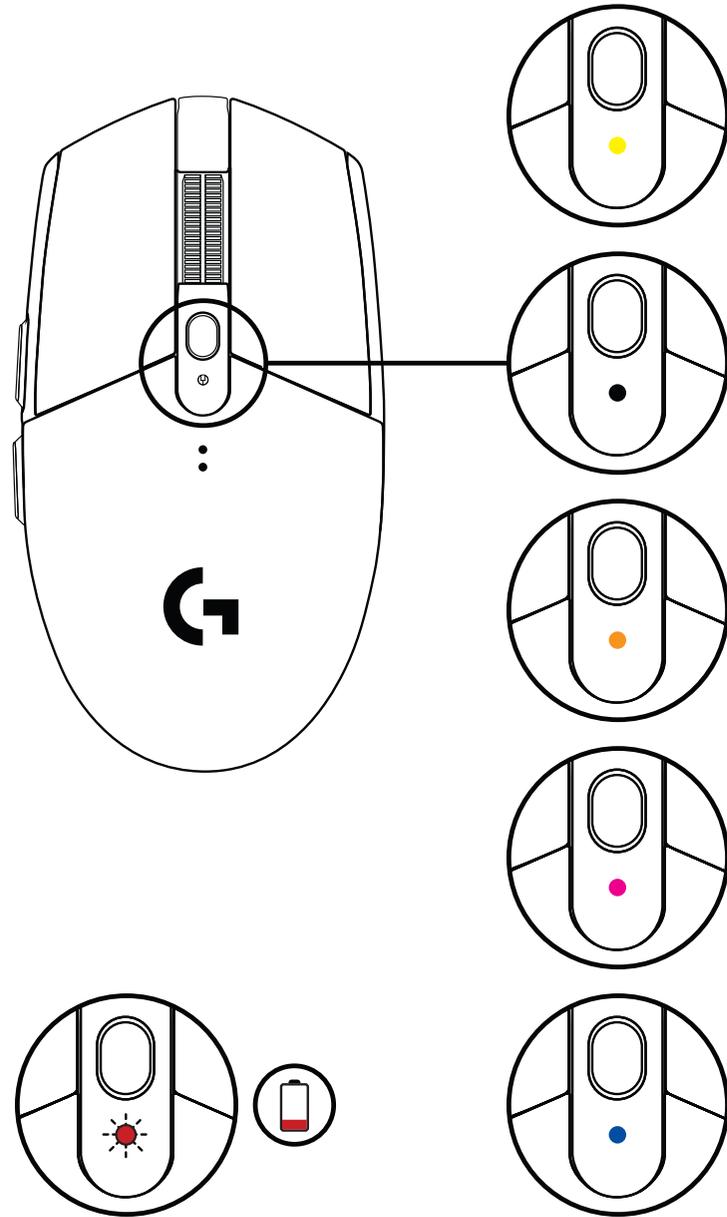


설치 지침

- 1 배터리 커버 위쪽을 눌러 아래로 당겨 커버를 제거합니다.
- 2 수신기를 제거합니다
- 3 배터리를 넣습니다
- 4 배터리 커버를 닫습니다.
- 5 마우스 바닥에 있는 스위치를 사용해 마우스를 켭니다.
- 6 G HUB 소프트웨어 다운로드

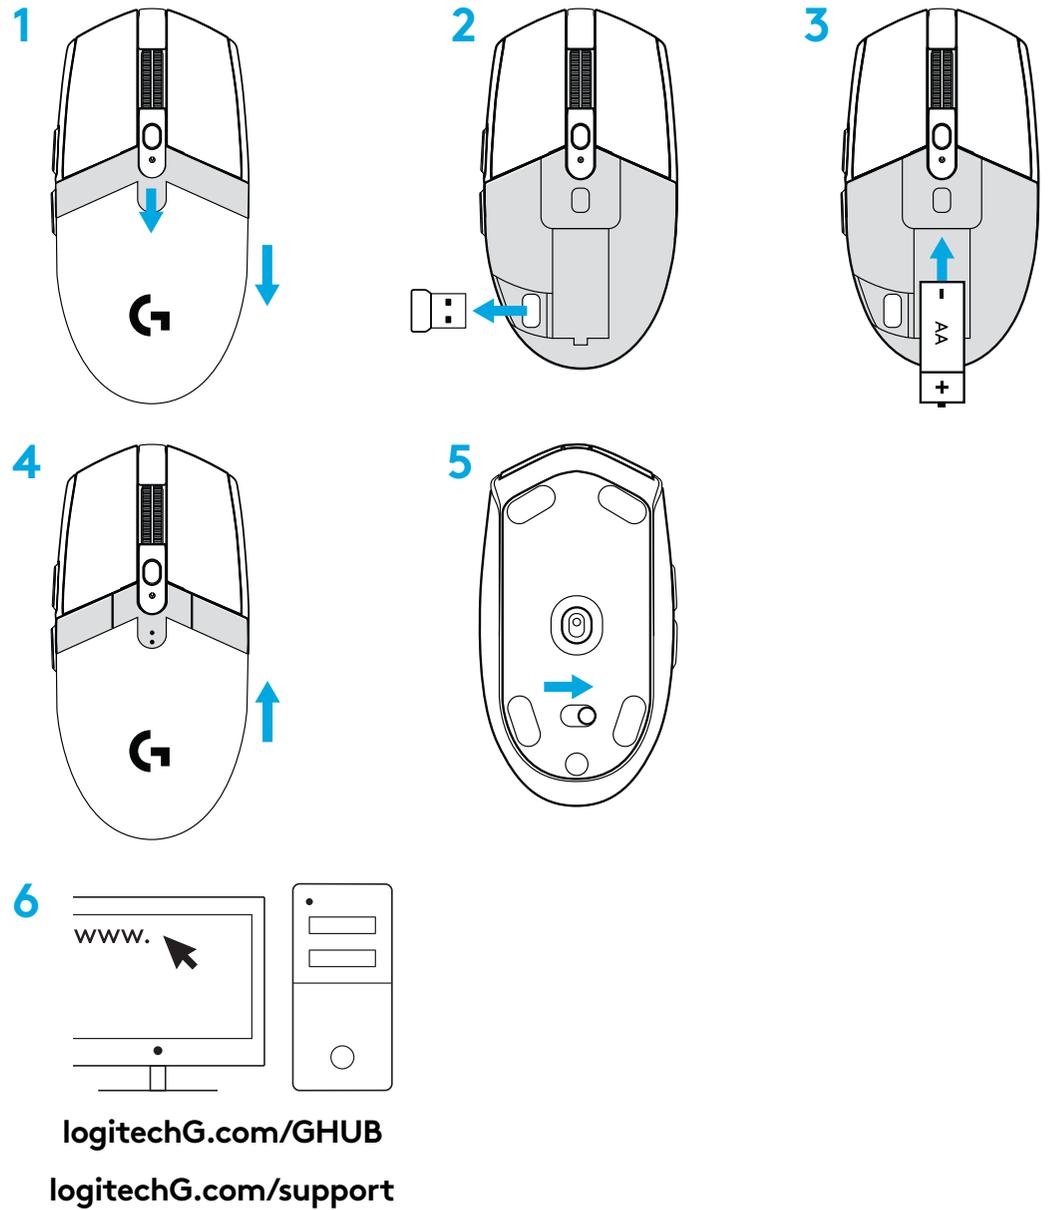

6개의 프로그래밍 가능한 버튼

- 1 왼쪽(버튼 1)
- 2 오른쪽(버튼 2)
- 3 휠 클릭(단추 3)
- 4 앞으로(단추 4)
- 5 뒤로(단추 5)
- 6 DPI 순환(버튼 6)
- 7 켜기/끄기 스위치(마우스 바닥, 프로그래밍 불가)

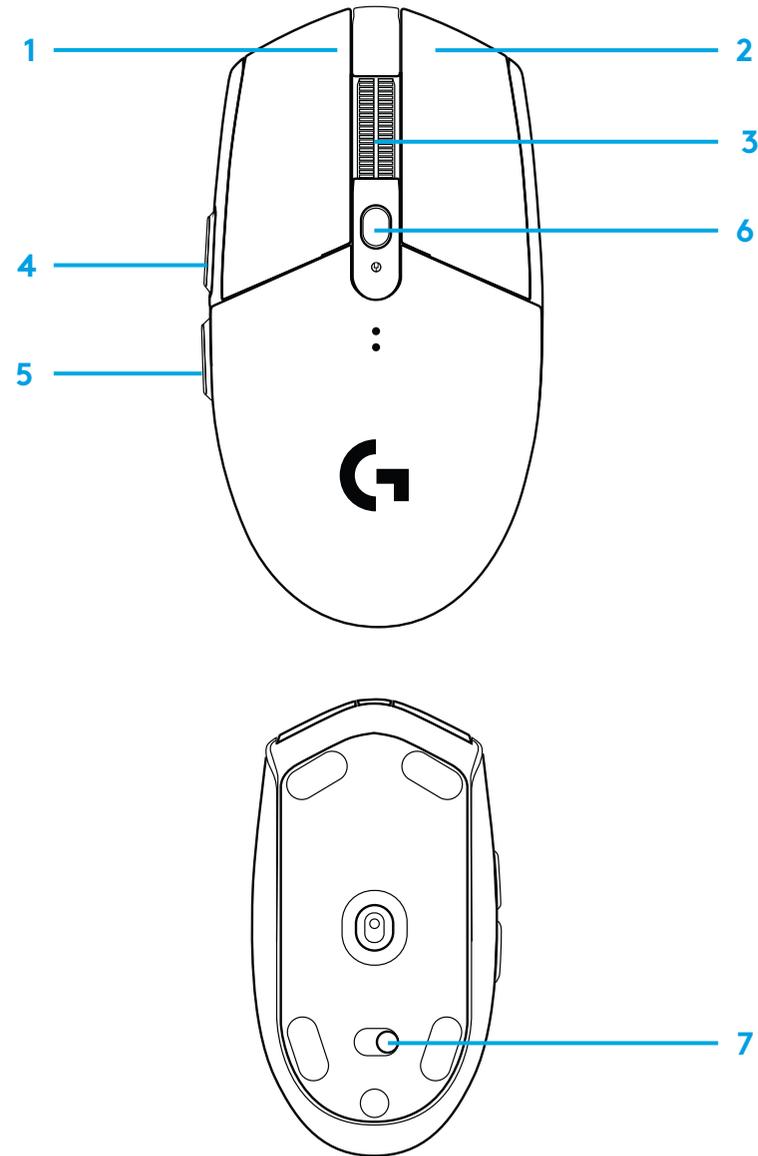

LED 표시등

배터리 수명

깜박이는 빨간색: 배터리 <15%

DPI

노란색: 1단계 - 400 DPI

흰색: 2단계 - 800 DPI(기본)

주황색: 3단계 - 1600 DPI

마젠타: 4단계 - 3200 DPI

파란색: 5단계 - 6400 DPI (5단계는 소프트웨어로만 활성화 가능)

모드

사이언: 퍼포먼스 모드(기본)

녹색: 절전 모드(소프트웨어로만 활성화 가능)

팁:


- 절전 모드 작동 시 트래킹 성능은 하락하지만 배터리 수명은 늘어납니다.

G HUB 소프트웨어

G HUB를 사용하여 온보드 프로파일을 원하는 대로 설정할 수 있습니다. 설정 대상은 버튼 프로그래밍, 보고율, 퍼포먼스/내구 모드, 및 트래킹 거동 등입니다. G304 SE / G305 SE는 최대 5개의 DPI 설정이 가능합니다.

G304 SE / G305 SE의 기본 설정은 다음과 같습니다.

- DPI: 400/800/1600/3200
- 보고율: 1ms
- 성능 모드

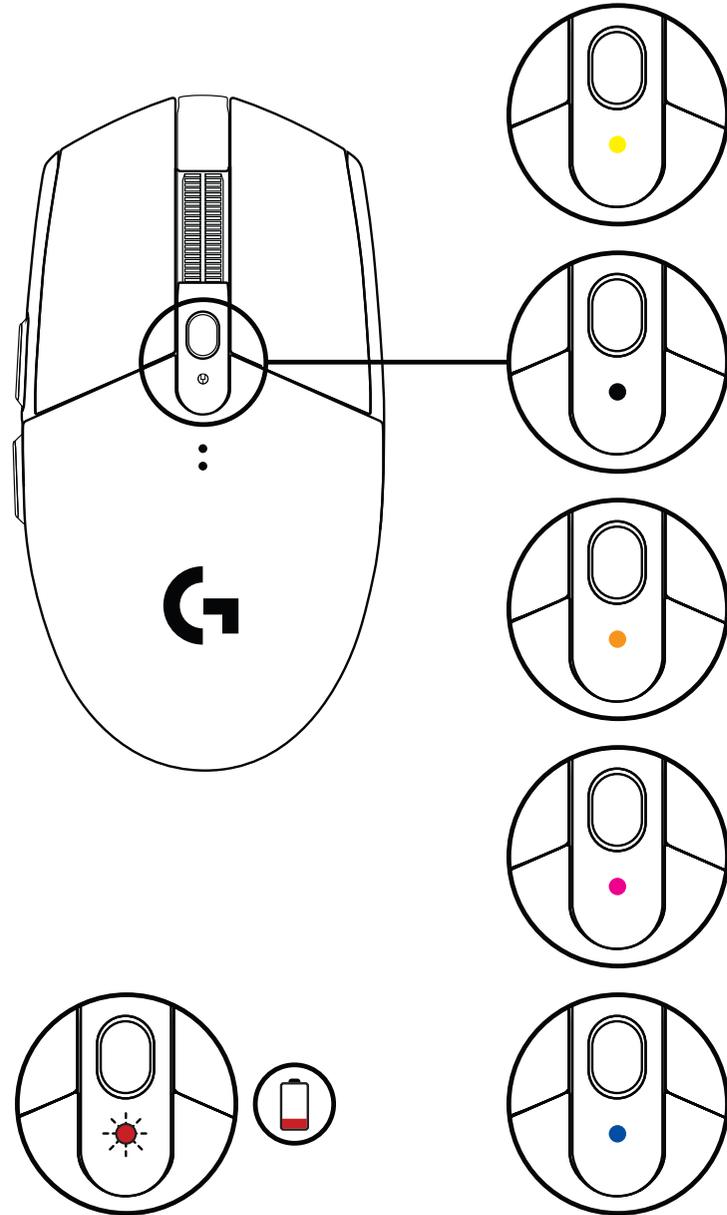



© 2022 Logitech. Logitech, Logitech G and the Logitech and Logitech G logos are trademarks or registered trademarks of Logitech Europe S.A. and/or its affiliates in the U.S. and other countries. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

版权所有 © 2022 罗技。罗技、Logi、Logitech 和罗技标志为罗技欧洲公司和/或其美国及其他国家/地区附属公司的商标，并或已注册。罗技对于本手册中可能出现的任何错误不承担任何责任。本手册中包含的信息如有更改，恕不事先通知。

WEB-621-002181 002