 
 
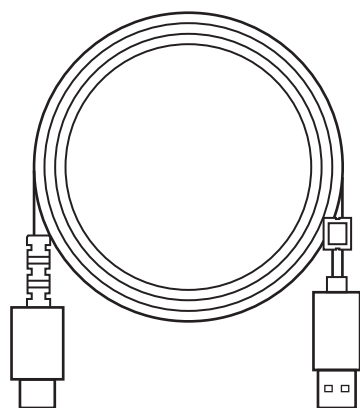 


# G713 KEYBOARD | G713 键盘

Corded Gaming Keyboard  
有线游戏键盘

SETUP GUIDE | 设置指南

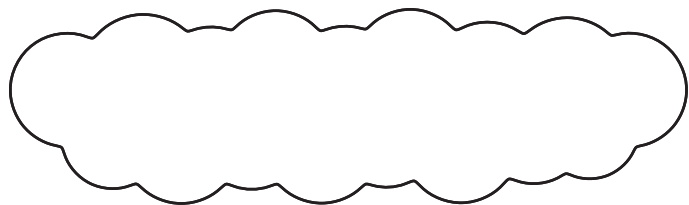

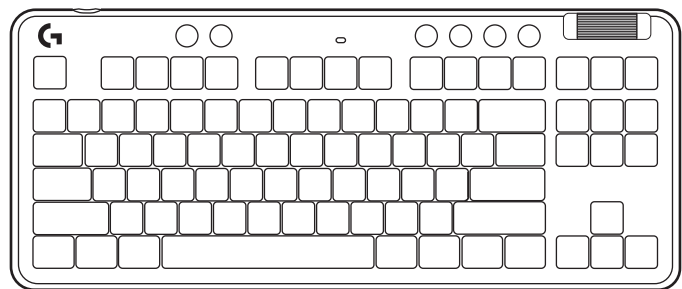 


|                   |    |
|-------------------|----|
| ENGLISH . . . . . | 3  |
| 简体中文 . . . . .    | 7  |
| 繁體中文 . . . . .    | 11 |
| 한국어 . . . . .     | 15 |


## SETUP INSTRUCTIONS

- 1 Insert the USB-C cable into the port at the front of the keyboard.

Connect the cable to your PC.

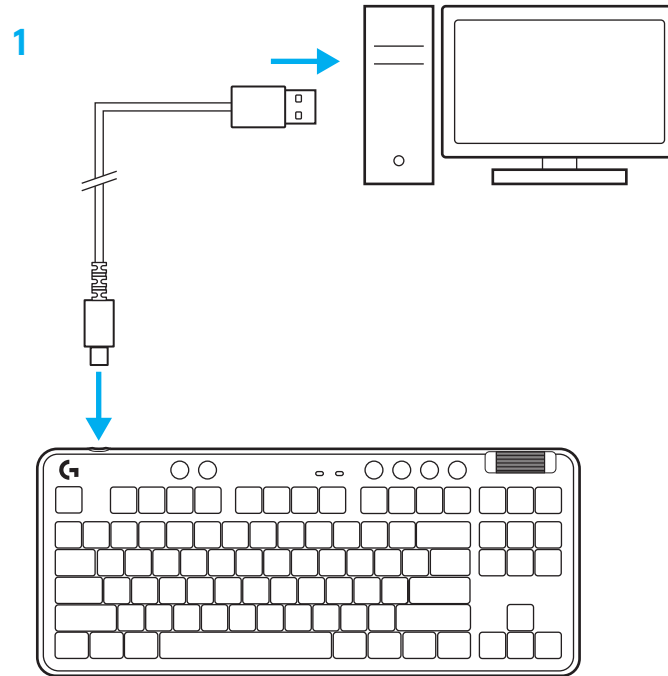

 
- 2 Download and install G HUB software to your PC/MAC for the best gaming experience (G HUB has onboarding story for features).  
Go to **[www.logitechG.com/ghub](http://www.logitechG.com/ghub)**

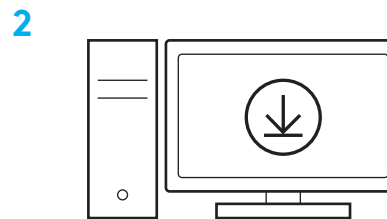

**[www.logitechG.com/ghub](http://www.logitechG.com/ghub)**


## Media Controls

 G713 includes media controls. Skip back, play/pause, skip forward and mute key, with a volume roller that controls your device volume.

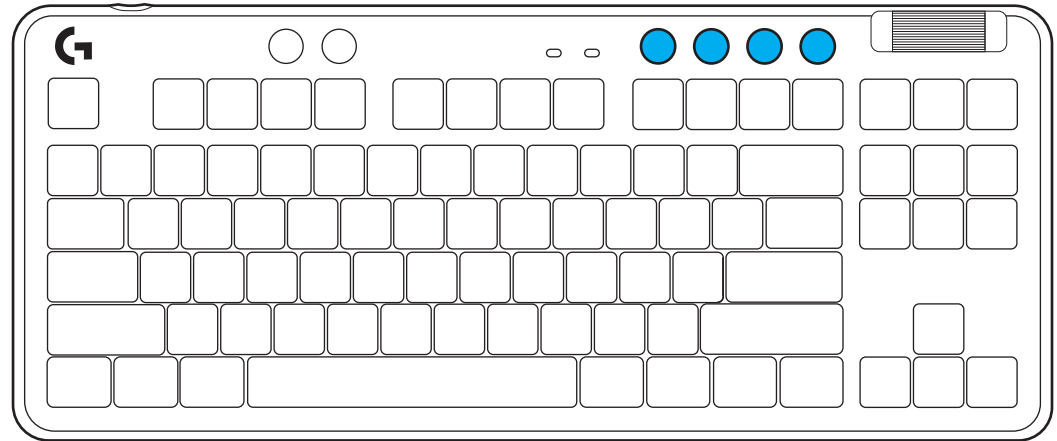


## Game Mode

 Pressing the Game mode button blocks the Windows and Menu keys when pressed. Additional keys can be blocked using G HUB software.

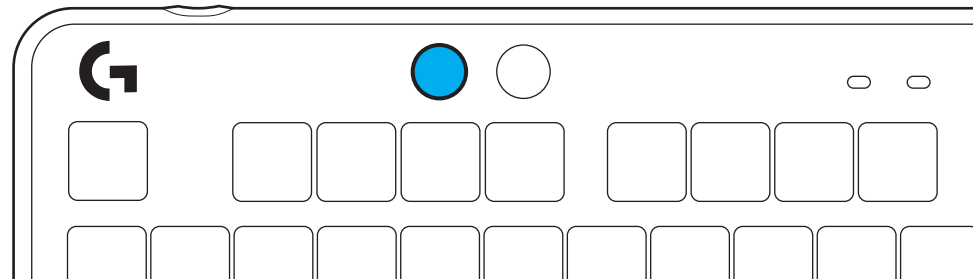

## Brightness

 Adjust lighting brightness by pressing the brightness button.

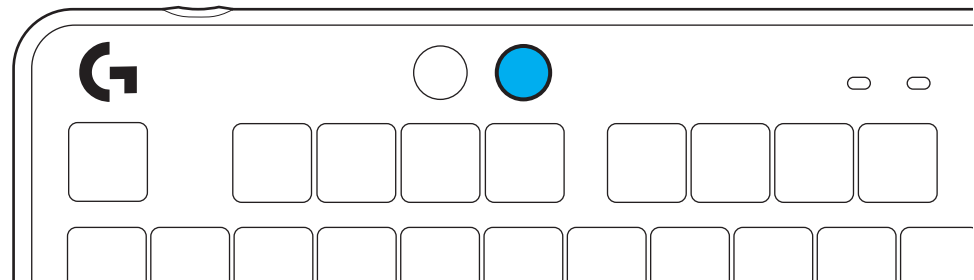

## ONBOARD LIGHTING EFFECTS

The keyboard has 8 different lighting effects stored in its onboard memory. You can select and modify these by pressing the Brightness button and these keys:

**Brightness + 1 = Rainbow > right**

**Brightness + 2 = Rainbow > left**

**Brightness + 3 = Rainbow center out**

**Brightness + 4 = Rainbow ^ up**

**Brightness + 5 = Color cycle**

**Brightness + 6 = Keystroke ripple**

**Brightness + 7 = Breathing cyan**

**Brightness + 8 = Custom lighting effect**

**Brightness + 9 = Custom lighting effect**

**Brightness + 0 = Solid cyan**

 
**Brightness + - = Animation slower**

**Brightness + = = Animation faster**

G HUB lighting controls will override these settings.

## CHANGING THE TOP PLATE


The top plate can be removed and replaced with optional accessory top plates.

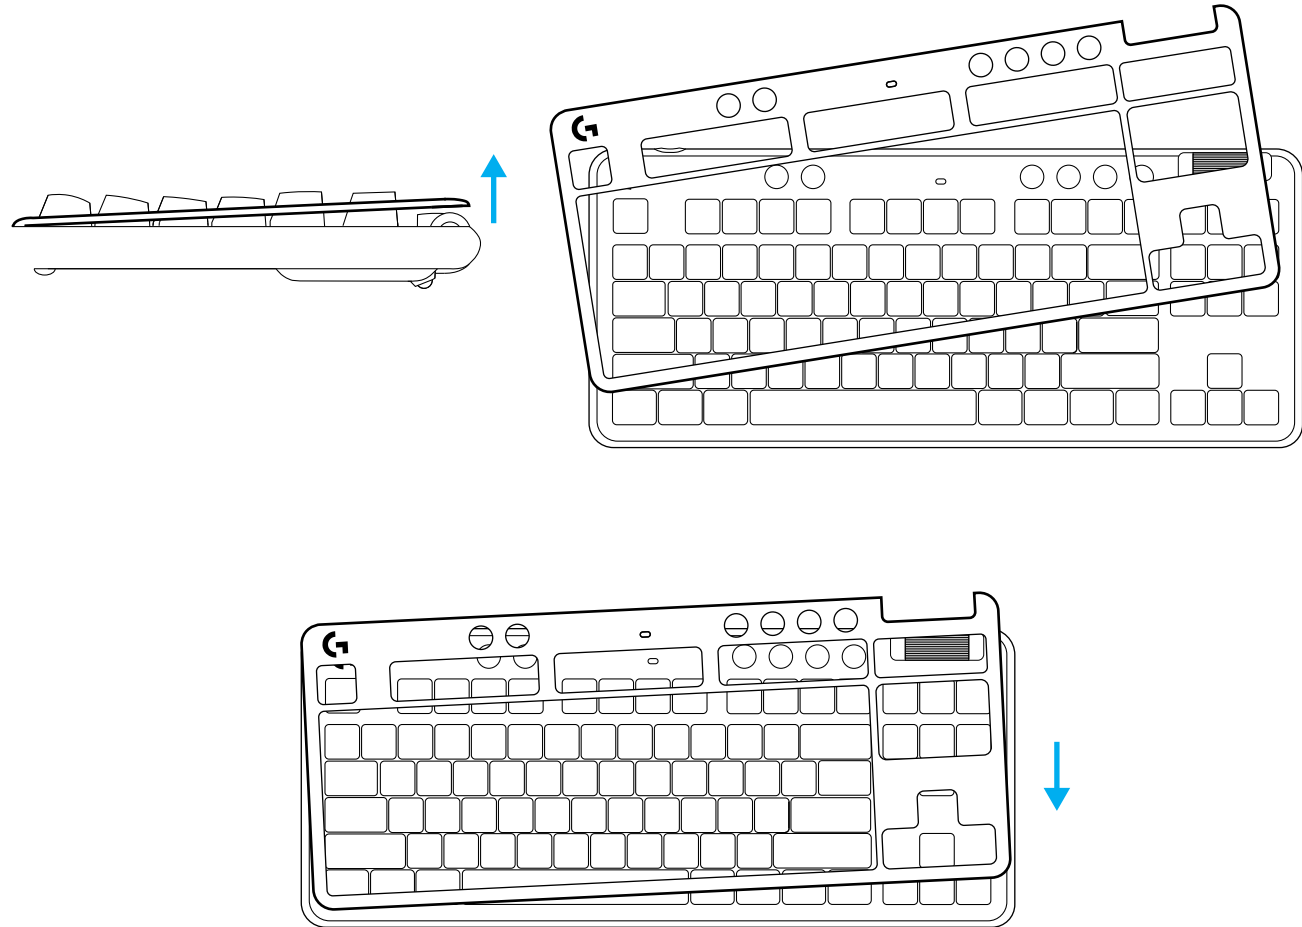

## 设置说明

- 1 将 USB-C 线缆插入键盘正面的端口。

 将线缆连接至 PC。

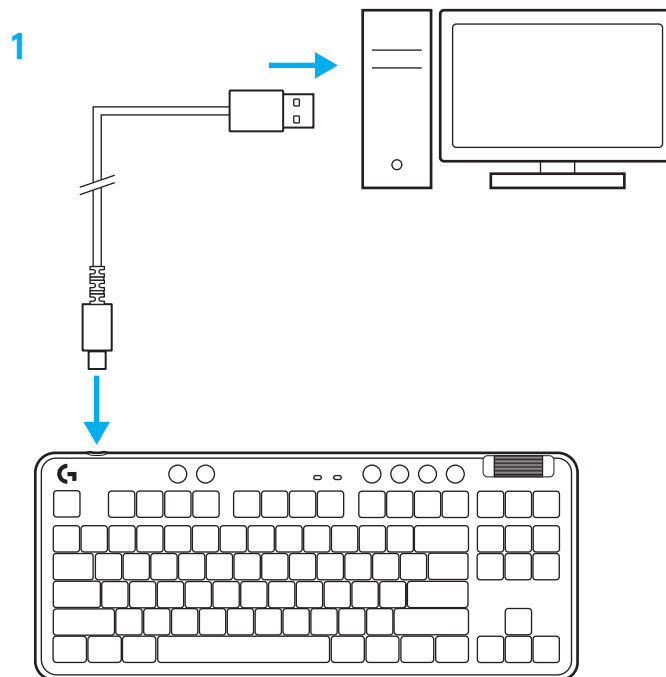


- 2 下载 G HUB 软件并安装到 PC/MAC，获得更出色的游戏体验（G HUB 包含有关各项功能的入门介绍）。访问 [www.logitechG.com/ghub](http://www.logitechG.com/ghub)




## 媒体控制

 G713 包含媒体控制。上一曲、播放/暂停、下一曲和静音键，使用音量滚轮控制您的设备音量。

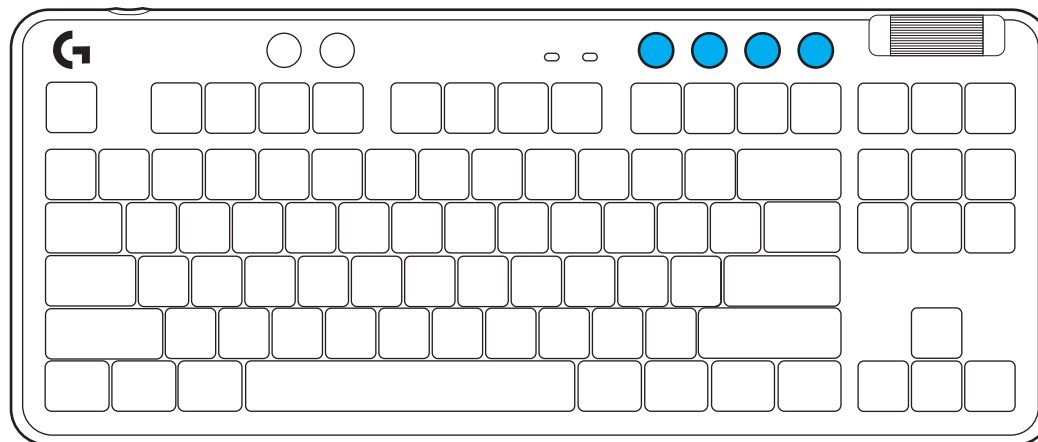


## 游戏模式

 按下游戏模式按钮后会阻止 Windows 和菜单键功能。可以使用 G HUB 软件阻止其他按键。

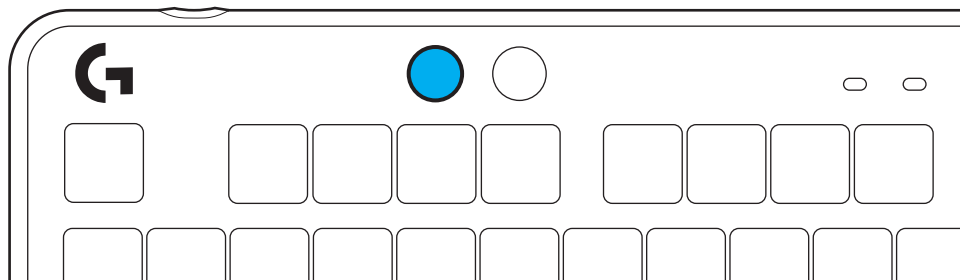

## 亮度

 按下亮度按钮调节灯光亮度。

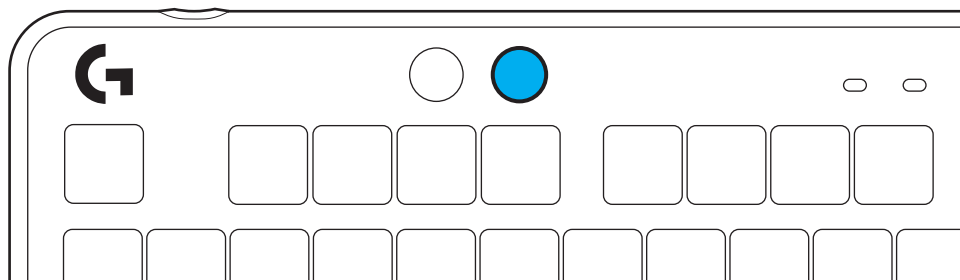



## 板载灯光效果

键盘在其板载内存中存储了 8 种不同的灯光效果。您可以按下亮度按钮和以下按键来选择和改变灯光效果：

**亮度 + 1 = 彩虹 > 右**

**亮度 + 2 = 彩虹 > 左**

**亮度 + 3 = 彩虹从中心向外扩散**

**亮度 + 4 = 彩虹 ^ 上**

**亮度 + 5 = 色彩循环**

**亮度 + 6 = 击键波纹**

**亮度 + 7 = 青色呼吸灯**

**亮度 + 8 = 自定义灯光效果**

**亮度 + 9 = 自定义灯光效果**

**亮度 + 0 = 常亮青色**

 
**亮度 + - = 动画效果减速**

**亮度 + + = 动画效果加速**

G HUB 灯光控制将覆盖这些设置。

## 更换面板


面板可以拆卸并以选配附件面板替换。

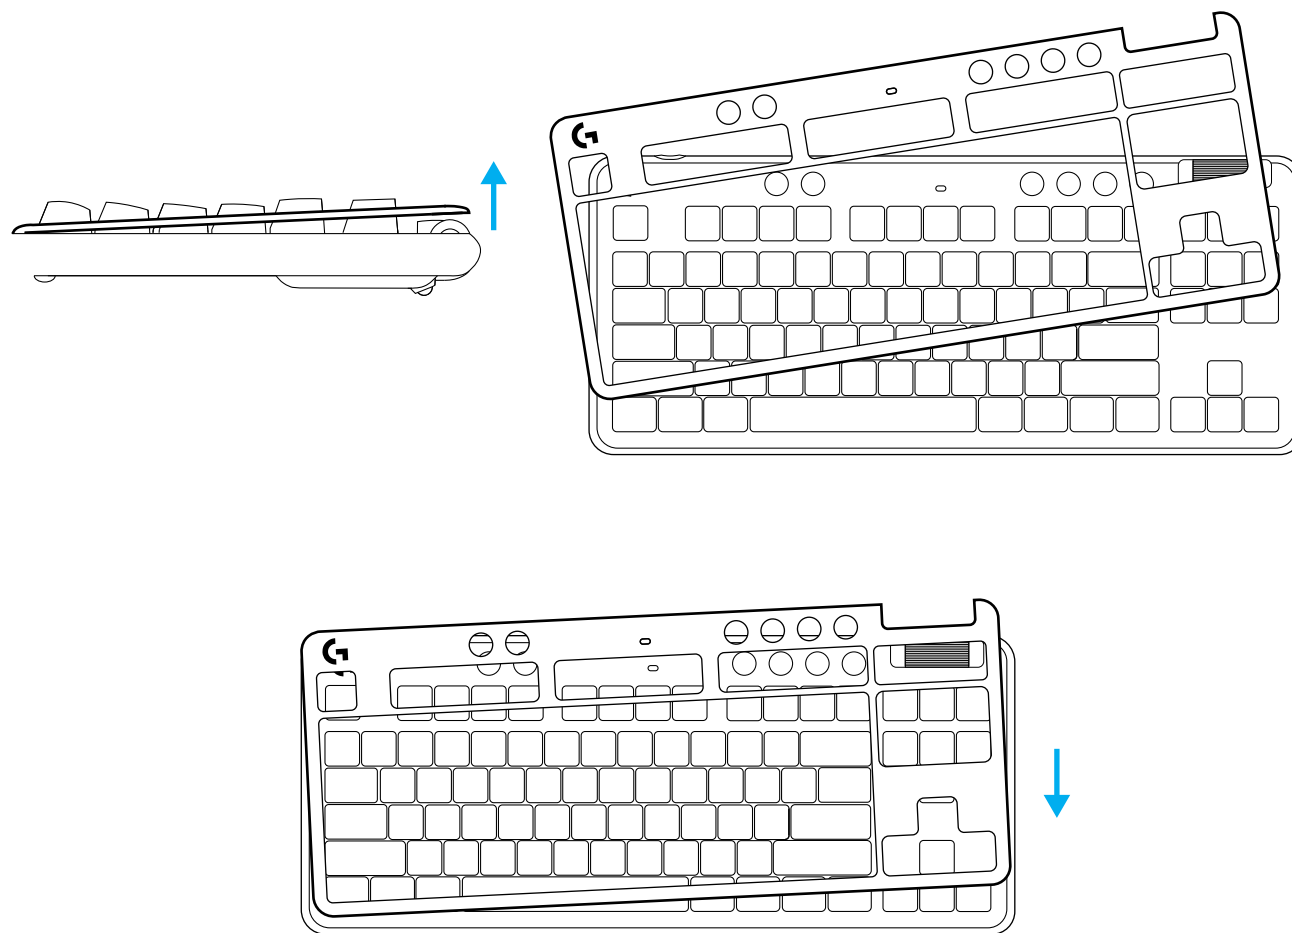

## 設定說明

- 1 將 USB-C 連接線插入鍵盤正面的連接埠。

 將連接線連接到 PC。

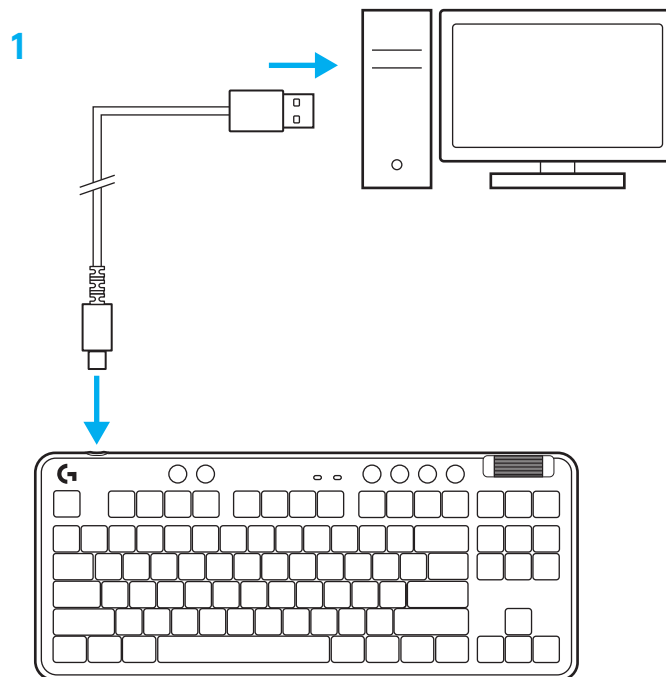


- 2 下載並安裝 G HUB 軟體到您的 PC/MAC，以獲得最佳遊戲體驗 (G HUB 提供有功能的介紹說明)。  
前往 [www.logitechG.com/ghub](http://www.logitechG.com/ghub)




## 媒體控制鍵

 G713 提供有媒體控制功能。向後快轉、播放/暫停、向前快轉和靜音鍵，配備有音量滾輪可控制您裝置的音量。

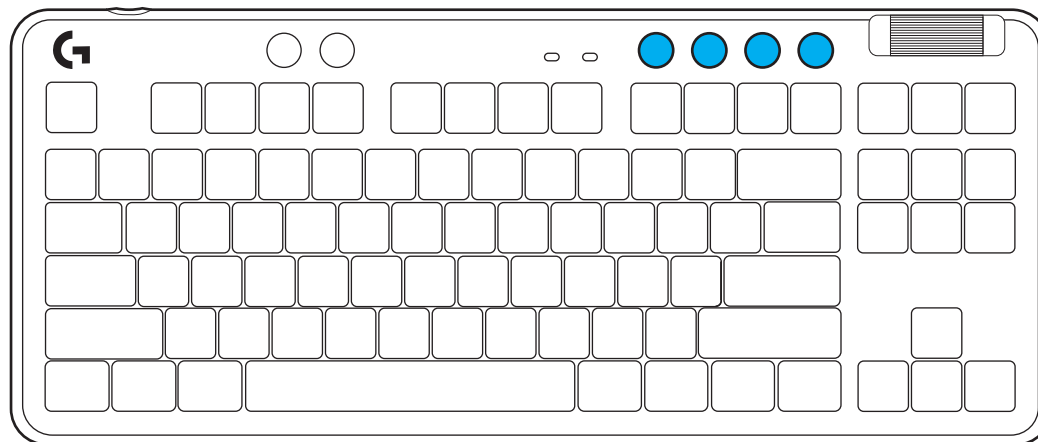


## 遊戲模式

 按下游戲模式按鈕時可阻止 Windows 和功能表鍵起作用。其他按鍵可使用 G HUB 軟體封鎖其功能。

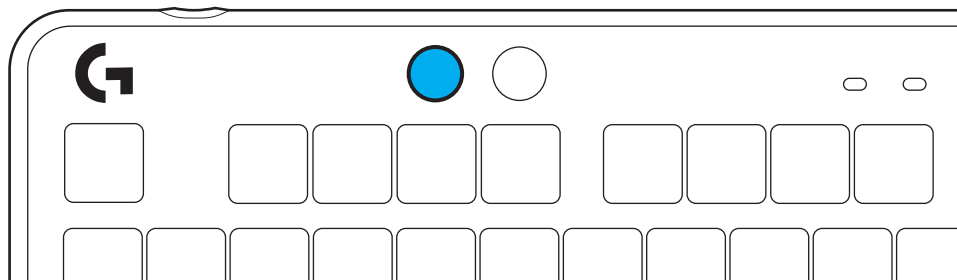

## 亮度

 按下亮度按鈕可調整燈光亮度。

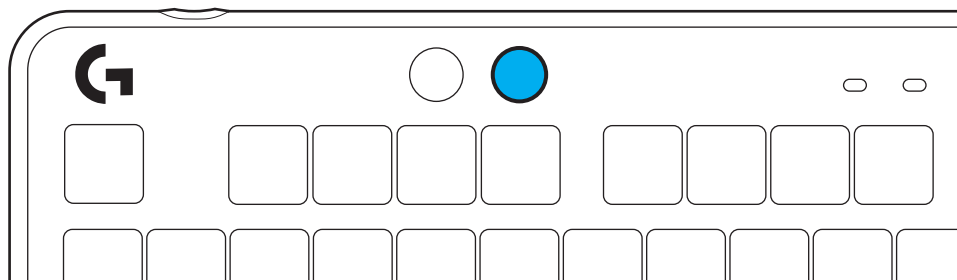

## 內建燈光效果

此鍵盤具有 8 種不同的燈光效果，這些效果儲存在其內建記憶體中。您可以按下亮度按鈕與這些按鍵，來選擇與修改這些效果：

亮度 + 1 = 彩虹 > 右

亮度 + 2 = 彩虹 > 左

亮度 + 3 = 彩虹中央向外擴散

亮度 + 4 = 彩虹 ^ 上

亮度 + 5 = 彩色圓環

亮度 + 6 = 按鍵波紋

亮度 + 7 = 青色呼吸效果

亮度 + 8 = 自訂燈光效果

亮度 + 9 = 自訂燈光效果

亮度 + 0 = 穩定青色

 
亮度 + - = 較慢的動畫效果

亮度 + = = 較快的動畫效果

G HUB 的燈光控制會覆寫這些設定。

## 更換上蓋板


上蓋板可以取下並更換為選用的配件上蓋板。

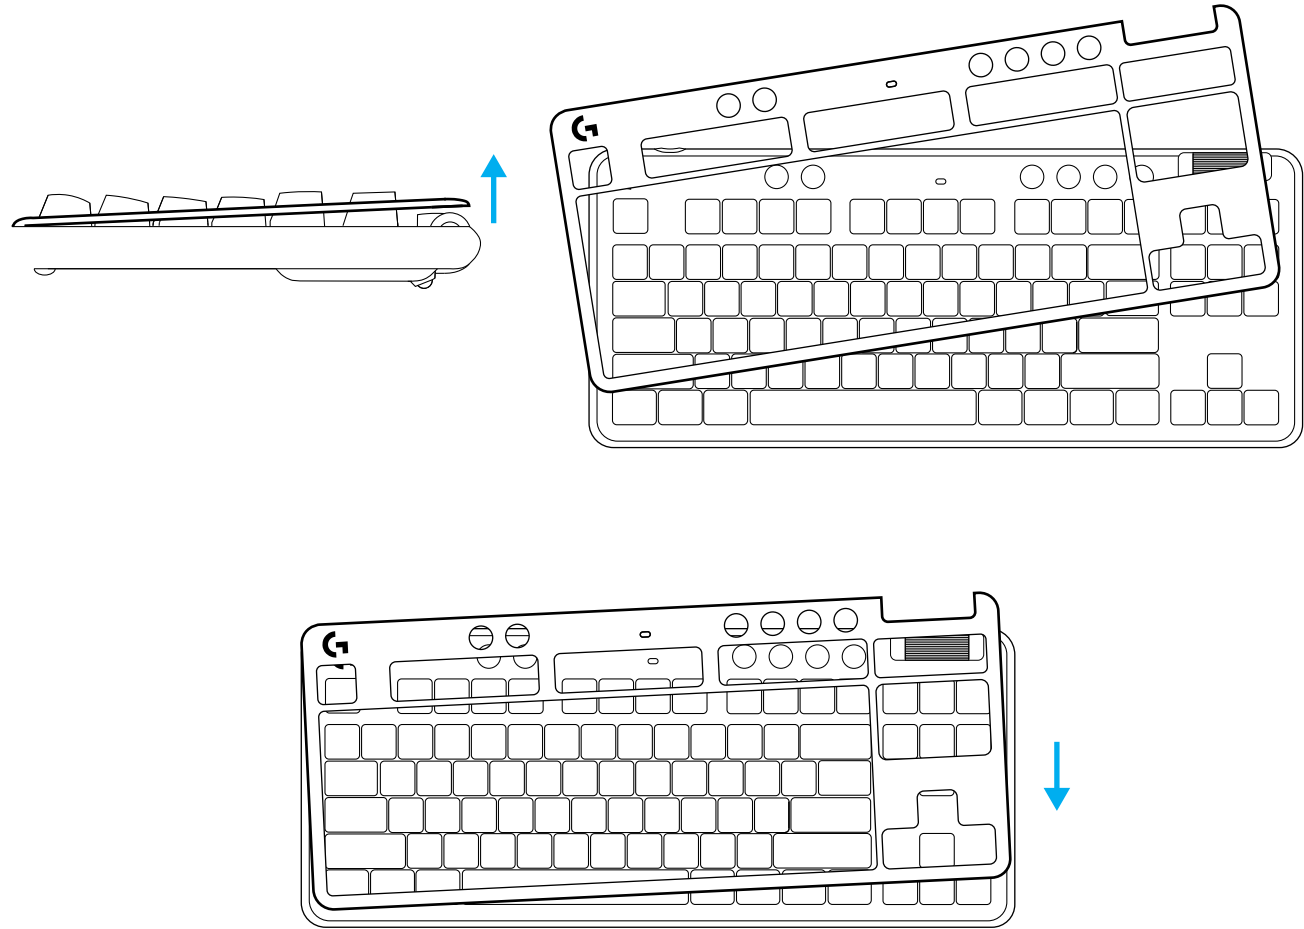

## 설치 지침

- 1 USB-C 케이블을 키보드 전면에 있는 포트에 연결합니다.

 PC에 케이블을 연결합니다.

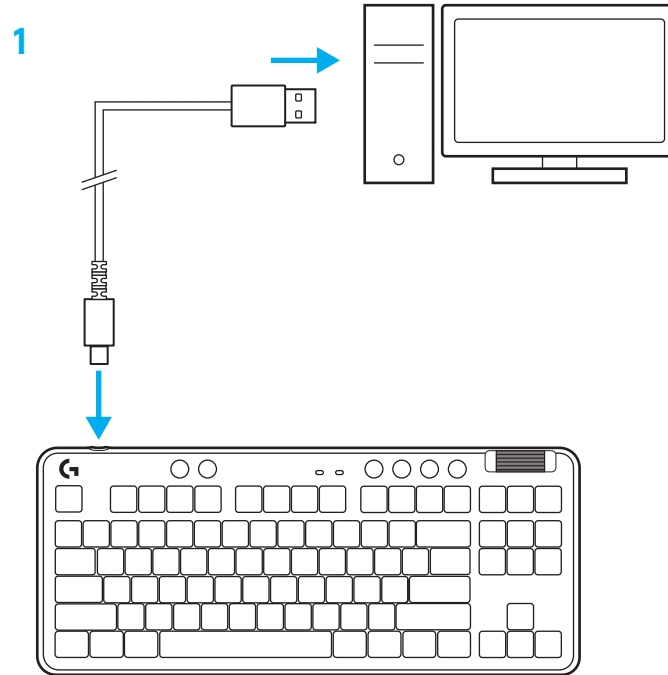


- 2 최고의 경험을 위해 PC/MAC에 G HUB 소프트웨어를 다운로드 및 설치합니다(G HUB에서 기능 확인 가능). [www.logitechG.com/ghub](http://www.logitechG.com/ghub)로 이동




## 미디어 컨트롤

 G713에는 미디어 컨트롤이 탑재되어 있습니다.  
뒤로 건너뛰기, 재생/일시 정지, 앞으로 감기, 음소거  
키와 장치 볼륨을 컨트롤하는 볼륨 롤러도 이용  
가능합니다.

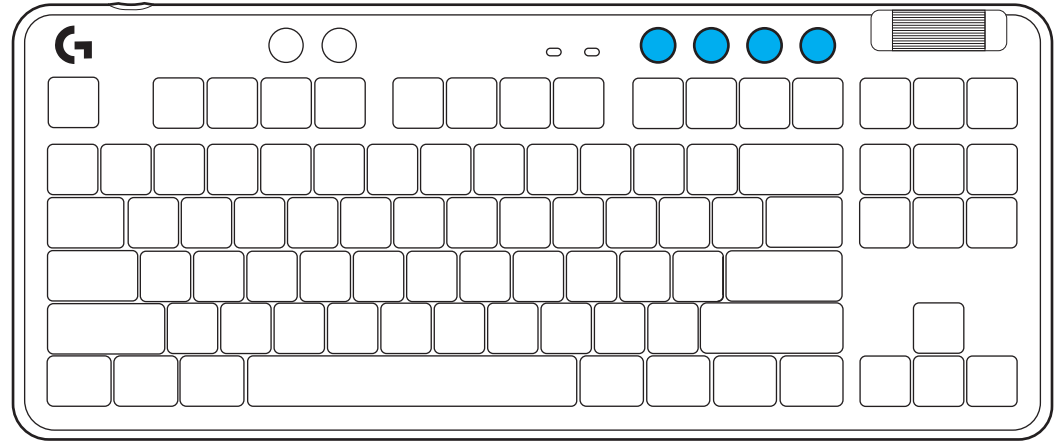


## 게임 모드

 게임 모드 버튼을 누르면 Windows 및 메뉴 키가  
눌리지 않습니다. G HUB 소프트웨어로 다른 키도  
차단할 수 있습니다.

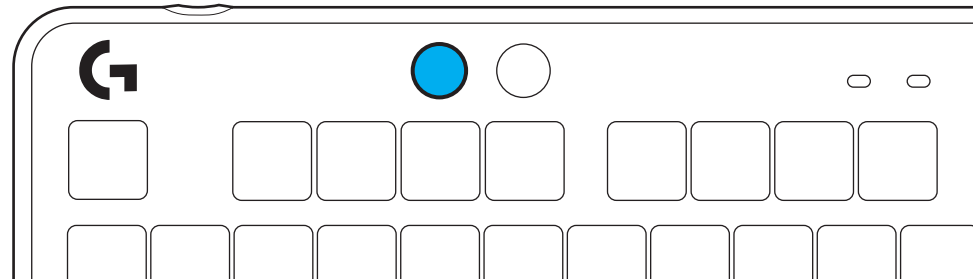

## 밝기

 밝기 버튼을 눌러 조명 밝기를 조절해보세요.

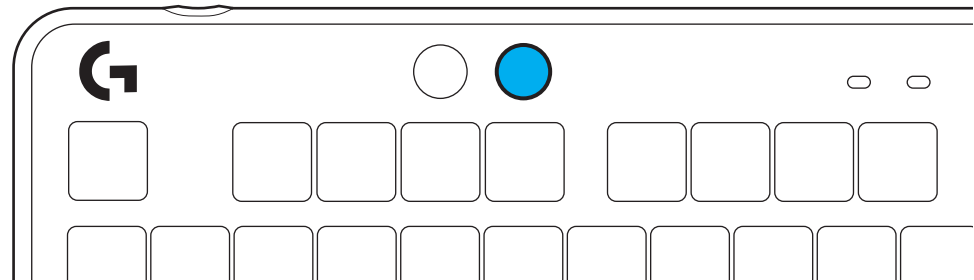



## 온보드 조명 효과

키보드의 온보드 메모리에 8개의 다양한 조명 효과가 저장되어 있습니다. 밝기 버튼과 다음 키를 눌러 이를 선택 및 편집할 수 있습니다.

밝기 + 1 = 무지개 > 오른쪽

밝기 + 2 = 무지개 > 왼쪽

밝기 + 3 = 무지개 중앙

밝기 + 4 = 무지개 ^ 위로

밝기 + 5 = 컬러 순환

밝기 + 6 = 키 입력 반응

밝기 + 7 = 청록색 일렁임

밝기 + 8 = 커스텀 조명 효과

밝기 + 9 = 커스텀 조명 효과

밝기 + 0 = 청록색 유지

 
 
밝기 + - = 애니메이션 느리게

밝기 + = = 애니메이션 빠르게

G HUB를 통한 조명 설정은 이 설정을 덮어씁니다.

## 타입 플레이트 변경

타입 플레이트를 떼고 액세서리 타입 플레이트(옵션)로 교체할 수 있습니다.

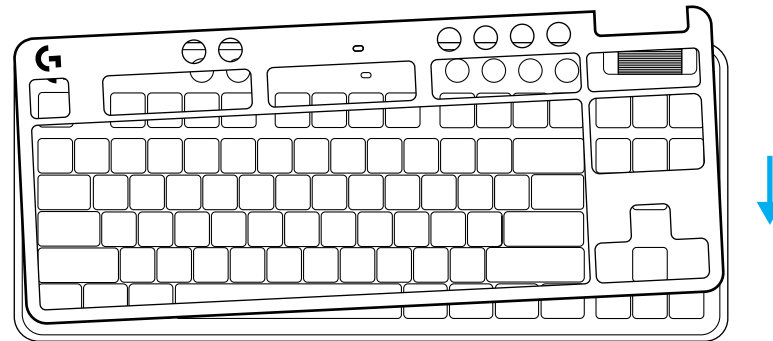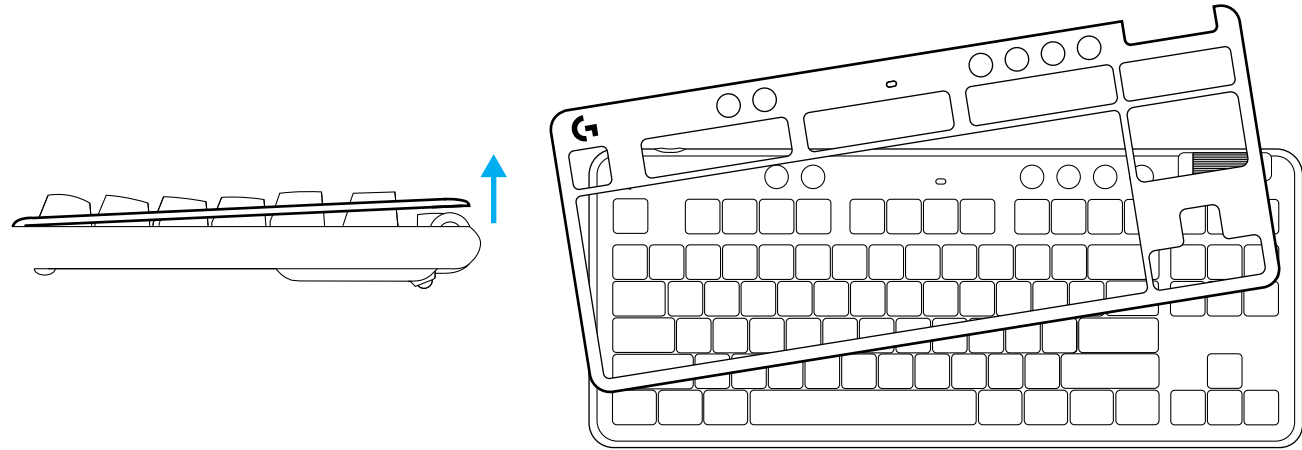



© 2022 Logitech. 罗技, 罗技 G, Logi, Logitech, Logitech G, Logi and their respective logos are trademarks or registered trademarks of Logitech Europe S.A. and/or its affiliates in the U.S. and other countries. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

版权所有 © 2022 罗技。罗技、罗技 G、Logi、Logitech、Logitech G 及其各自标志为 Logitech Europe S.A. 和/或其在  
美国及其他国家/地区附属公司的商标或注册商标。所有其它商标均是其各自所有者的财产。罗技对于本手册中可能出  
现的任何错误不承担任何责任。本手册中包含的信息如有更改, 恕不事先通知。