

YETI GX

Dynamic RGB Gaming Mic with LIGHTSYNC
动态 RGB 游戏麦克风, 支持 LIGHTSYNC

SETUP GUIDE | 设置指南






logitech 罗技 G



ENGLISH 3

 

简体中文 11

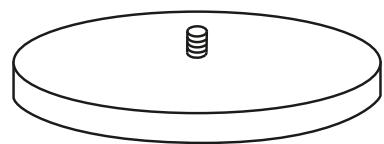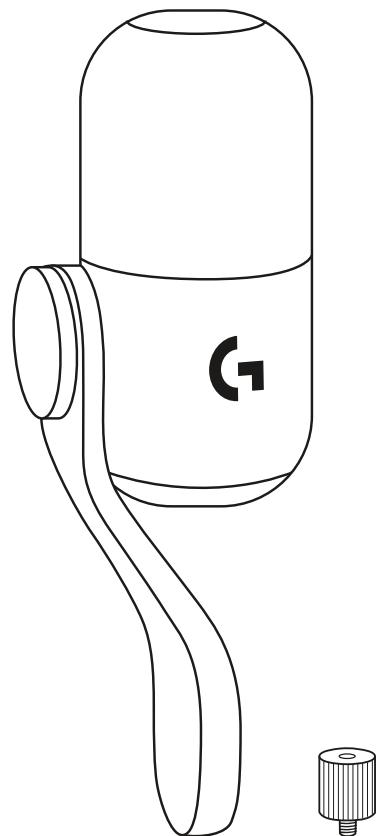


SETUP INSTRUCTIONS

SETUP 1

- Mount your new Yeti GX microphone to either the included desktop stand or a boom arm.
- Plug in the *USB-C* end of the cable to the port at the bottom.

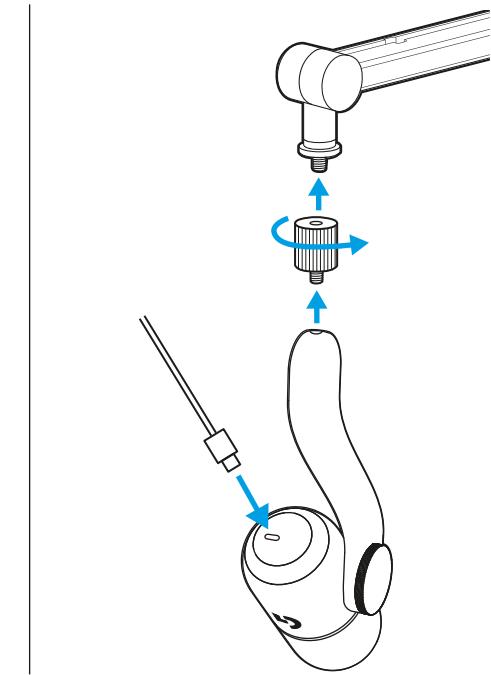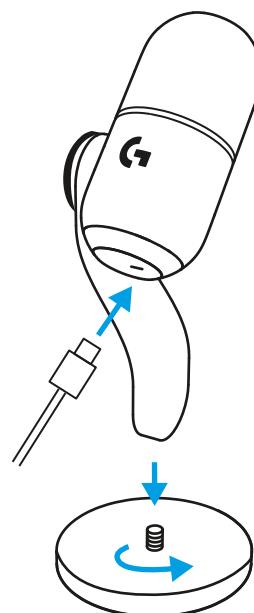



- Plug the *USB-A* end of the cable into your computer.

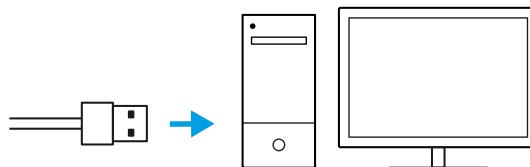

SETUP 2

IMPORTANT!

Be sure the flat part of the windscreen is pointing towards you!

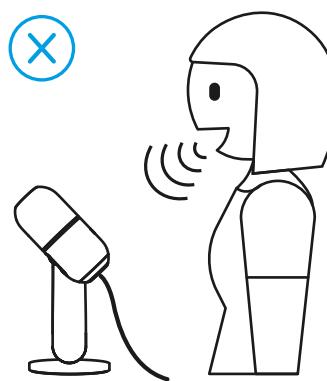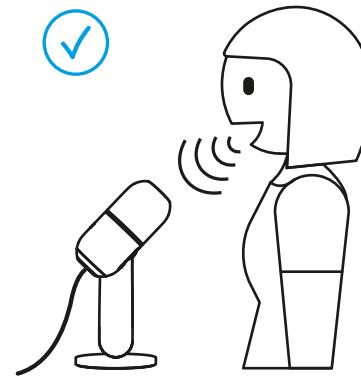


SETUP 3

- Open any streaming or recording software with audio configuration.



- Within the settings of the software, you may need to select Yeti GX as the active microphone.

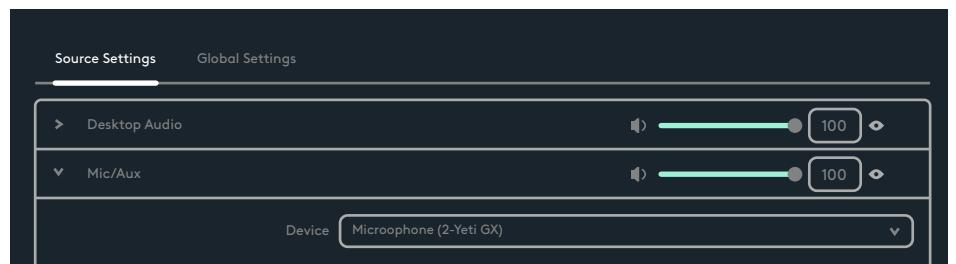


SETUP 4

The scroll wheel adjusts your microphone gain.

While speaking in a normal voice that you would use while streaming or recording, adjust the gain by scrolling the wheel.


Scrolling the wheel up will increase gain while scrolling down will reduce gain.

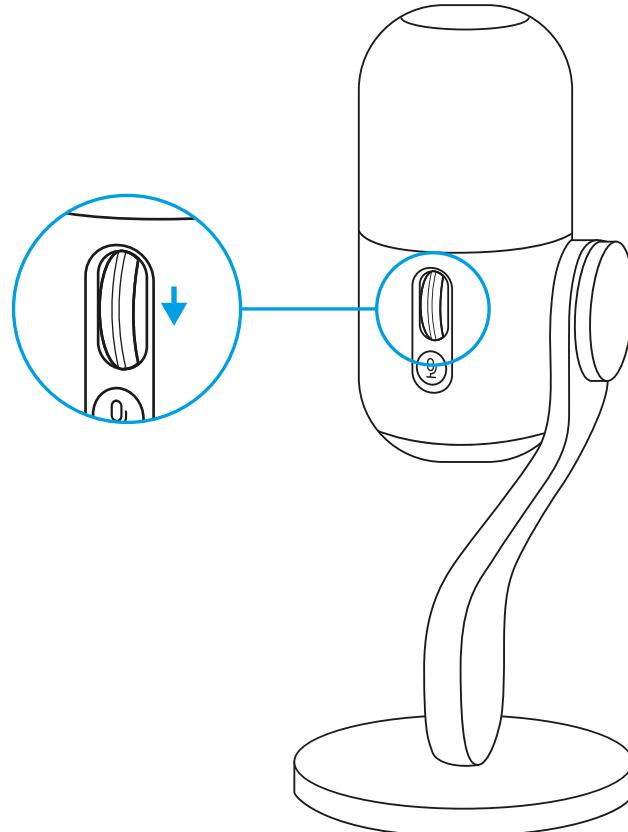


SETUP 5

The LED on the scroll wheel also indicates if the mic is being used.


- Solid white means your mic is powered on.

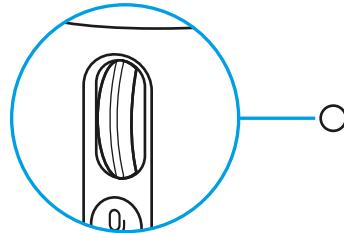


- Solid green means your mic is actively delivering audio.

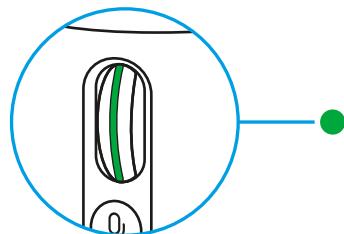

- Flashing red means your gain level is too high and causing clipping or distortion so it's best to turn it down.

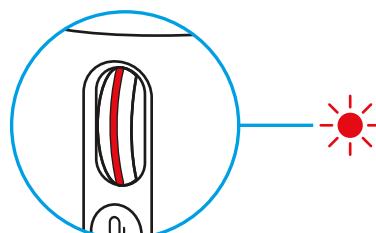

- Solid red means your microphone is muted (press the mute button by the scroll wheel to mute or unmute).

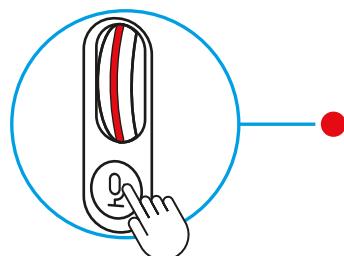


SETUP 6

After you are happy with the gain setting, click the wheel in to enable Smart Audio Lock. The LED on the wheel will turn Cyan when enabled.


Smart Audio Lock: smartly adjusts your gain by using an analog limiter to prevent clipping and a downward expander to reduce ambient background noise.

When enabled, the scroll wheel will not change gain. Click again to unlock before making any changes.

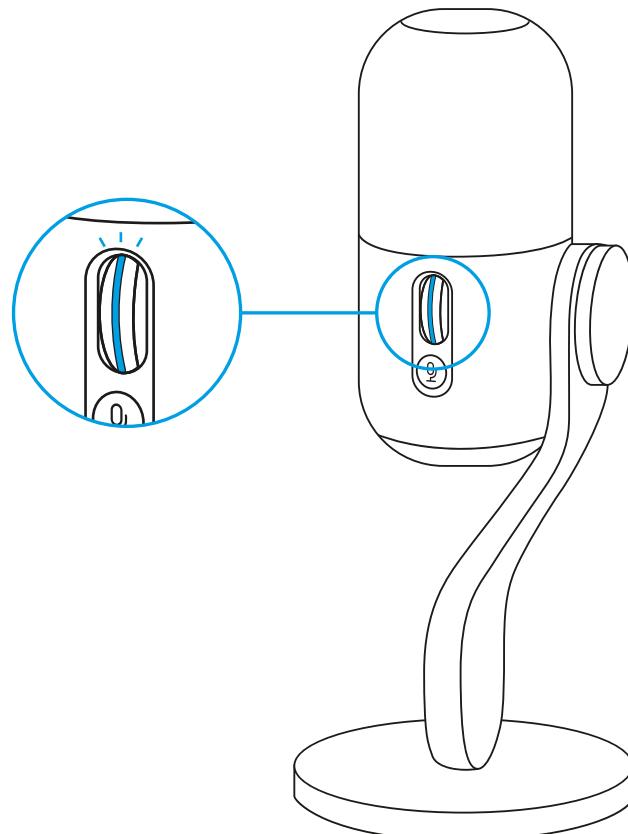

SETUP 7

Download G HUB for full setup and customization of audio and lighting settings.

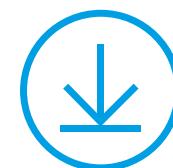

logitechG.com/ghub

SETUP 8


- Click the Microphone menu in G HUB to access BlueVo!ce presets, effects, and processing like EQ and noise reduction. You can also enable the Smart Audio Lock from this screen.



- To try different settings, first record a sample of your voice, then press play. You will then hear the recording you just made with the current BlueVo!ce settings. From here you can apply different presets, settings, and effects. Any changes you make will be applied to the recording so you can hear exactly what your audience will hear.



- Click the LIGHTSYNC menu in GHub to customize the lighting in the RGB ring and G logo.
- Choose from easy presets, or use the freestyle and animation tabs for full customization.

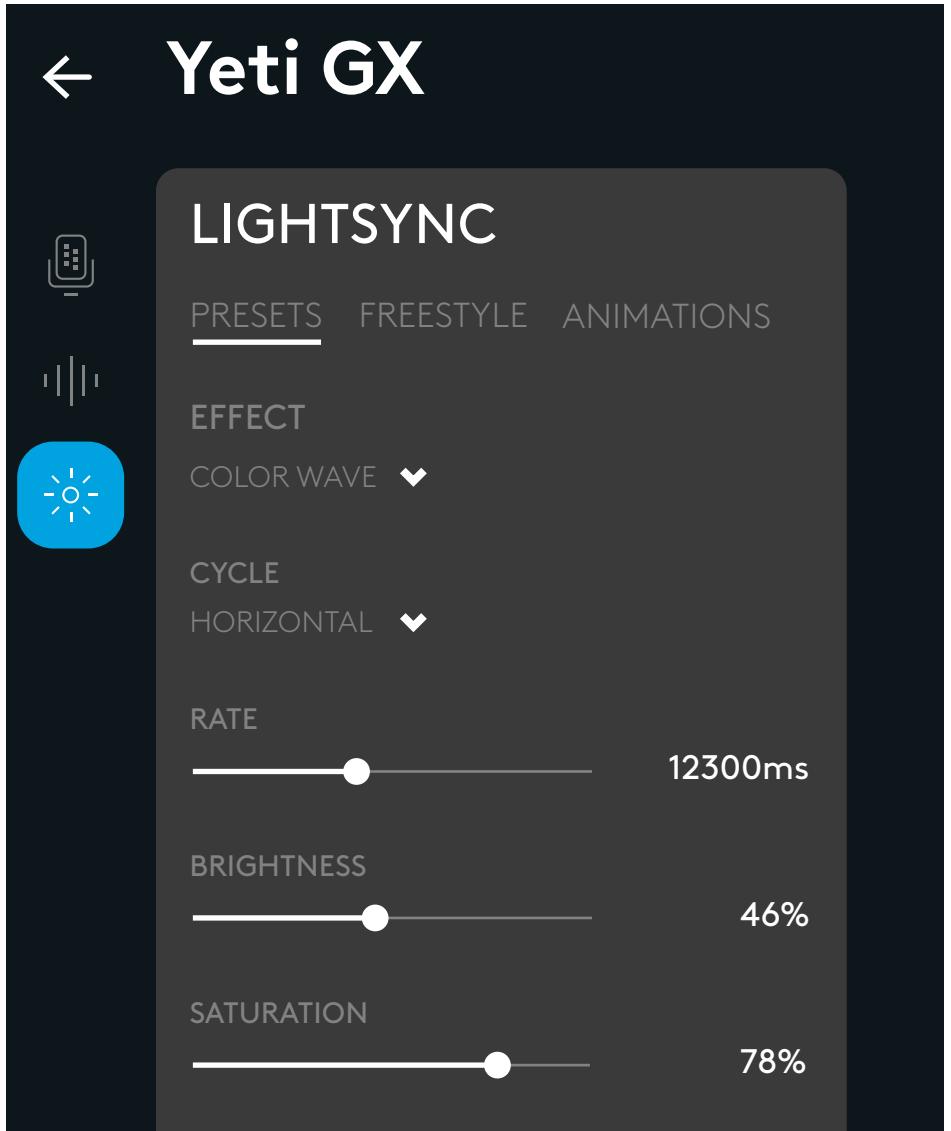



QUESTIONS?

logitechG.com/support/yeti-gx


设置说明

设置 1

- 将新的 Yeti GX 麦克风安装至随附的桌面支架或悬臂。
- 将线缆的 *USB-C* 端插入底部的端口。

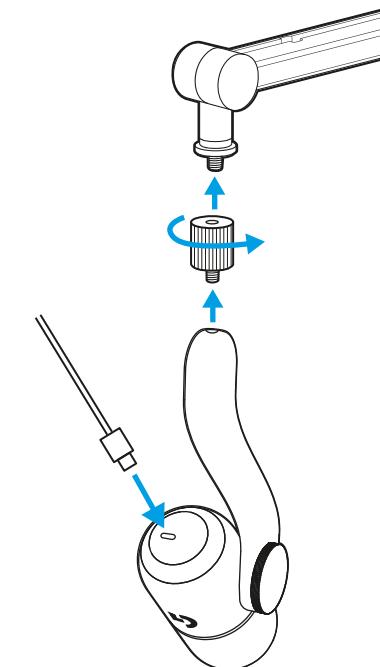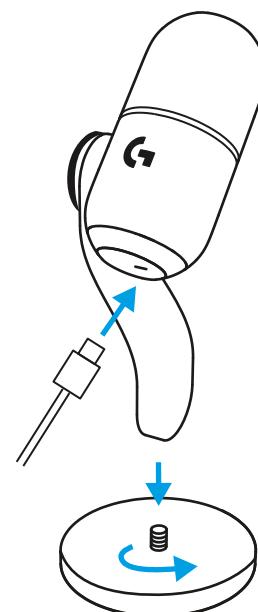



- 将线缆的 *USB A* 端插入电脑。

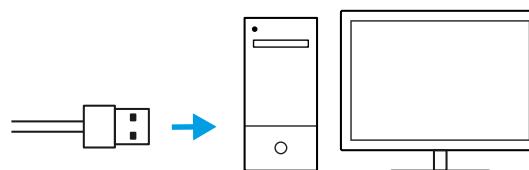

设置 2

重要提示!

确保将防风罩的平面部分朝向您!

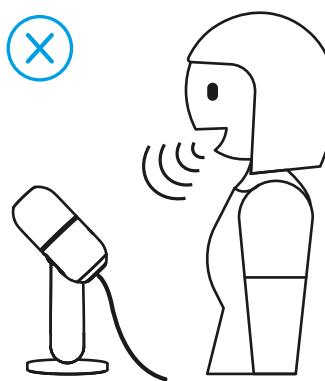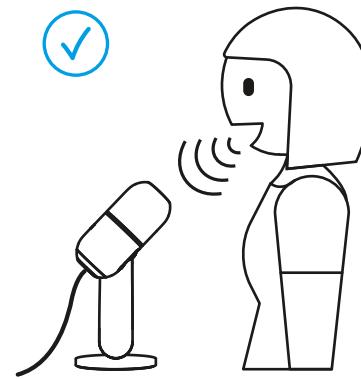


设置 3

- 打开任何支持音频配置的直播或录制软件。



- 在软件设置中, 您可能需要选择 Yeti GX 作为激活的麦克风。

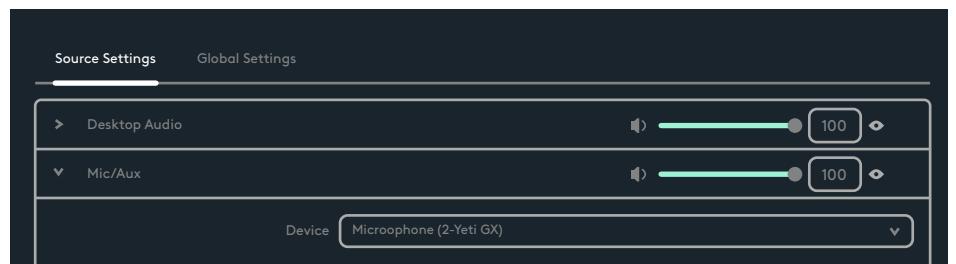


设置 4

滚轮可用来调节麦克风增益。

当您在直播或录制时以正常音量讲话时, 可以滚动滚轮来调节增益。


向上滚动滚轮将增加增益, 向下滚动滚轮将减少增益。

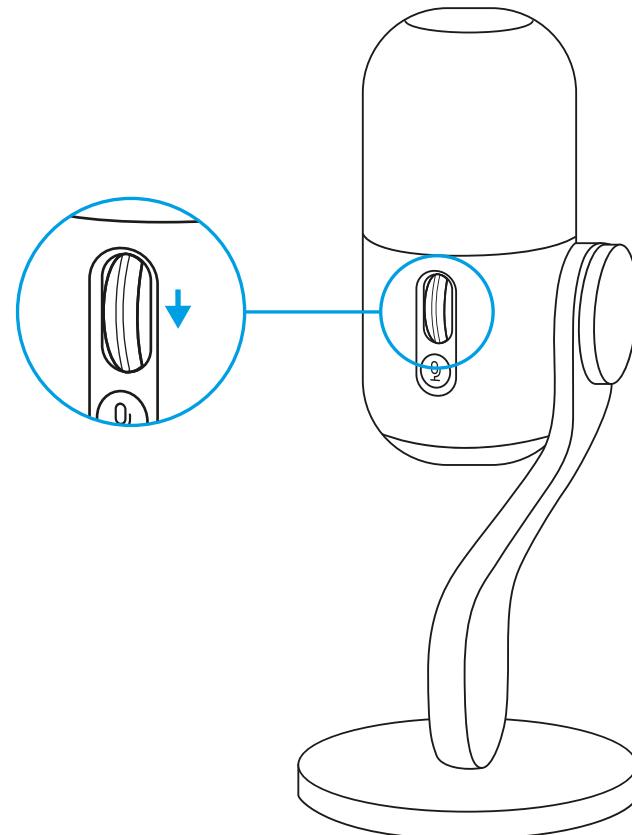


设置 5

滚轮上的 LED 指示灯还可指示麦克风是否正在使用。


- 常亮白色表示麦克风已开启。

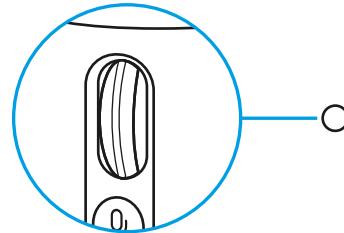


- 常亮绿色表示麦克风正在主动传送音频。

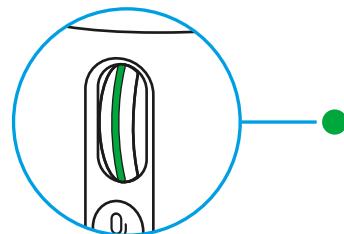

- 闪烁红色表示增益级别过高并导致削波或失真, 此时最好将其调低。

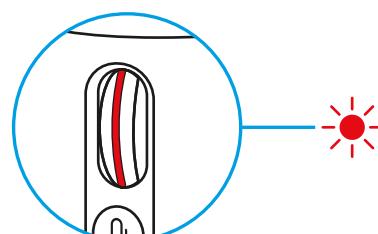

- 常亮红色表示麦克风已静音, 按下滚轮旁的静音按钮可以静音或取消静音。

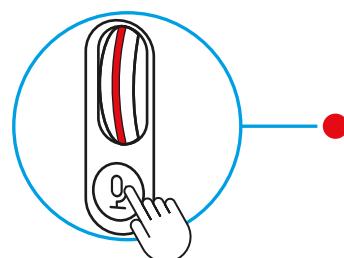


设置 6

设置完增益设置后, 点按滚轮以启用智能音频锁。启用后, 滚轮的 LED 将变为青色。

智能音频锁: 使用模拟限制器防止削波, 通过下行扩展器减少环境背景噪音, 智能调整增益。

启用后, 滚轮将无法再改变增益。在进行任何更改之前, 需再次点按滚轮以解锁。

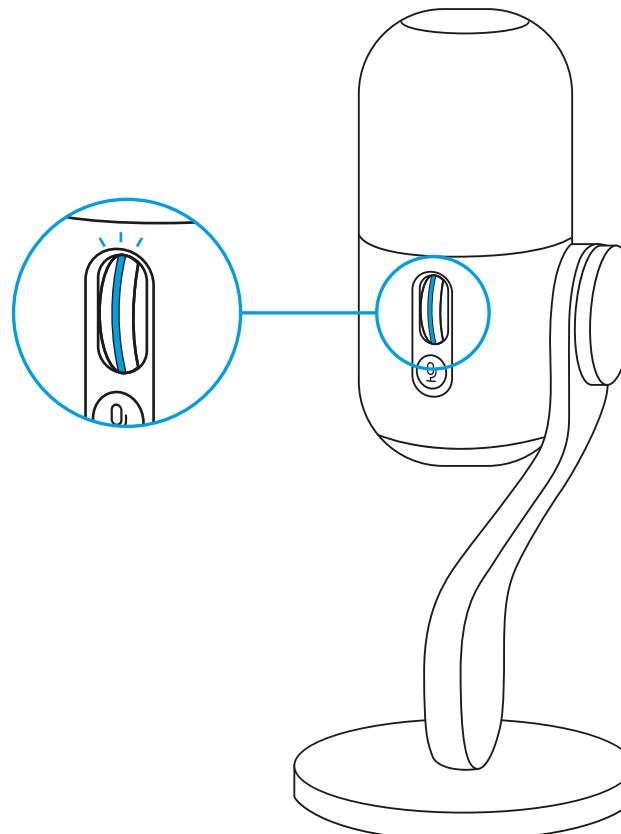

设置 7

下载 G HUB 以获得完整的设置及自定义音频和灯光设置的能力。



logitechG.com/ghub

设置 8


- 在 G HUB 中点选麦克风菜单可访问 BlueVoice 预设、效果以及均衡器和降噪等处理功能。您还可以在此屏幕中启用智能音频锁。



- 要尝试不同的设置, 首先录制您的声音采样, 然后选择播放。随后您将听到您刚才使用当前 BlueVoice 设置录制的声音。您可以在此处应用不同的预设、设置和效果。您所做的任何更改均将应用于录制中, 以便您准确听到观众们能听到的效果。



- 在 GHub 中点选 LIGHTSYNC 菜单可自定义 RGB 灯环和 G 徽标的灯光。
- 可以从简单的预设中选择, 也可以使用自由光效和动画效果选项卡进行完全自定义。

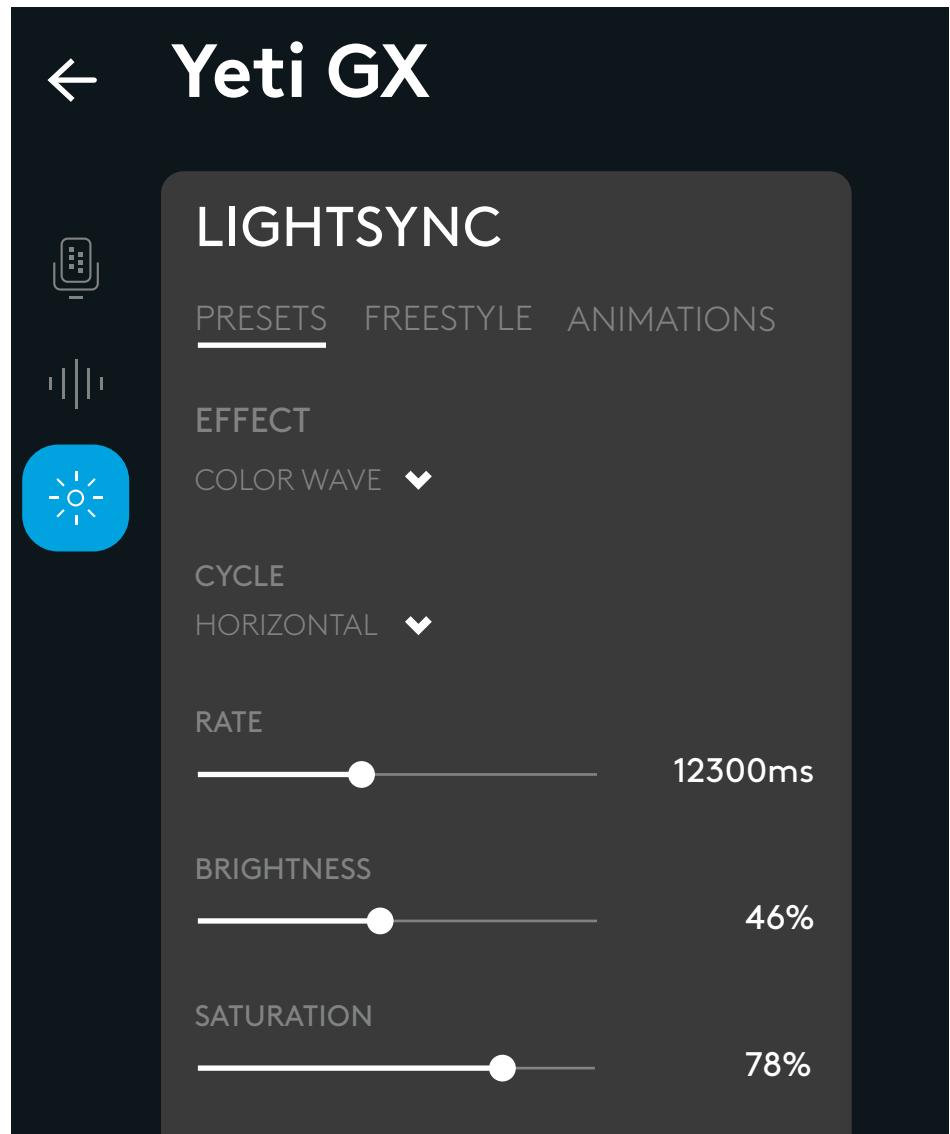

遇到问题?

logitechG.com/support/yeti-gx



logitech 罗技

©2023 Logitech. Logitech, Logitech G, Logi and their respective logos are trademarks or registered trademarks of Logitech Europe S.A. and/or its affiliates in the U.S. and other countries. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Logitech is under license.

版权所有 © 2023 罗技。罗技、罗技 G、Logitech、Logitech G、Logi 及其各自标志为罗技欧洲公司和/或其在美国及其他国家和/或地区附属公司的商标，并或已注册。所有其它商标均是其各自所有者的财产。罗技对于本手册中可能出现的任何错误不承担任何责任。本手册中包含的信息如有更改，恕不事先通知。蓝牙™ 文字商标和标志为 Bluetooth SIG, Inc. 所有的注册商标，罗技对此类商标和标志的所有使用均已获得授权。

WEB-621-002454 002