

G517 LIGHTSPEED TKL

LIGHTSPEED Gaming Keyboard

LIGHTSPEED 游戏键盘



SETUP GUIDE | 设置指南






ENGLISH 3

简体中文 10

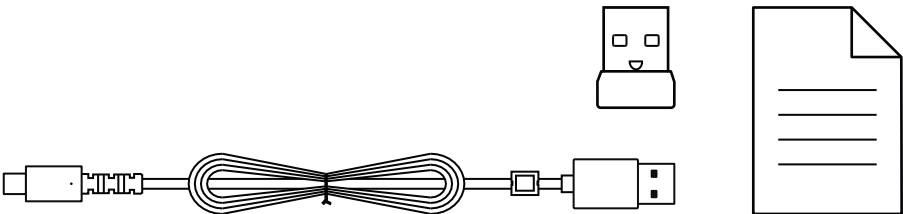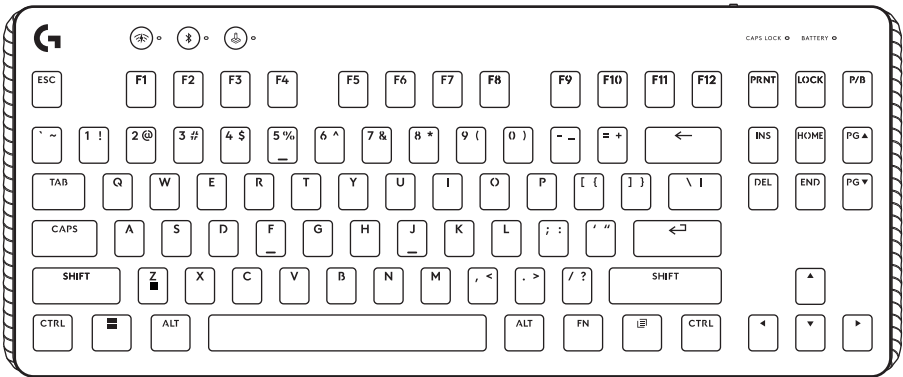


SETTING UP


- 1 Remove the LIGHTSPEED Receiver from the storage slot.

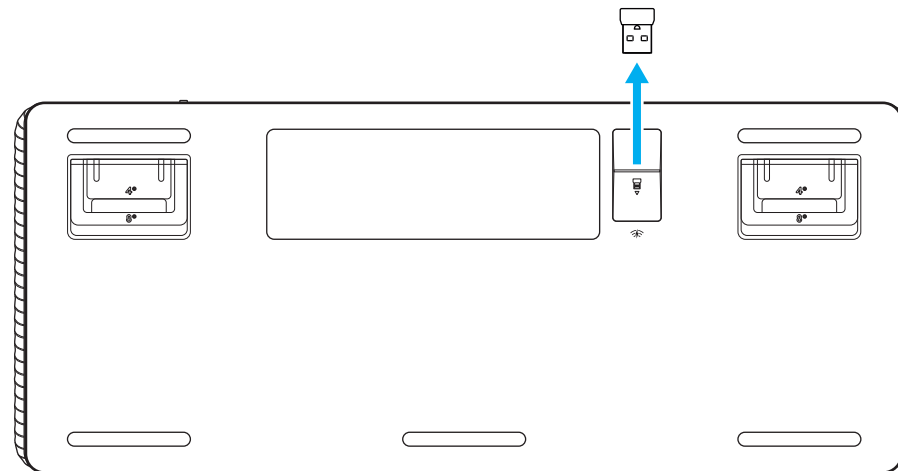


- 2 Insert the USB port directly to USB port.

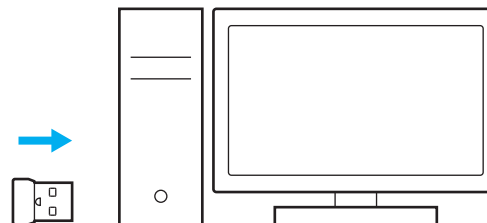


3 Turn on the keyboard by sliding the power button.

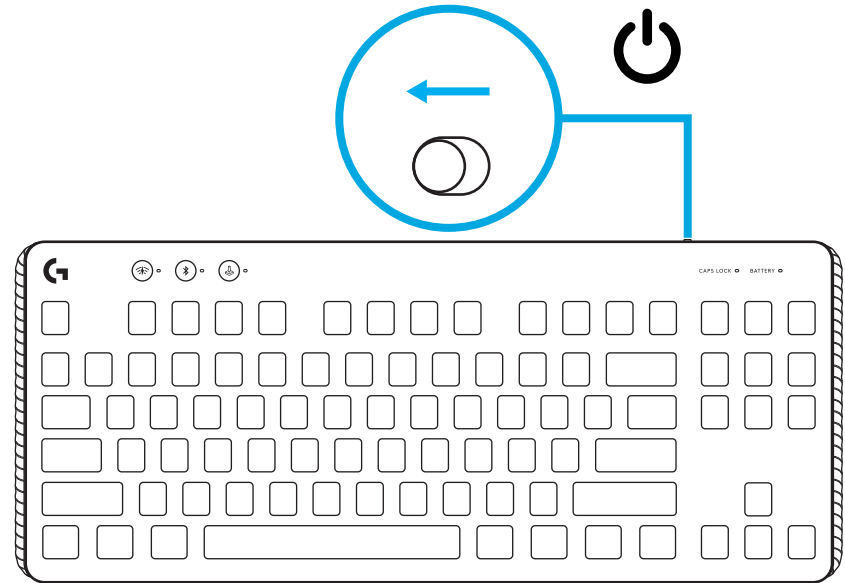

The LIGHTSPEED button will light up to a cyan color.

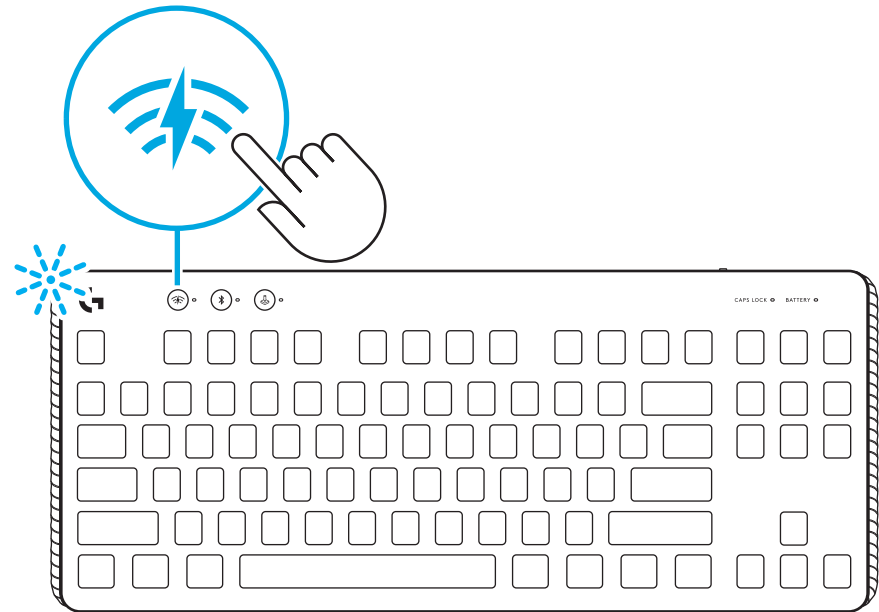


- 4** Download and install G HUB software to your PC/MAC for the best gaming experience (G HUB has onboarding story for features). Go to www.logitechG.com/ghub

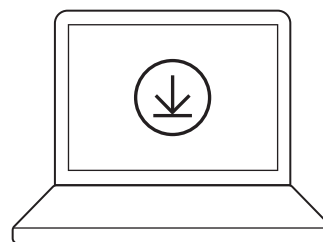


logitechG.com/ghub

BLUETOOTH® CONNECTION


- 1** Turn on the keyboard by sliding the button.

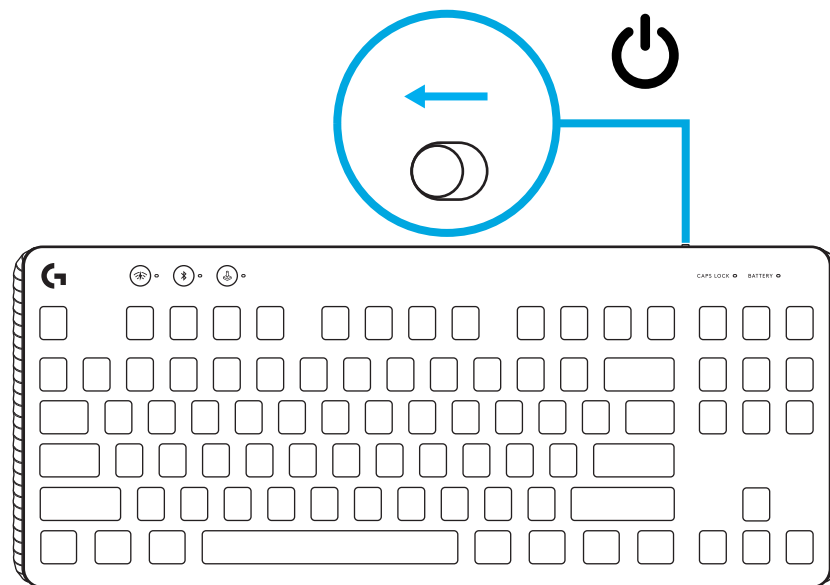




- 2** Press the *Bluetooth* button, it will turn to light blue and flash quickly.

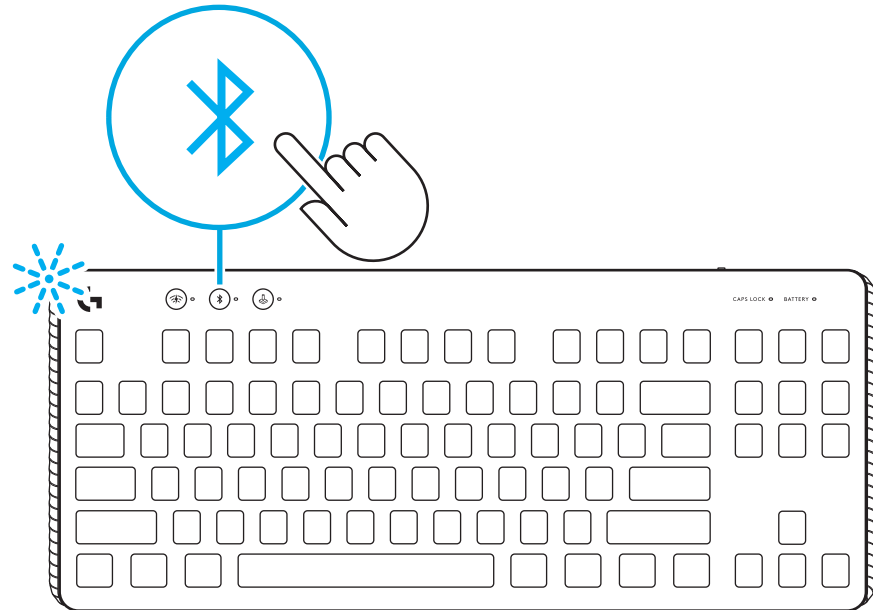


- 3** Waiting to pair. Follow *Bluetooth* connection for your device to pair with the keyboard.

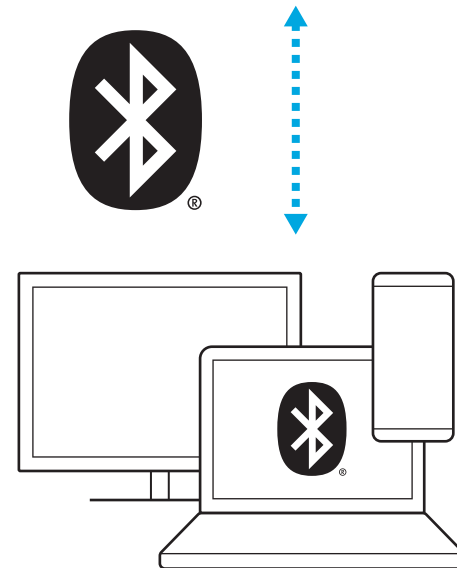

- 4** Enter the number from your PC/Laptop to pair your keyboard.

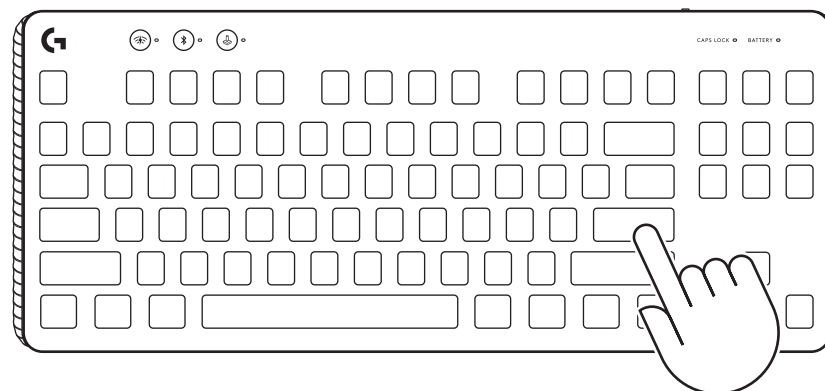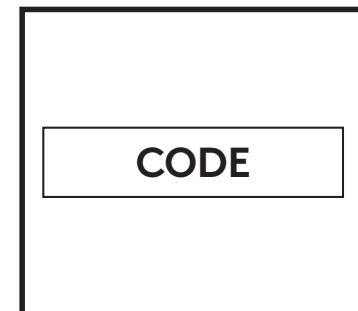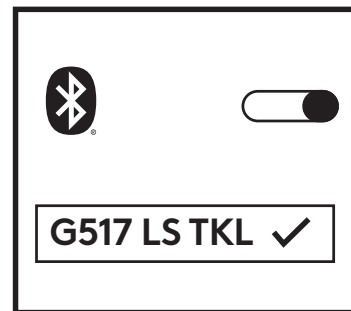

- 5** Download and install G HUB software to your PC/MAC for the best gaming experience (G HUB has onboarding story for features). Go to www.logitechG.com/ghub

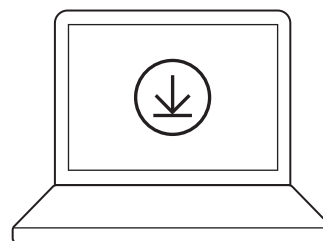


[logitechG.com/ghub](https://www.logitechG.com/ghub)

GAME MODE

Pressing the Game mode button blocks the *Windows* and *Menu* keys when pressed.

Additional keys can be blocked using G HUB software.

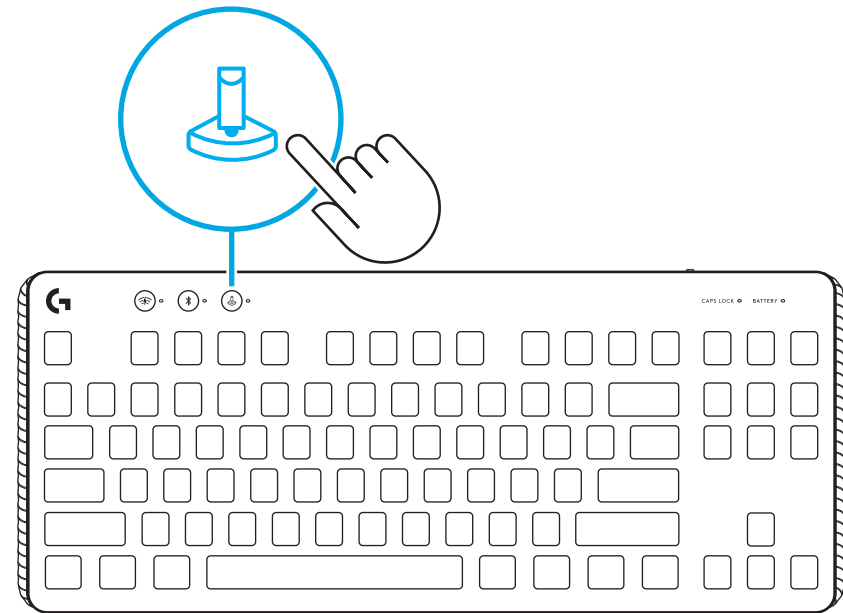

FULL KEY CUSTOMIZATION

Use FN+F1 to activate your keycontrol, then you can start to use the Remap key you have assigned in the G Hub.



FN CONTROL

Media Controls


FN + F8	Brightness Control (5 Level Rotation)
FN + F9	Play/Pause
FN + F10	Stop
FN + F11	Previous Track
FN + F12	Next Track
FN + PRNT	Mute
FN + LOCK	Volume down
FN + P/B	Volume Up

Lighting Brightness Control


FN + F8	Brightness Degree
-------------------------------	-------------------

设置


- 1 从收纳槽中取出 LIGHTSPEED 接收器。

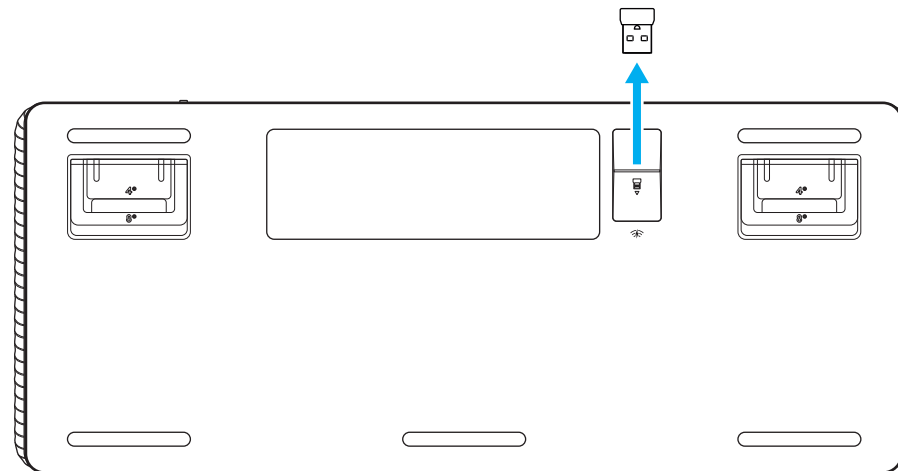


- 2 将 USB 直接插入 USB 端口。

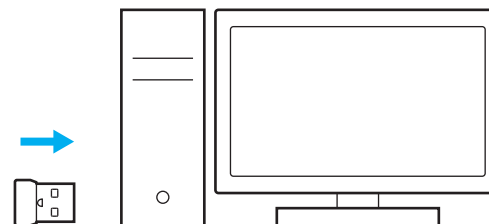


3 拨动电源按钮, 打开键盘。

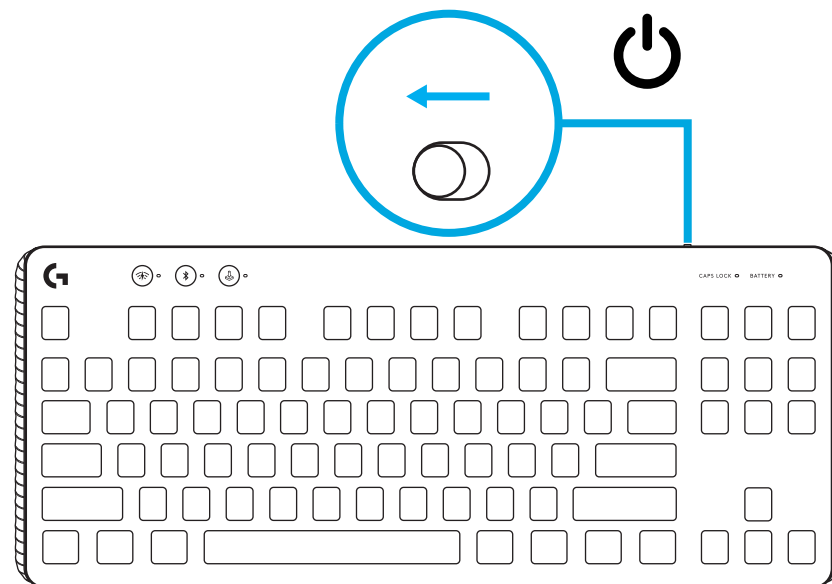

LIGHTSPEED 按钮将亮起蓝绿色。

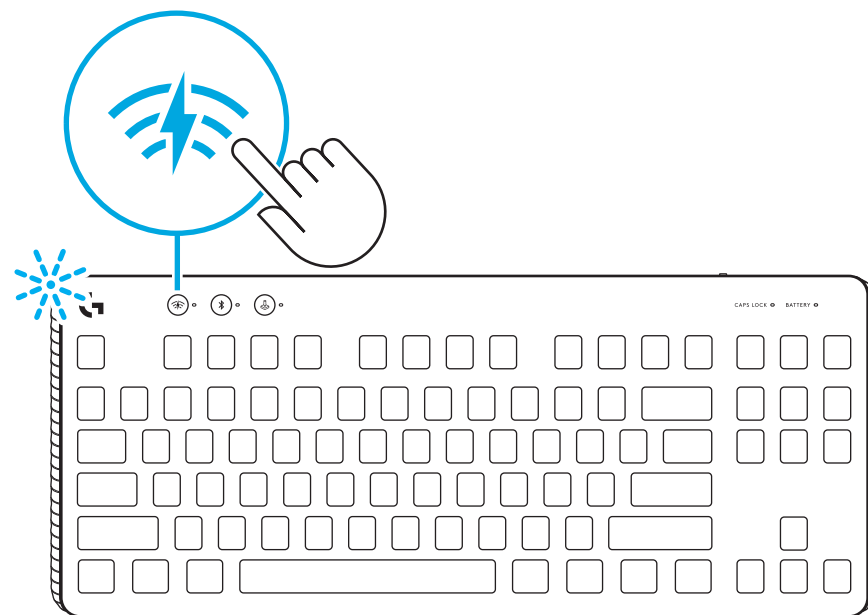


- 4** 下载 G HUB 软件并安装到 PC/MAC, 获得出色的游戏体验 (G HUB 包含有关各项功能的入门介绍)。访问 www.logitechG.com/ghub

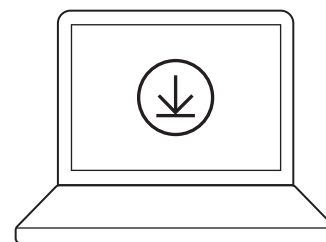


logitechG.com/ghub

蓝牙™连接


- 1** 拨动按钮, 打开键盘。

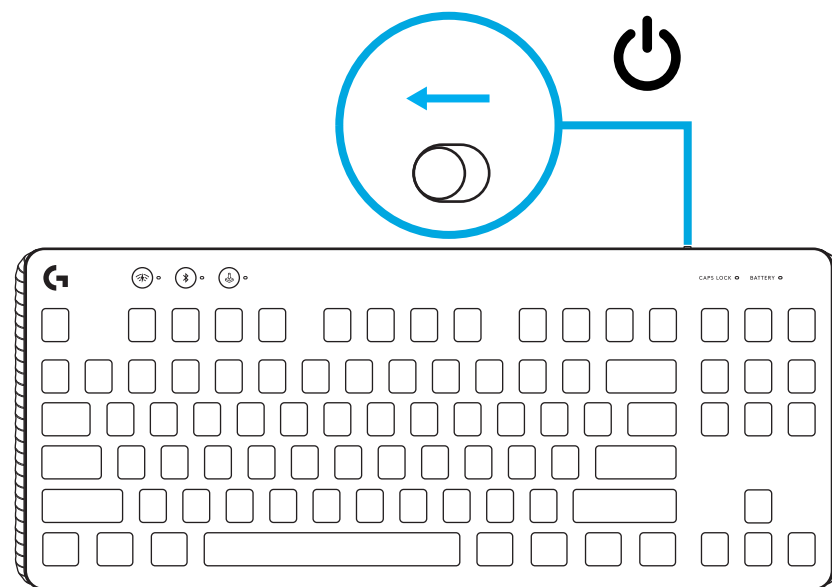



2 按下蓝牙按钮, 按钮将亮起蓝色并快速闪烁。

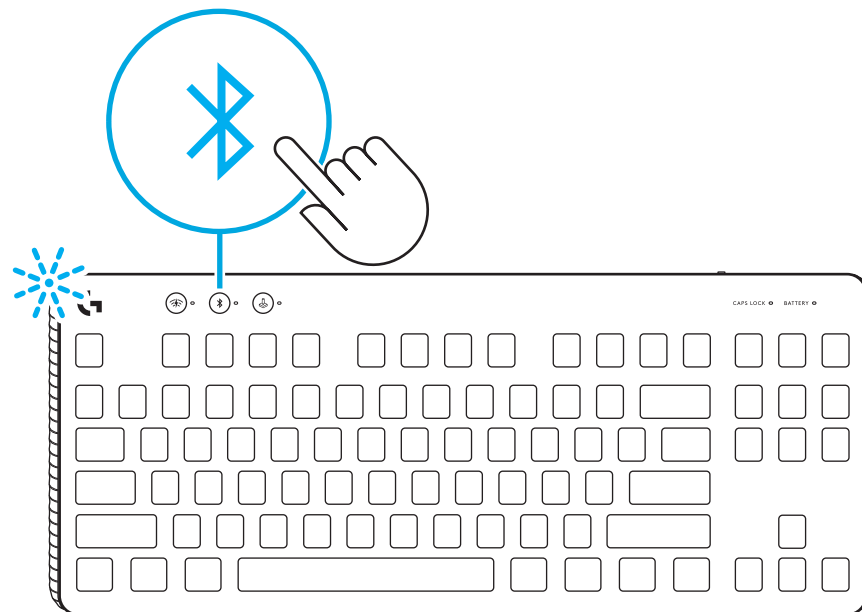


3 等待配对。按照蓝牙连接步骤操作, 将设备与键盘配对。

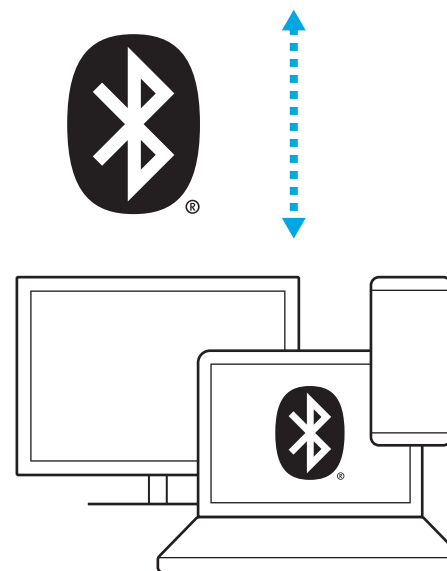

4 输入 PC/笔记本电脑上显示的数字, 配对键盘。

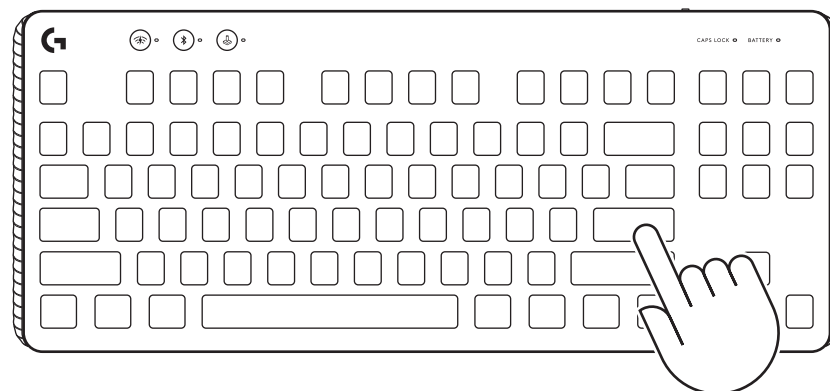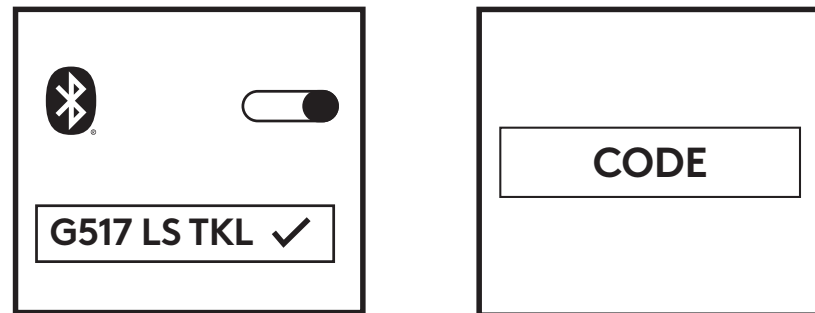


5 下载 G HUB 软件并安装到 PC/MAC, 获得出色的游戏体验 (G HUB 包含有关各项功能的入门介绍)。访问 www.logitechG.com/ghub

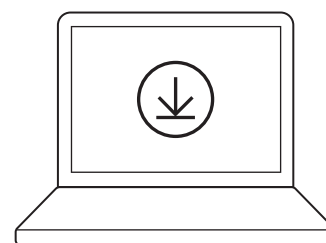

logitechG.com/ghub

游戏模式

按下游戏模式按钮后会阻止 *Windows* 和菜单键功能。
可以使用 **G HUB** 软件阻止其他按键。

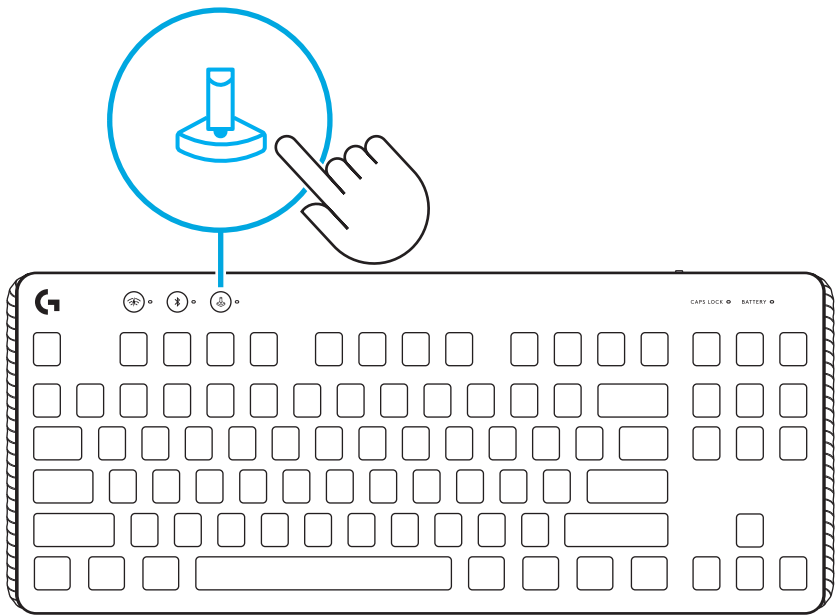

全键自定义

使用 **FN+F1** 激活 **keycontrol**, 然后您就可以开始使用在 **Ghub** 中分配好的重映射按键了。

 + 	激活全键自定义布局
---	-----------

FN 控制

媒体控制

FN + F8	亮度控制 (5 级循环)
FN + F9	播放/暂停
FN + F10	停止
FN + F11	上一曲目
FN + F12	下一曲目
FN + PRNT	静音
FN + LOCK	音量下降
FN + P/B	音量上升

灯光亮度控制

FN + F8	亮度级别
-------------------------------	------



© 2024 Logitech. Logitech, Logitech G, Logi and their respective logos are trademarks or registered trademarks of Logitech Europe S.A. and/or its affiliates in the U.S. and other countries. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice. The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Logitech is under license.

版权所有 © 2024 Logitech。罗技、罗技 G、Logitech、Logitech G、Logi 及其各自标志为罗技欧洲公司和/或其在美国及其他国家/地区附属公司的商标，并或已注册。所有其它商标均是其各自所有者的财产。罗技对于本手册中可能出现的任何错误不承担任何责任。本手册中包含的信息如有更改，恕不事先通知。蓝牙™ 文字商标和标志为 Bluetooth SIG, Inc. 所有的注册商标，罗技对此类商标和标志的所有使用均已获得授权。图片仅作说明之用，可能与实物有所差别。

WEB-621-002563 002