



iPod Compatibility
November 2007

	iPod nano (3G)	iPod classic	iPod touch	iPhone	(nano 1G/2G, mini, iPod 4G, iPod video) Older iPods
Pure-Fi Elite					
AudioStation	Use tray included with your iPod nano	Trays included with speaker 80GB: Use tray #9 160GB: Use tray #10	Use tray included with your iPod touch	A tray must be purchased from Apple*	Trays included with speaker
Pure-Fi Anywhere					
AudioStation Express / Pure-Fi Express					
mm50	Use 'thin' adapter	80GB: Use 'thin' adapter 160GB: Use without any adapter	Use 'thin' adapter	Use 'thin' adapter*	Adapters included with speaker
mm32	iPod must be used outside of cradle	Use tray for full-sized iPods	iPod must be used outside of cradle	For charging, use tray for full-sized iPods For audio, 3rd party adapter is required	Trays included with speaker
FreePulse Wireless	Use iPod nano adapter plate	80GB: Use '5G 30GB' adapter plate 160GB: Use '5G 60GB' adapter plate	Use '5G 30GB' adapter plate	No adapter plate necessary	Adapters included with headphones
X-240 PC speaker	Use adapter plate for iPod nano (1G)	Use adapter plate for full-sized iPods	iPod must be used outside of cradle	Use adapter plate for full-sized iPods	Adapters included with speaker

Other PC speakers

All PC speakers work with all iPods. Plug the source cable into the iPod headphone jack.
(For iPhone, a 3rd party adapter is required.*)

* When you connect your iPhone to a speaker with an iPod dock, your iPhone will present you with the option to go into Airplane Mode, which turns off the communication capability of the iPhone while it's connected to the speaker. If you choose not to enter Airplane Mode, you can make and receive calls, but you may experience some occasional audio interference while listening to music.