logitech®

REFERENCE GUIDE
Logitech GROUP

STARTING A VIDEO CALL
You must connect to a computer to use this device!

1 CONNECT
Connect the USB cable to your computer. The camera and speakerphone will flash to show USB connection.
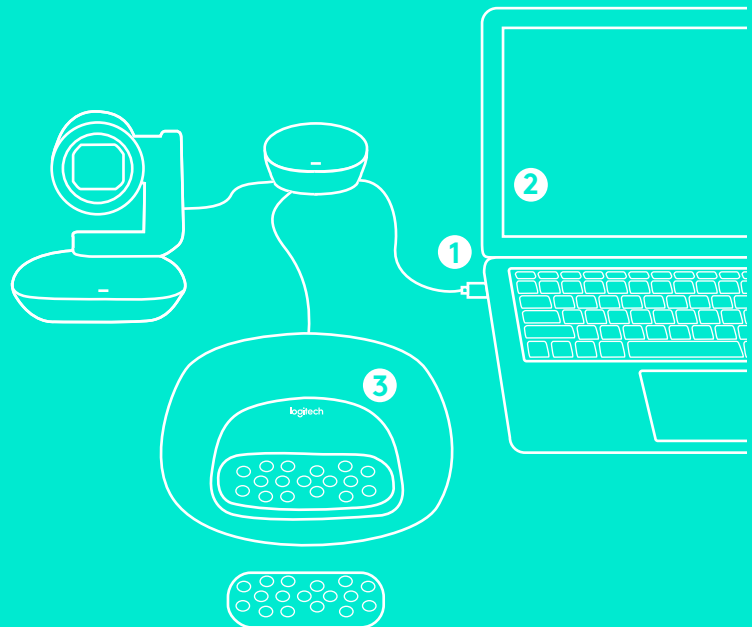
Optional: connect an external monitor or projector to your computer.

2 START
Start your video application, ensuring that Logitech GROUP is selected as the camera, microphone and speaker in the application options.

3 GO
The activity light is blue on the speakerphone when video and audio are streaming.

ACTIVITY LIGHT

Blue: In an active call

Blinking Blue: Incoming call

Blinking Blue in Call: Call has been put on hold from within application

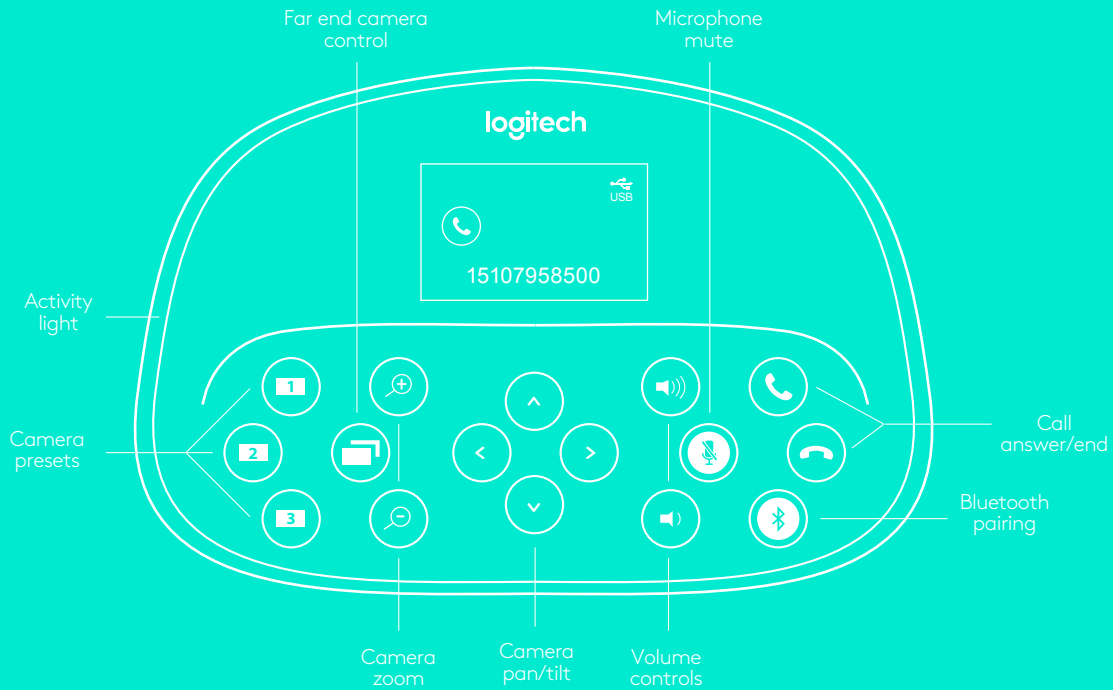**Red:** Audio is muted

Bluetooth® VOICE CALLS

Hold down the *Bluetooth* button until the blue LED on the speakerphone starts blinking. Go to Settings on your mobile device and complete the pairing. When paired, the *Bluetooth* icon on the LCD will appear brighter[1].

CALL ACTIVITY ON THE SPEAKERPHONE DISPLAY

The LCD will display call activity as well as volume and connectivity status. Caller ID and call duration depend on application support. Please see www.logitech.com/Group for further information.

REFERENCE GUIDE
Logitech GROUP

Far end camera control

Microphone mute

logitech

USB

15107958500

Activity light

Camera presets

Call answer/end

Bluetooth pairing

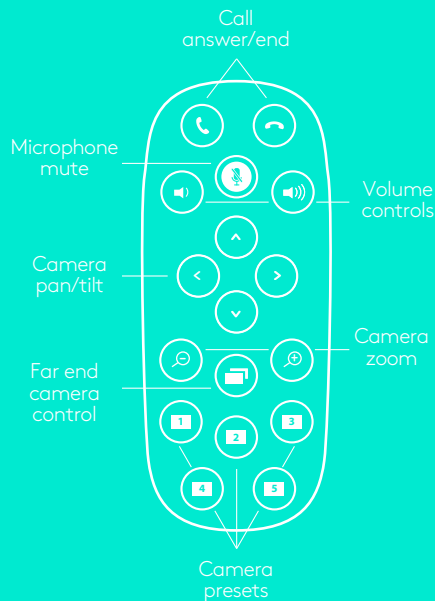Camera zoom

Camera pan/tilt
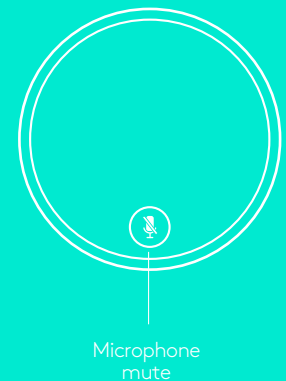
Volume controls

CONTROLS

Camera Presets

Press and hold these buttons to define new camera preset positions. The camera will return to this position by pressing the button once. You can change the preset positions at any time by repeating this step. The remote has two extra presets.

Far End Control

Press this button to pan, tilt and zoom a far-end Logitech GROUP, CC3000e, ConferenceCam Connect or BCC950[2]. Press button to toggle between far end and local cameras.

Call answer/end

Microphone mute

Volume controls

Camera pan/tilt

Camera zoom

Far end camera control

Camera presets

Optional expansion microphones

Microphone mute