






Setup Guide
UE 4000



Contents

English.	3
繁體中文	7
한국어	11

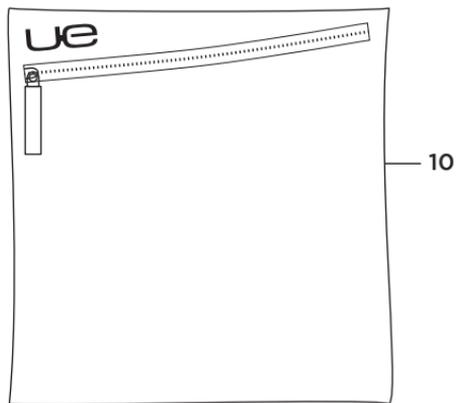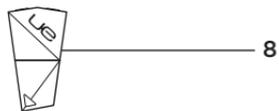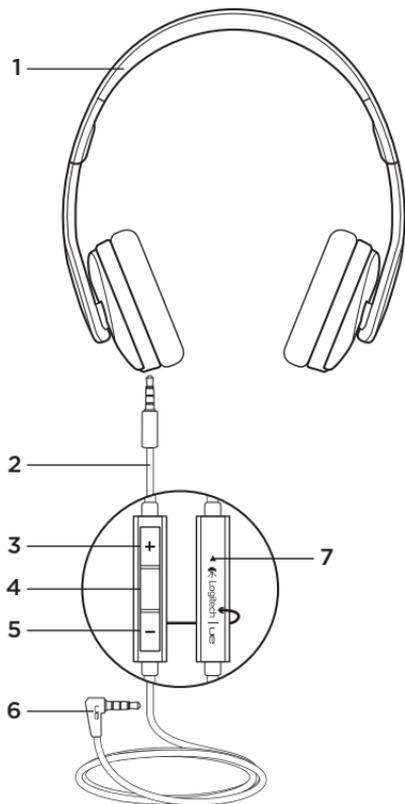


Know your product

1. Headphones
2. Detachable audio cable
3. Volume up
4. Media/calling controls
 - One click:
Play/pause (audio)
Call answer/hang up (phone)
 - Double click:
Next track (audio)
 - Triple click:
Previous track (audio)
 - One click, then click and hold:
Fast forward (audio)
 - Two clicks, then click and hold:
Rewind (audio)
 - Click and hold:
Activate/deactivate voice dial¹
5. Volume down
6. 3.5 mm connector
7. Microphone
8. Sharing adapter
9. Documentation
10. Travel pouch

¹ Function varies by phone. Activates Siri[®] on iPhone[®] 4S.

Set up your product

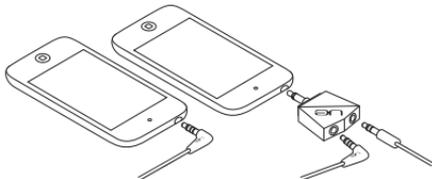

Connect the headphones to a device with a 3.5 mm headphone jack. To share audio (with no voice support), use the Sharing adapter.

Visit Product Central

There's more information and support online for your product. Take a moment to visit Product Central to learn more about your new headphones.

Browse online articles for setup help, usage tips, or information about additional features. If your headphones have optional software, learn about its benefits and how it can help you customize your product.

Connect with other users in our Community Forums to get advice, ask questions, and share solutions.

At Product Central, you'll find a wide selection of content:

- Tutorials
- Troubleshooting
- Support community
- Software downloads
- Online documentation
- Warranty information
- Spare parts (when available)

Go to www.logitech.com/support/ue4000

Troubleshooting

• **No sound or faint sound**

- Fully insert the cable connector into the headphone jack on your device.
- Check the cable attachment to the headphones.
- Try increasing headphone volume.
- Check the volume in your media application.
- Restart your media application.
- Make sure the straight connector is attached to the headphones, and the angled connector is attached to your audio source.

• **Headphones not working with**

a computer Specify audio settings for your operating system:




Windows* (Control Panel)

- Voice playback and recording:
Computer's soundcard
- Sound playback: Computer's speakers

Mac® OS X (Preferences)

- Sound input: Internal microphone
- Sound output: Internal speakers

For more information, go to www.logitech.com/support/ue4000. Also refer to your operating system documentation.

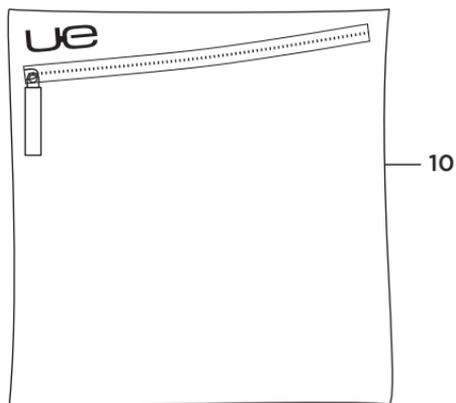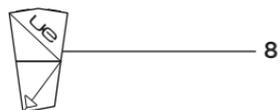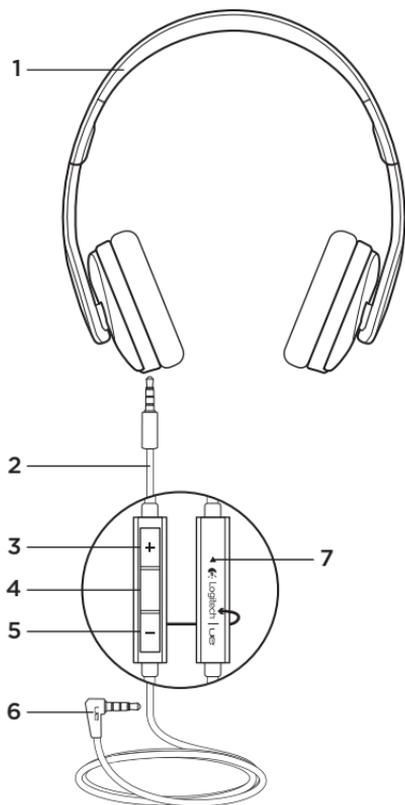


認識產品

1. 耳機
2. 可分離式音訊連接線
3. 音量增大
4. 媒體/通話控制按鈕
 - 按一下：
播放/暫停 (音訊)
接聽/掛斷 (電話)
 - 按兩下：
下一首 (音訊)
 - 按三下：
上一首 (音訊)
 - 按一下，然後按住不放：
快轉 (音訊)
 - 按兩下，然後按住不放：
倒轉 (音訊)
 - 按住不放：
啟用/停用語音撥號¹
5. 音量減小
6. 3.5 mm 接頭
7. 麥克風
8. 分享轉接器
9. 說明文件
10. 旅行隨身包

¹ 功能會視電話而有不同。在 iPhone 4S 上啟用 Siri。

設定產品

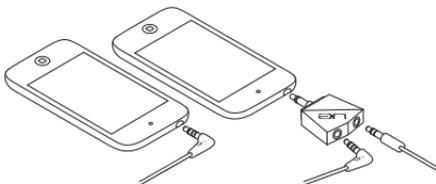

將耳機連接到具有 3.5 mm 耳機插孔的裝置。若要分享音訊 (支援無語音功能)，請使用分享轉接器。

造訪產品中心

您的產品還有更多產品相關資訊與支援。請抽空造訪「產品中心」，深入瞭解您的新耳機。

請瀏覽線上文章，瞭解設定說明、使用秘訣，或是其他功能的相關資訊。如果您的耳機隨附選用軟體，您可以深入瞭解軟體優點及該軟體如何協助您自訂產品。

您還可以和「社群論壇」中的其他使用者保持聯繫以獲得建議、提出問題，以及分享解決方案。

「產品中心」提供各式各樣的精采內容：



- 教學課程
- 疑難排解
- 支援社群
- 軟體下載
- 線上文件
- 保固資訊
- 備用零件 (如有提供時)

請瀏覽 www.logitech.com/support/ue4000

疑難排解

- 沒有聲音或聲音微弱
 - 將耳機纜線完全插入裝置的耳機插孔。
 - 檢查連接到耳機的連接線。
 - 嘗試提高耳機音量。
 - 檢查媒體應用程式中的音量設定。
 - 重新啟動媒體應用程式。
 - 確認直式接頭連接到耳機，而且有角度的接頭連接到音源。
- 耳機不能與電腦搭配使用 指定您作業系統的音訊設定：
 - Windows® (控制台)**
 - 語音播放和錄音：電腦的音效卡
 - 音效播放：電腦的音箱
 - Mac® OS X (偏好設定)**
 - 聲音輸入：內部麥克風
 - 聲音輸出：內部音箱

如需詳細資訊，請瀏覽 www.logitech.com/support/ue4000。也請參閱您作業系統的說明文件

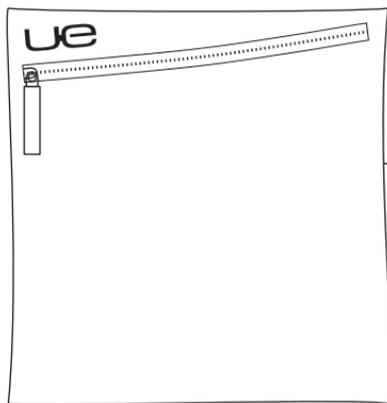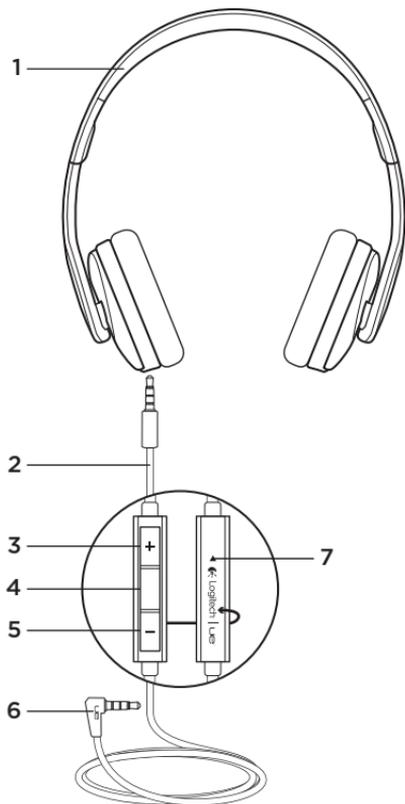


제품 설명

1. 헤드폰
2. 분리 가능 오디오 케이블
3. 볼륨 높이기
4. 미디어/통화 컨트롤
 - 한 번 클릭:
재생/일시 중지(오디오)
전화 받기/끊기(휴대폰)
 - 두 번 클릭:
다음 트랙(오디오)
 - 세 번 클릭:
이전 트랙(오디오)
 - 한 번 클릭한 다음 길게 클릭:
고속 감기(오디오)
 - 두 번 클릭한 다음 길게 클릭:
되감기(오디오)
 - 길게 클릭:
음성 다이얼 활성화/비활성화¹
5. 볼륨 줄이기
6. 3.5mm 커넥터
7. 마이크
8. 공유 어댑터
9. 설명서
10. 휴대용 파워치

¹ 기능은 휴대폰마다 다릅니다. iPhone 4S에서 Siri[®]를 활성화합니다.

제품 설정

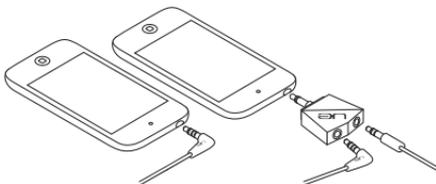

3.5mm 헤드폰 잭을 사용하여 장치에 헤드폰을 연결합니다. 오디오를 공유하려면(음성 지원 없이) 공유 어댑터를 사용하십시오.

Product Central 방문

온라인상에서 제품에 대한 추가 정보와 지원을 확인할 수 있습니다. Product Central에는 헤드폰에 관한 자세한 내용이 나와 있습니다.

설정 도움말, 사용 팁 또는 추가 기능에 관한 정보를 온라인을 통해 찾아 볼 수 있습니다. 사용 중인 헤드폰에 옵션 소프트웨어가 있는 경우, 해당 소프트웨어의 이점과 소프트웨어를 사용한 제품 커스터마이징 방법을 알아 보십시오.

커뮤니티 포럼에서 다른 사용자들과 교류하면서 질문과 조언을 교환하고 솔루션을 공유할 수 있습니다.

Product Central에서는 다음과 같은 폭넓은 내용을 선택할 수 있습니다.

- 사용 지침
- 문제 해결
- 지원 커뮤니티
- 소프트웨어 다운로드
- 온라인 문서
- 보증 정보
- 예비 부품(해당되는 경우)

참조: www.logitech.com/support/ue4000

문제 해결

- 소리가 잘 들리지 않거나 소리가 전혀 나지 않는 경우
 - 장치의 헤드폰 잭에 케이블 커넥터를 완전히 삽입합니다.
 - 헤드폰과 케이블 연결을 확인합니다.
 - 헤드폰 볼륨을 높여 봅니다.
 - 미디어 응용 프로그램에서 볼륨을 확인합니다.
 - 미디어 응용 프로그램을 다시 시작합니다.
 - 일자형 커넥터가 헤드폰에 연결되어 있고 앵글 커넥터가 오디오 소스에 연결되어 있는지 확인하십시오.
 - 헤드폰이 컴퓨터에서 작동하지 않는 경우 운영 체제의 오디오 설정을 지정합니다.
 - Windows*(제어판)**
 - 음성 재생 및 녹음: 컴퓨터의 사운드 카드
 - 소리 재생: 컴퓨터의 스피커
 - Mac® OS X(기본 설정)**
 - 사운드 입력: 내장 마이크
 - 사운드 출력: 내장 스피커
- 자세한 내용은 www.logitech.com/support/ue4000을 참조하십시오. 운영 체제 설명서도 참조하십시오.

 Logitech | ue



N231

VI Cable | Made in China
Cable VI | Fabriqué en Chine



P/N: 889-000026
M/N: A-00046





POWER TO THE MUSIC™

LogitechUE.com

© 2012 Logitech. All rights reserved. Logitech, the Logitech logo, power to the music and other Logitech marks are owned by Logitech and may be registered. Apple, iPhone, Mac, the Mac logo, and Siri are trademarks of Apple Inc., registered in the U.S. and other countries. Microsoft, Windows Vista, Windows, and the Windows logo are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

620-004132.003