



UE® 3600

Setup Guide

设置 指南




UE 3600

English.3

简体中文9

www.logitech.com/support 15

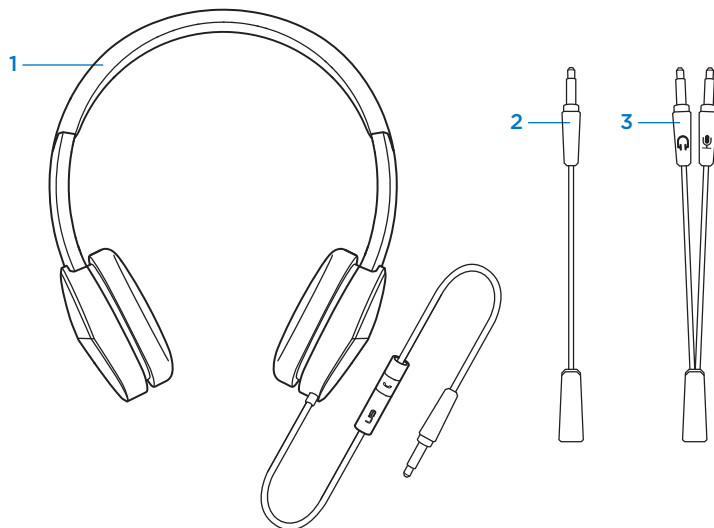


Package contents

1. Headphones with in-line remote
2. Smartphone adapter
3. Y-cable adapter
4. Documentation



Know your product

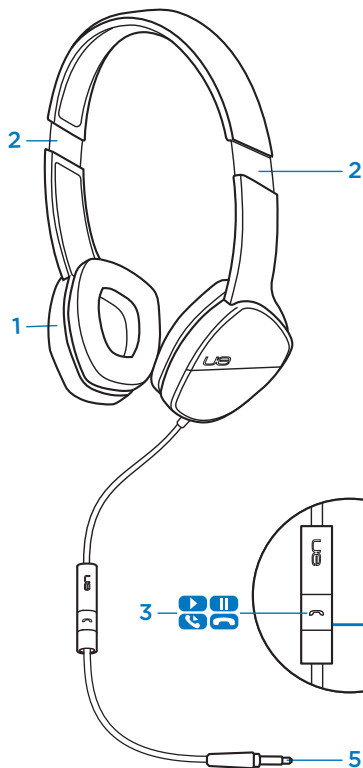


1. Headphones
2. Adjustable headband
3. Media/calling controls
 - One click: Play/pause (audio source)
 - One click: Call answer/hang up (cellphone)
4. Microphone
5. 3.5 mm audio jack

*Installed software on some devices may prevent feature from working.

Set up your product

Connect the headphones to an audio source (e.g., a smartphone, tablet or music player) with a 3.5 mm audio jack.

1. For most devices, connect the headphones, tablets directly.
2. Use the smartphone adapter if low notes (bass) and voice do not sound full, rich, and present on your smartphone, or if background sounds fade in and out.

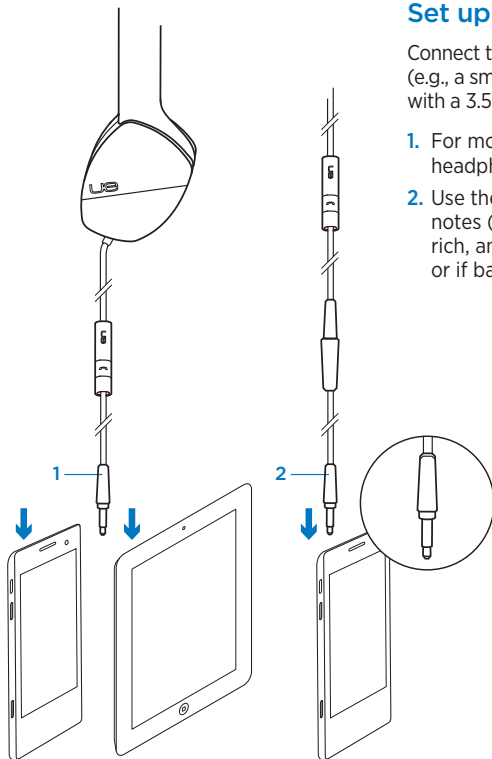


Set up your product

Connect the headphones to an audio source (PC) with a 3.5 mm audio jack.

1. For PCs with headphone and microphone jacks, use the Y-cable adapter to chat or make calls. (Works with most PCs.)

Note: When using the headphones on a PC, the media/calling controls will not work.

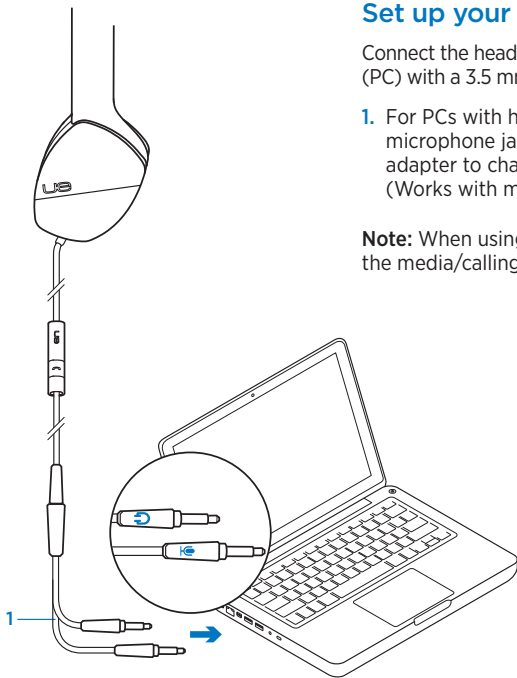

Visit Product Central

There's more information and support online for your product. Take a moment to visit Product Central to learn more about your new Logitech UE headphone.

Browse online articles for setup help, usage tips, or information about additional features.

Connect with other users in our Community Forums to get advice, ask questions, and share solutions.

At Product Central, you'll find a wide selection of content:

- Tutorials
- Troubleshooting
- Support community
- Software downloads
- Online documentation
- Warranty information
- Spare parts (when available)

Go to www.logitech.com/support/ue3600

Troubleshooting

No sound or faint sound

- Check the headphone cable connection to your device.
- Check the volume on your device and in your media application.
- Restart your media application.
- Use the smartphone adapter with your smartphone if low notes (bass) and voice do not sound full, rich, and present or if background sounds are not well mixed and they fade in and out.
- For live chat on PCs with headphone and microphone jacks, use the Y-cable adapter. See “Set up your product.”

Headphones not working with a computer

- Specify audio settings for your operating system:

Mac® OS X Go to System Preferences > Sound:

- **Output tab:** Choose internal speakers. Then adjust Output volume and deselect Mute.
- **Input tab:** Choose internal microphone. Then adjust output volume and deselect mute.

Windows® 7 Go to Start > Control Panel > Sound > Playback:


1. Choose your computer's speakers.
2. Go to Properties > Levels, and then:
 - Adjust volume for speakers and deselect mute.
 - Adjust volume for microphone and deselect mute.

For more troubleshooting help, go to www.logitech.com/support/ue3600.

What do you think?

Please take a minute to tell us.
Thank you for purchasing our product.

www.logitech.com/ithink

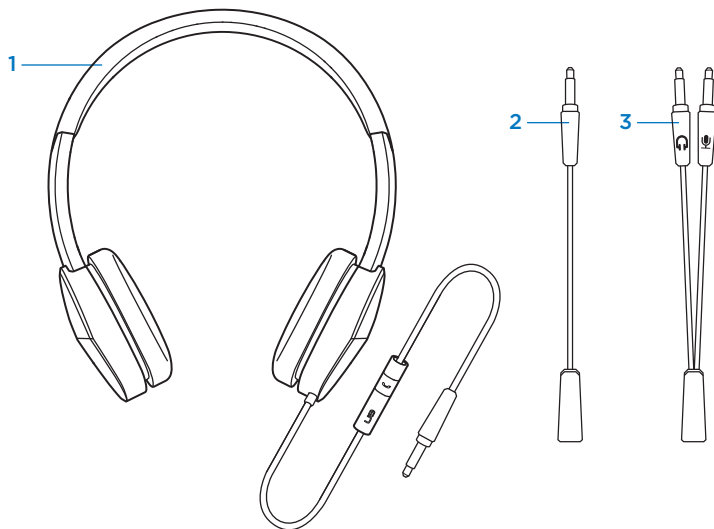


包装内容

1. 耳机及远程线控
2. 智能手机适配器
3. Y 型连接线适配器
4. 文档



了解您的产品

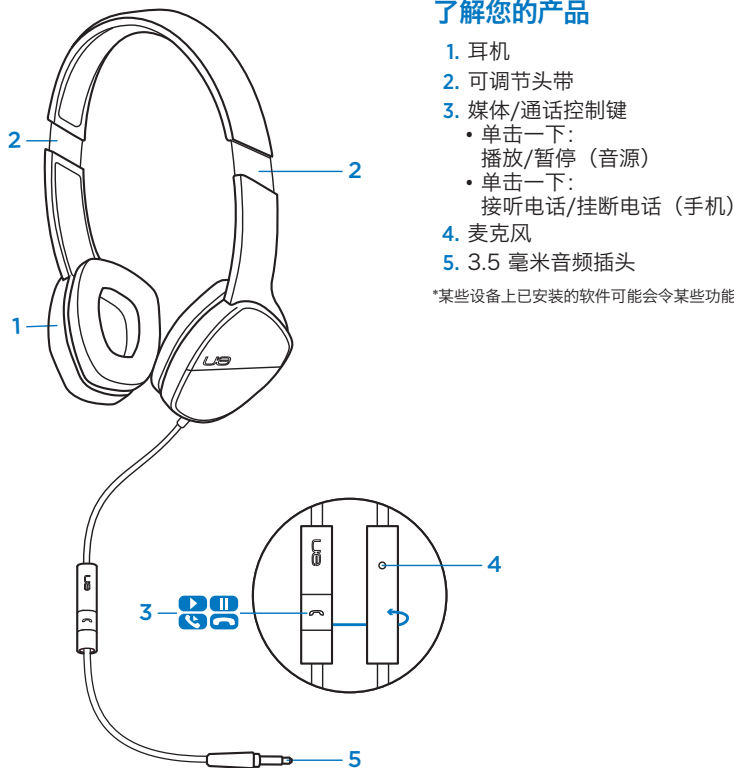


*某些设备上已安装的软件可能会令某些功能失效。

设置您的产品

通过 3.5 毫米音频插头将耳机连接到音源 (如智能手机、平板电脑或音乐播放器)。

1. 对于大多数设备，可直接连接耳机和平板电脑。
2. 如果智能手机的低音和语音不饱满、不圆润和不真实，或者如果背景音若隐若现，请使用智能手机适配器。

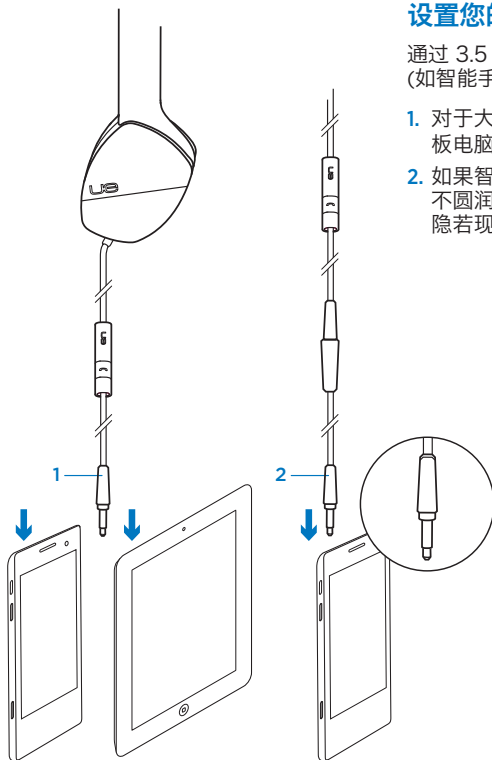


设置您的产品

通过 3.5 毫米音频插头，将耳机连接到音源 (PC)。

1. 带有耳机和麦克风插孔的 PC 可通过 Y 型连接线适配器进行聊天或通话。
(适用于绝大多数 PC。)

注意：在 PC 上使用耳机时，媒体/通话控制键将失效。

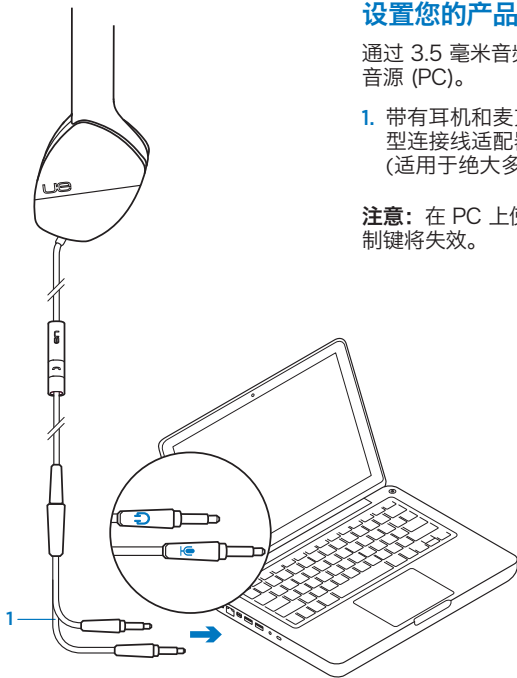

访问“产品中心”

我们的网站提供有关于本产品的详细信息和支持服务。请抽时间访问“产品中心”，了解关于 罗技UE 耳机的更多信息。

浏览在线文章，查看设置帮助、使用技巧或关于更多功能的信息。

通过“社区论坛”与其他用户交流，获得建议，提出问题，分享解决方法。

“产品中心”提供了广泛的内容选择：

- 教程
- 疑难解答
- 支持社区
- 软件下载
- 在线文档
- 保修信息
- 备用部件（若有供应）

访问 www.logitech.com/support/ue3600

疑难解答

没有声音或声音模糊

- 检查耳机线是否已连接到您的设备上。
- 检查设备以及媒体应用程序中的音量。
- 重启多媒体应用程序。
- 如果智能手机的低音和语音不饱满、圆润和真实，或者如果背景音混音效果不佳和若隐若现，请使用智能手机适配器。
- 如要在带有耳机和麦克风插孔的 PC 上进行即时聊天，请使用 Y 型连接线适配器。请参见“设置您的产品”。

耳机在电脑上无法正常工作

- 指定操作系统的音频设置：

Mac® OS X 依次单击“系统偏好设置”>“声音”：

- **“输出”选项卡：**选择内置扬声器。然后调节输出音量，并取消选择静音。
- **“输入”选项卡：**选择内置麦克风。然后调节输出音量，并取消选择静音。

Windows® 7 依次单击“开始”>“控制面板”>“声音”>“播放”：

1. 选择电脑的扬声器。
2. 依次单击“属性”>“级别”，然后：
 - 调节扬声器音量，并取消选择静音。
 - 调节麦克风音量，并取消选择静音。

请访问 www.logitech.com/support/ue3600 获取更多疑难解答的帮助信息。

您对本产品有何感想？

欢迎拨冗告知我们。
感谢您购买罗技产品。

www.logitech.com/ithink

Table of Toxic and Hazardous Substances/Elements and their Content

产品中有毒有害物质或元素的名称及含量
根据中国<<电子信息产品污染控制管理办法>>

Head Set 耳机麦克风						
有毒有害物质或元素						
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电缆 Cable	X	○	○	○	○	○
电路板组件 PWAs	X	○	○	○	○	○
塑料外壳 Plastic enclosure	○	○	○	○	○	○
塑料部件 Plastic parts	○	○	○	○	○	○
金属部件 Metal parts	X	○	○	○	○	○
Speaker 音箱						
有毒有害物质或元素						
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电缆 Cable	X	○	○	○	○	○
电路板组件 PWAs	X	○	○	○	○	○
塑料部件 Plastic parts	○	○	○	○	○	○
木制部件 Wood parts	○	○	○	○	○	○
金属部件 Metallic elements	X	○	○	○	○	○
○ = 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。 X = 表示该有毒有害物质至少在该部件的某一均质的含量超出 SJ/T11363-2006 标准规定的限量要求。 表中标有“X”的所有部件都符合欧盟 RoHS 法规 “欧洲议会和欧盟理事会 2003 年 1 月 27 日关于电子电器设备中限制使用某些有害物质的 2002/95/EC 号指令” 注：环保使用期限的参考标准取决于产品正常工作的温度和湿度等条件						





POWER TO THE MUSIC 音乐的力量之源

www.logitechUE.com.cn

© 2012 Logitech. All rights reserved. Logitech, the Logitech logo, 罗技 and other Logitech marks are owned by Logitech and may be registered. Apple, Mac, and the Mac logo are trademarks of Apple Inc., registered in the U.S. and other countries. Microsoft, Windows, and the Windows logo are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

版权所有©2012 年罗技。罗技、罗技标志、Logitech 和其他罗技商标均归罗技所有，并或已注册。Apple、Mac 和 Mac 图标是 Apple Inc. 在美国和其他国家注册的商标。Microsoft、Windows 和 Windows 标志是 Microsoft 集团公司的商标。所有其它商标均是其各自所有者的财产。罗技对于本手册中可能出现的任何错误不承担任何责任。本手册中包含的信息如有更改，恕不事先通知。

620-004299.004